

x900 Series Switch

AlliedWare™ Operating System

Software Reference for Versions 2.9.1 & 3.2.1



AT-8948
x900-48FE
x900-48FE-N
x900-48FS
AT-9924T
AT-9924SP
AT-9924T/4SP
AT-9924Ts
x900-24XT
x900-24XT-N
x900-24XS

AlliedWare OS Software Reference for Software Versions 2.9.1/3.2.1
Document Number C613-03130-00 REV A.

© 2005-2007 Allied Telesis, Inc. All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

All company names, logos, and product designs that are trademarks or registered trademarks are the property of their respective owners.

Contents

About this Software Reference

Introduction	xlvi
Structure of this Software Reference	xlvi
Intended Audience	xlvi
Conventions	xlvi
Command Descriptions	l
Where To Find More Information	lii
Obtaining Copies of Internet Protocols and Standards	lii
Publicly Accessible Documents	lii
Allied Telesis Offices and Locations	lii
Reader's Comments	lv

Command Summary

CHAPTER 1 Getting Started

Establishing a Management Session with the Switch	1-2
Assigning an IP Address	1-3
Setting Routes	1-3
Checking Connections with PING	1-3
Changing a Password	1-4
Using Command Line Help	1-4
Using GUI Help on AT-9900 Switches	1-4
Special Feature Licences	1-5
Setting System Parameters	1-5
Saving Configurations Entered with the CLI	1-6
Saving Configurations Entered with the GUI on AT-9900 Switches	1-6
Troubleshooting Traffic Flow	1-6
Software Upgrades	1-7
SNMP and MIBs	1-7
To Avoid Problems	1-7
For More Information	1-9

CHAPTER 2 Using the Command Line Interface (CLI)

Introduction	2-2
Parts of a Command	2-2
Entering a Command	2-3
Shortcuts	2-4
Command Sets	2-5
What is Valid Syntax?	2-6
What Commands does a Feature Support?	2-8

Editing Commands	2-9
Recalling Commands	2-10
Command Reference	2-10
add alias	2-10
delete alias	2-11
help	2-12
set command assignmentoperator	2-12
set help	2-13
show alias	2-13
show command history	2-14

CHAPTER 3 **Using the Graphical User Interface (GUI) on AT-9900 Series Switches**

Introduction	3-2
What is the GUI?	3-2
Accessing the Switch via the GUI	3-3
Browser and PC Setup	3-3
Establishing a Connection to the Switch	3-5
Secure Access	3-9
System Status Details	3-10
Using the GUI: Navigation and Features	3-10
The Configuration Menu	3-10
Using Configuration Pages	3-11
The Management Menu	3-13
The Monitoring Menu	3-14
The Diagnostics Menu	3-14
Combining GUI and CLI Configuration	3-14
Troubleshooting	3-15
Enabling and Disabling the GUI	3-15
Deleting Temporary Files	3-15
Accessing the Switch via the GUI	3-16
Configuring the Switch using the GUI	3-17
Using the Default IP Address	3-17
Changing the IP address	3-18
Command Reference	3-19
disable gui	3-19
enable gui	3-19
reset gui	3-20
show gui	3-20

CHAPTER 4 **Configuring and Monitoring the System**

Introduction	4-3
System Identification	4-3
Time and Date	4-4
Timezone and UTC Offset	4-5
Monitoring Switch Operations	4-7
Environmental Monitoring	4-11
Emailing Alerts from the Switch	4-11
Configuration Examples	4-12
Command Reference	4-14
activate cpu extended	4-14
activate system psu test	4-15
clear summertime	4-15
clear timezone	4-16
delete mail	4-16
disable cpu extended	4-17
disable debug active	4-17
disable mail debug	4-18

disable summertime	4-18
dump	4-19
enable cpu extended	4-20
enable summertime	4-21
enable mail debug	4-21
mail	4-22
modify	4-24
reset cpu utilisation	4-25
reset mail	4-25
reset system cpu utilisation	4-25
set mail	4-26
set summertime	4-27
set system contact	4-29
set system coredump	4-30
set system environmental	4-31
set system location	4-32
set system name	4-33
set system time	4-34
set time	4-35
set timezone	4-36
show buffer	4-37
show cpu	4-42
show debug	4-44
show debug active	4-46
show exception	4-50
show mail	4-51
show startup	4-52
show summertime	4-53
show system	4-54
show system boards	4-61
show system coredump	4-62
show system cpu utilisation	4-63
show system debug	4-64
show system environmental	4-65
show system exception	4-70
show system memory	4-71
show system processpartition	4-72
show system serialnumber	4-74
show system startup	4-74
show system time	4-75
show time	4-75
show timezone	4-76

CHAPTER 5 **Managing Configuration Files and Software Versions**

Managing Configuration Files	5-3
Loading Files onto the Switch	5-4
Loading from a Trivial File Transfer Protocol (TFTP) Server	5-5
Loading from a Web Server	5-5
Loading from a Lightweight Directory Access Protocol (LDAP) Server	5-7
Loading from a Remote Device using Secure Copy	5-8
Additional Loader Commands	5-9
Uploading Files from the Switch	5-9
Using HTTP	5-9
Using TFTP and ZMODEM	5-11
Using Secure Copy	5-11
Software Upgrades	5-12
Upgrade Overview	5-13
Install Process	5-13
Filenames	5-14

Licencing	5-15
Patches	5-16
Example: Upgrading to new software	5-17
Example: Upgrading to a new patch file	5-19
Upgrading the GUI on the AT-9900 Switch	5-20
Command Reference	5-22
create config	5-22
delete install	5-23
disable basepackage	5-24
disable feature	5-24
disable http debug	5-25
disable http server	5-25
disable ldap debug	5-26
disable release	5-26
enable basepackage	5-27
enable feature	5-28
enable http debug	5-29
enable http server	5-29
enable ldap debug	5-30
enable release	5-30
load	5-31
purge ldap	5-36
reset http server	5-36
reset loader	5-37
restart	5-37
restart	5-38
set config	5-39
set http server	5-40
set install	5-41
set install	5-43
set loader	5-44
show config	5-48
show feature	5-50
show http client	5-52
show http debug	5-53
show http server	5-53
show http server session	5-55
show install	5-56
show ldap	5-58
show ldap request	5-59
show loader	5-61
show patch	5-63
show release	5-63
show system licence	5-64
show system package	5-65
upload	5-66

CHAPTER 6 **Managing the File System**

Introduction	6-3
File Naming Conventions	6-3
Long Filenames	6-5
Working with Files	6-5
Built-In Editor	6-6
Using Wildcards	6-7
Sending Output to a Text File	6-8
Flash Memory	6-8
The Flash File System (FFS)	6-9
If You Clear Flash Memory Completely	6-10
Non-Volatile Storage (NVS)	6-11

Secure Digital (SD) Cards	6-12
CompactFlash (CFlash) Cards	6-12
The FAT File System	6-13
Command Reference	6-15
activate flash compaction	6-15
add cflash dir	6-16
add file	6-17
clear card totally	6-18
clear cflash	6-18
clear flash totally	6-19
clear nvs totally	6-19
copy	6-20
create file	6-22
delete cflash dir	6-23
delete file	6-23
delete nvs	6-25
disable cflash test	6-25
dump nvs	6-26
edit	6-27
enable cflash test	6-30
modify nvs	6-30
purge file translationtable	6-31
rename	6-32
reset card counters	6-33
reset file permanentredirect	6-33
set cflash dir	6-34
show card	6-35
show card counters	6-36
show cflash	6-39
show cflash counters	6-40
show cflash file	6-41
show cflash test	6-42
show ffile	6-44
show file	6-46
show file permanentredirect	6-49
show flash	6-50
show flash physical	6-52
show nvs	6-53
show nvs free	6-54

CHAPTER 7 Switching

Introduction	7-4
Switch Ports	7-5
Enabling and Disabling Switch Ports	7-5
Speed and Duplex Mode	7-8
Auto MDI/MDI-X	7-10
Link Aggregation	7-12
Link Aggregation Control Protocol (LACP)	7-13
Broadcast Storm Protection	7-14
Port Mirroring	7-15
Port Security	7-16
Limiting Rapid MAC Movement	7-17
Support for Jumbo Frames	7-18
Virtual Local Area Networks (VLANs)	7-18
Dynamic VLAN Assignment	7-19
802.1x Guest VLAN	7-21
VLAN Tagging	7-21
VLAN Membership using VLAN Tags	7-23

VLAN Membership of Untagged Packets	7-24
Configuring VLANs	7-25
The Default VLAN	7-28
Static and Dynamic VLANs	7-29
Private VLANs	7-30
Nested VLANs	7-32
The Layer 2 Switching Process	7-34
The Ingress Rules	7-35
The Learning Process	7-36
The Forwarding Process	7-36
The Egress Rules	7-37
Layer 2 Filtering	7-38
Layer 2 QoS Actions in Hardware Filters	7-38
Classifier-Based Packet Filters	7-39
Access Control Lists (ACLs)	7-40
Classifier-Based Filters with Accelerated IPv6 Traffic	7-41
Configuring Accelerator Hardware Filters for AT-8948 Switches	7-42
Triggers	7-42
Configuration Examples	7-43
Port-Based VLAN with Untagged Ports	7-44
VLAN with Tagged Ports	7-45
Subnet-Based VLAN	7-47
Command Reference	7-50
activate switch port	7-50
add lacp port	7-51
add switch accelerator hwfilter	7-52
add switch filter action	7-54
add switch hwfilter	7-56
add switch trunk	7-57
add vlan port	7-58
add vlan protocol	7-62
add vlan subnet	7-64
create switch trunk	7-65
create vlan	7-68
delete lacp port	7-70
delete switch accelerator hwfilter	7-70
delete switch filter	7-71
delete switch hwfilter	7-71
delete switch trunk	7-72
delete vlan port	7-73
delete vlan protocol	7-75
delete vlan subnet	7-76
destroy switch trunk	7-77
destroy vlan	7-77
disable lacp	7-78
disable lacp debug	7-78
disable switch accelerator	7-78
disable switch accelerator function	7-79
disable switch accelerator debug	7-79
disable switch ageingtimer	7-80
disable switch debug	7-80
disable switch hash	7-81
disable switch mclimiting	7-81
disable switch learning	7-82
disable switch mirror	7-82
disable switch port	7-83
disable switch port vlan	7-84
disable vlan debug	7-85
enable lacp	7-85

enable lacp debug	7-85
enable switch accelerator	7-86
enable switch accelerator function	7-86
enable switch accelerator debug	7-87
enable switch ageingtimer	7-88
enable switch bist	7-88
enable switch debug	7-90
enable switch hash	7-91
enable switch learning	7-92
enable switch mclimiting	7-92
enable switch mirror	7-92
enable switch port	7-94
enable switch port vlan	7-95
enable vlan debug	7-96
purge lacp	7-96
reset lacp port counter	7-97
reset switch	7-97
reset switch accelerator counter	7-97
reset switch port	7-98
set lacp port	7-99
set lacp	7-100
set switch ageingtimer	7-101
set switch cputxpriorityoverride	7-101
set switch cputxqueueoverride	7-102
set switch dlflimit	7-102
set switch enhancedmode	7-103
set switch hwlearnndelay	7-104
set switch hwrouteupdate	7-104
set switch jumbo	7-105
set switch mirror	7-105
set switch nestedtpid	7-106
set switch port	7-106
set switch thrashlimit	7-112
set switch trunk	7-113
set vlan port	7-115
show lacp	7-116
show lacp port	7-117
show lacp port counter	7-119
show lacp trunk	7-120
show switch	7-120
show switch accelerator	7-125
show switch accelerator counter	7-126
show switch accelerator debug	7-129
show switch accelerator hwfilter	7-130
show switch counter	7-131
show switch debug	7-133
show switch fdb	7-134
show switch filter	7-135
show switch hwfilter	7-137
show switch port	7-138
show switch port counter	7-142
show switch port intrusion	7-144
show switch trunk	7-145
show vlan	7-147
show vlan debug	7-152
show vlan port	7-153

CHAPTER 8 Spanning Trees

Introduction	8-3
Overview	8-3
Multiple Spanning Trees and STP Interaction with VLANs	8-3
Spanning Tree Operation	8-4
The Forwarding Process	8-5
Electing a Root Bridge and Designated Bridge	8-6
Spanning Tree Modes	8-6
Rapid Mode Spanning Tree Types	8-7
Spanning Tree and Rapid Spanning Tree Port States	8-7
Configuring STP	8-8
Simple Meshed Network Example	8-12
Multiple Spanning Tree Protocol (MSTP)	8-13
Multiple Spanning Tree Regions	8-13
Bridge Protocol Data Units (BPDUs)	8-14
Compatibility with Previous Spanning Tree Protocols	8-15
Configuring MSTP	8-16
Common and Internal Spanning Tree (CIST)	8-22
The Relationship between Spanning Trees and Trunks	8-26
Command Reference	8-27
activate mstp migrationcheck port	8-27
add mstp msti vlan	8-28
add stp vlan	8-29
create mstp msti	8-30
create stp	8-32
delete mstp msti vlan	8-32
delete stp vlan	8-33
destroy mstp msti	8-34
destroy stp	8-34
disable mstp	8-35
disable mstp cist port	8-35
disable mstp debug	8-36
disable mstp msti port	8-37
disable mstp port	8-38
disable stp	8-38
disable stp debug	8-39
disable stp port	8-41
disable switch stpforward	8-42
enable mstp	8-42
enable mstp cist port	8-43
enable mstp debug	8-44
enable mstp msti port	8-46
enable mstp port	8-47
enable stp	8-47
enable stp debug	8-48
enable stp port	8-50
enable switch stpforward	8-51
purge mstp	8-51
purge stp	8-51
reset mstp counter port	8-52
reset stp	8-52
set mstp	8-53
set mstp cist	8-55
set mstp cist port	8-56
set mstp msti	8-58
set mstp msti port	8-59
set stp	8-61
set stp port	8-64
show mstp	8-67

show mstp cist	8-69
show mstp cist port	8-72
show mstp counter port	8-74
show mstp debug	8-75
show mstp msti	8-76
show mstp msti port	8-78
show stp	8-79
show stp counter	8-83
show stp debug	8-85
show stp port	8-86

CHAPTER 9 Generic Attribute Registration Protocol (GARP)

Introduction	9-2
GARP Operations	9-2
Overview of Generic VLAN Registration Protocol (GVRP)	9-5
Configuring GARP	9-6
Command Reference	9-8
disable garp	9-8
disable garp debug	9-9
disable garp gip	9-10
enable garp	9-11
enable garp debug	9-12
enable garp gip	9-13
reset garp	9-14
set garp port	9-15
set garp timer	9-17
show garp	9-19
show garp counter	9-21
show garp db	9-23
show garp debug	9-24
show garp gip	9-25
show garp machine	9-26

CHAPTER 10 Interfaces

Introduction	10-2
Naming Interfaces	10-2
Simple Interface Names	10-3
Ethernet	10-3
Encapsulations	10-4
Configuration	10-6
Asynchronous Interfaces	10-8
Encapsulations	10-8
Configuration	10-9
Session Timeout	10-12
Connecting a Modem to the Asynchronous Port	10-12
MIB Counters	10-13
Autobauding	10-14
Making Asynchronous Ports Respond More Quickly	10-14
Testing Serial Data Circuits	10-15
Displaying Interfaces	10-15
Interface Link Traps	10-16
Managing Interfaces with SNMP	10-16
Command Reference	10-17
connect asyn	10-17
disable asyn	10-17
disable interface linktrap	10-18
enable asyn	10-19
enable interface linktrap	10-19

purge asyn	10-20
reset asyn	10-20
reset asyn counter	10-21
reset asyn history	10-22
reset eth	10-22
reset eth counters	10-23
reset interface counters	10-23
set asyn	10-24
set eth speed	10-29
set interface mtu	10-30
set interface traplimit	10-31
show asyn	10-32
show eth configuration	10-40
show eth counters	10-41
show eth macaddress	10-47
show eth receive	10-48
show eth state	10-49
show interface	10-51

CHAPTER 11 **Point-to-Point Protocol (PPP)**

Introduction	11-3
Overview	11-3
Encapsulation	11-3
Control Protocols	11-4
LCP Options	11-5
Configuring PPP	11-6
Link Quality Management	11-7
Multilink PPP	11-8
Bandwidth Allocation Protocol	11-8
Dial-On-Demand	11-9
Link Backup	11-9
Bandwidth on Demand	11-10
PPP Over Ethernet	11-11
PPP over Ethernet Client Mode	11-12
PPP over Ethernet Access Concentrator Mode	11-12
Templates	11-13
PPP Callback	11-14
Magic Number	11-15
MSS Clamping	11-15
Authentication Protocols	11-17
Password Authentication Protocol (PAP)	11-17
Challenge-Handshake Authentication Protocol (CHAP)	11-18
Switch configuration	11-19
Assigning IP Addresses	11-21
PPP Link Management	11-23
Configuring PPP Control Protocols	11-24
Debugging PPP Links	11-25
Configuration Examples	11-28
Command Reference	11-29
activate ppp	11-29
add ppp	11-30
add ppp acservice	11-33
create ppp	11-34
create ppp template	11-40
delete ppp	11-46
delete ppp acservice	11-47
destroy ppp	11-48
destroy ppp template	11-48

disable ppp	11-49
disable ppp accessconcentrator	11-49
disable ppp debug	11-50
disable ppp template debug	11-51
enable ppp	11-51
enable ppp accessconcentrator	11-52
enable ppp debug	11-53
enable ppp template debug	11-55
purge ppp	11-56
reset ppp	11-57
set ppp	11-58
set ppp acservice	11-64
set ppp template	11-65
show ppp	11-71
show ppp config	11-72
show ppp count	11-78
show ppp debug	11-90
show ppp idletimer	11-91
show ppp limits	11-92
show ppp multilink	11-93
show ppp nameserver	11-95
show ppp pppoe	11-96
show ppp template	11-98
show ppp txstatus	11-101
show ppp utilisation	11-103

CHAPTER 12 **Layer Two Tunneling Protocol (L2TP)**

Introduction	12-3
Overview	12-3
L2TP on the Switch	12-5
Enabling L2TP on the Switch	12-5
Accepting Incoming Calls as an LAC	12-6
Accepting L2TP Sessions as an LNS	12-7
Creating a Call from an LNS to an LAC	12-8
Monitoring L2TP Connections	12-9
Debugging L2TP Connections	12-9
Reflecting TOS onto L2TP-Tunnelled Packets	12-10
Configuration Examples	12-11
Inter-Switch Tunnels	12-11
Simple Dial-In System	12-13
Configure L2TP to Tunnel PPPoE Sessions	12-15
Command Reference	12-17
activate l2tp call	12-17
add l2tp call	12-18
add l2tp ip	12-21
add l2tp password	12-23
add l2tp user	12-24
deactivate l2tp call	12-26
delete l2tp call	12-27
delete l2tp ip	12-27
delete l2tp password	12-28
delete l2tp user	12-29
disable l2tp	12-30
disable l2tp debug	12-30
disable l2tp server	12-31
enable l2tp	12-31
enable l2tp debug	12-32
enable l2tp server	12-35

reset l2tp counter	12-36
set l2tp call	12-36
set l2tp checksum	12-39
set l2tp filter	12-39
set l2tp password	12-40
set l2tp user	12-41
show l2tp	12-43
show l2tp call	12-44
show l2tp counter	12-46
show l2tp ip	12-49
show l2tp tunnel	12-50
show l2tp tunnel call	12-53
show l2tp tunnel call counter	12-57
show l2tp tunnel counter	12-59
show l2tp user	12-61

CHAPTER 13 Internet Protocol (IP)

Introduction	13-5
IP Packets	13-5
Addressing	13-7
Subnets	13-8
Assigning an IP Address	13-9
Multihoming	13-11
Local Interfaces	13-11
Address Resolution Protocol (ARP)	13-12
Static ARP Entries	13-13
Adding Static ARP Entries with Multicast MAC Addresses	13-13
Timing Out ARP Entries	13-14
Deleting ARP Entries	13-16
Proxy ARP	13-16
MAC Address Logging	13-17
Waiting for a Response to an ARP Request	13-17
DHCP Client	13-18
ICMP	13-18
Routing	13-19
Types of Routes	13-19
The Routing Table	13-20
Configuring Static Routes	13-20
Blackhole Routing	13-21
Caching Routes	13-23
Dynamic Routing Protocols	13-24
Setting Preference to Dynamically-Learned Routes	13-24
Displaying Route Information	13-24
Equal Cost Multipath Routing	13-25
Routing Information Protocol (RIP)	13-26
Open Shortest Path First (OSPF)	13-26
Border Gateway Protocol (BGP)	13-27
Metrics	13-27
OSPF Auto Cost Calculation	13-27
Policy-Based Routing	13-27
Priority-Based Routing	13-29
Route Templates	13-30
Domain Name System (DNS)	13-30
Usage of Domain Name Servers	13-31
Configuring Domain Name Servers	13-32
DNS Caching	13-34
Named Hosts	13-34
Traffic Filters	13-35

SNMP	13-37
Control and Debug Commands	13-37
Ping and Trace Route	13-38
Ping	13-38
Trace Route	13-39
Finger	13-39
Security Options	13-40
Broadcast Forwarding	13-40
IP Multicasting	13-43
Static Multicast Forwarding	13-44
Remote Address Assignment	13-44
IP Address Pools	13-45
Configuration Examples	13-46
Basic IP Setup over PPP	13-46
Configuring IP Filters	13-49
Troubleshooting	13-53
No Route Exists to the Remote Switch	13-53
Getting an IP Address from DHCP	13-54
Telnet Fails	13-54
Command Reference	13-55
add ip arp	13-55
add ip dns	13-57
add ip filter	13-59
add ip helper	13-66
add ip host	13-67
add ip interface	13-68
add ip local	13-73
add ip route	13-74
add ip route template	13-77
create ip pool	13-78
delete ip arp	13-78
delete ip dns	13-79
delete ip filter	13-80
delete ip helper	13-80
delete ip host	13-81
delete ip interface	13-82
delete ip local	13-83
delete ip route	13-83
delete ip route template	13-84
delete tcp	13-85
destroy ip pool	13-85
disable ip	13-86
disable ip arp agepoll	13-86
disable ip arp log	13-86
disable ip debug	13-87
disable ip dnsrelay	13-87
disable ip echoreply	13-87
disable ip fofilter	13-88
disable ip forwarding	13-89
disable ip helper	13-89
disable ip icmpreply	13-90
disable ip interface	13-91
disable ip macdisparity	13-92
disable ip remoteassign	13-92
disable ip route	13-93
disable ip spoofcheck	13-93
disable ip srcroute	13-94
disable tcp debug	13-94
disable telnet server	13-95

enable ip	13-95
enable ip arp agepoll	13-96
enable ip arp log	13-96
enable ip debug	13-97
enable ip dnsrelay	13-98
enable ip echoreply	13-98
enable ip fofilter	13-99
enable ip forwarding	13-100
enable ip helper	13-100
enable ip icmpreply	13-100
enable ip interface	13-101
enable ip macdisparity	13-102
enable ip remoteassign	13-103
enable ip route	13-103
enable ip spoofcheck	13-104
enable ip srcroute	13-104
enable tcp debug	13-105
enable telnet server	13-105
finger	13-106
ping	13-107
purge ip	13-109
reset ip	13-109
reset ip counter	13-110
reset ip interface	13-110
set ip arp	13-111
set ip arp refresharp	13-112
set ip arp timeout	13-112
set ip arpwaittimeout	13-113
set ip dns	13-114
set ip dns cache	13-115
set ip dnsrelay	13-116
set ip dscpoverride	13-116
set ip filter	13-117
set ip host	13-121
set ip interface	13-122
set ip local	13-126
set ip nameserver	13-127
set ip route	13-128
set ip route preference	13-130
set ip route template	13-131
set ip secondarynameserver	13-132
set ping	13-133
set trace	13-135
show ip	13-136
show ip arp	13-140
show ip cache	13-141
show ip counter	13-142
show ip debug	13-150
show ip dns	13-151
show ip dns cache	13-153
show ip filter	13-154
show ip helper	13-156
show ip host	13-158
show ip icmpreply	13-159
show ip interface	13-159
show ip pool	13-164
show ip route	13-166
show ip route multicast	13-170
show ip route preference	13-171

show ip route template	13-172
show ip udp	13-174
show ping	13-176
show tcp	13-178
show trace	13-183
stop ping	13-184
stop trace	13-185
trace	13-185

CHAPTER 14 **Dynamic Host Configuration Protocol (DHCP)**

Introduction	14-2
Configuring the DHCP Server	14-3
BOOTP Relay Agent	14-4
DHCP Option 82 Relay	14-6
Configuring the DHCP Client	14-6
DHC Files	14-6
Configuration Example	14-7
Troubleshooting	14-8
Command Reference	14-9
add bootp relay	14-9
add dhcp option	14-10
add dhcp policy	14-11
add dhcp range	14-17
create dhcp policy	14-18
create dhcp range	14-19
delete bootp relay	14-20
delete dhcp option	14-21
delete dhcp policy	14-22
delete dhcp range	14-26
destroy dhcp policy	14-27
destroy dhcp range	14-27
disable bootp relay	14-28
disable bootp relay option82	14-28
disable dhcp	14-29
disable dhcp debug	14-29
enable bootp relay	14-30
enable bootp relay option82	14-30
enable dhcp	14-31
enable dhcp debug	14-31
purge bootp relay	14-32
set bootp relay maxhops	14-32
set bootp relay option82	14-33
set bootp relay option82 port	14-34
set dhcp	14-35
set dhcp option	14-36
set dhcp policy	14-37
set dhcp range	14-43
show bootp relay	14-44
show bootp relay port	14-46
show dhcp	14-47
show dhcp client	14-49
show dhcp policy	14-51
show dhcp range	14-52

CHAPTER 15 DHCP Snooping

Introduction	15-2
The Binding Database	15-2
DHCP Filtering	15-4
DHCP Option 82	15-4
DHCP Snooping ARP Security	15-5
Configuration Examples	15-5
Command Reference	15-6
add dhcpsnooping binding	15-6
delete dhcpsnooping binding	15-7
disable dhcpsnooping	15-7
disable dhcpsnooping arpsecurity	15-8
disable dhcpsnooping debug	15-8
disable dhcpsnooping option82	15-9
disable dhcpsnooping strictunicast	15-9
enable dhcpsnooping	15-10
enable dhcpsnooping arpsecurity	15-10
enable dhcpsnooping debug	15-11
enable dhcpsnooping option82	15-12
enable dhcpsnooping strictunicast	15-12
set dhcpsnooping checkinterval	15-13
set dhcpsnooping port	15-14
show dhcpsnooping	15-15
show dhcpsnooping counter	15-16
show dhcpsnooping database	15-17
show dhcpsnooping filter	15-19
show dhcpsnooping port	15-20

CHAPTER 16 MAC-Forced Forwarding

Introduction	16-2
Overview	16-2
Configuring an Ethernet Access Node	16-3
Monitoring and Troubleshooting	16-6
Debugging	16-6
Logging	16-7
Configuration Examples	16-7
Command Reference	16-8
add macff server	16-8
delete macff server	16-9
disable macff interface	16-9
disable macff interface debug	16-10
enable macff interface	16-10
enable macff interface debug	16-11
reset macff counter	16-12
set macff server	16-12
show macff	16-13
show macff database	16-16
show macff interface	16-17
show macff interface counter	16-19

CHAPTER 17 IP Multicasting

Introduction	17-3
References	17-3
IP Multicast Routing	17-4
Interoperability between Multicast Routing Protocols	17-5
Distance Vector Multicast Routing Protocol (DVMRP)	17-5
Configuring DVMRP	17-6

Protocol Independent Multicast (PIM)	17-7
PIM Dense Mode	17-8
PIM Sparse Mode	17-10
Internet Group Management Protocol (IGMP)	17-18
Configuring IGMP	17-18
Static IGMP	17-19
IGMP Proxy	17-21
IGMP Snooping	17-23
IGMP Filtering	17-27
IGMP Throttling	17-29
Configuration Examples	17-30
Static IGMP	17-30
Multicasting using DVMRP	17-31
Protocol Independent Multicast (PIM)	17-34
Command Reference	17-42
add dvmrp interface	17-42
add igmp filter	17-43
add igmpsnooping routeraddress	17-44
add igmpsnooping vlan	17-44
add ip igmp destination	17-46
add pim bsrcandidate	17-47
add pim interface	17-48
add pim rpcandidate	17-49
create igmp filter	17-50
create ip igmp destination	17-51
delete dvmrp interface	17-52
delete igmp filter	17-52
delete igmpsnooping routeraddress	17-53
delete igmpsnooping vlan	17-53
delete ip igmp destination	17-54
delete pim bsrcandidate	17-54
delete pim interface	17-55
delete pim rpcandidate	17-56
destroy igmp filter	17-57
destroy ip igmp destination	17-57
disable dvmrp	17-58
disable dvmrp debug	17-58
disable dvmrp	17-58
disable dvmrp debug	17-58
disable igmpsnooping	17-59
disable ip igmp	17-59
disable ip igmp allgroup	17-60
disable ip igmp debug	17-60
disable ip igmp interface	17-61
disable pim	17-61
disable pim bsmsecuritycheck	17-62
disable pim debug	17-62
enable dvmrp	17-63
enable dvmrp debug	17-63
enable igmpsnooping	17-64
enable ip igmp	17-64
enable ip igmp allgroup	17-65
enable ip igmp debug	17-65
enable ip igmp interface	17-66
enable pim	17-66
enable pim bsmsecuritycheck	17-67
enable pim debug	17-67
purge dvmrp	17-68
purge pim	17-68

reset dvmrp interface	17-69
reset pim interface	17-69
set dvmrp interface	17-70
set igmp filter	17-71
set igmpsnooping vlan	17-72
set igmpsnooping routermode	17-73
set ip igmp	17-74
set ip igmp interface	17-75
set pim	17-76
set pim log	17-77
set pim bsrcandidate	17-78
set pim interface	17-79
set pim rpcandidate	17-80
show dvmrp	17-81
show dvmrp counters	17-81
show dvmrp debug	17-82
show dvmrp forwarding	17-83
show dvmrp interface	17-84
show dvmrp neighbour	17-85
show dvmrp route	17-86
show igmp filter	17-87
show igmpsnooping	17-88
show igmpsnooping counter	17-90
show igmpsnooping routeraddress	17-91
show ip igmp	17-92
show ip igmp counter	17-95
show ip igmp debug	17-97
show pim	17-98
show pim bsrcandidate	17-99
show pim config	17-100
show pim counters	17-101
show pim debug	17-104
show pim interface	17-105
show pim neighbour	17-107
show pim route	17-108
show pim rpcandidate	17-113
show pim rpset	17-114
show pim staterefresh	17-116
show pim timer	17-117

CHAPTER 18 Routing Information Protocol (RIP)

Introduction	18-2
Configuring RIP	18-3
Redistributing Routes into RIP	18-4
Statically-Configured Routes	18-4
BGP Routes	18-4
Configuration Example	18-5
Command Reference	18-7
add ip rip interface	18-7
add ip rip redistribute	18-10
add ip trusted	18-11
delete ip rip interface	18-12
delete ip rip redistribute	18-13
delete ip trusted	18-13
set ip rip interface	18-14
set ip rip redistribute	18-16
set ip riptimer	18-17
show ip rip	18-18

show ip rip counter	18-19
show ip rip redistribute	18-21
show ip rip timer	18-22
show ip trusted	18-23

CHAPTER 19 Open Shortest Path First (OSPF)

Introduction	19-3
OSPF Features	19-3
Adjacency and Designated Routers	19-5
Link State Advertisements	19-5
OSPF Packet Types	19-6
OSPF States	19-7
Automatic Cost Calculation	19-8
Routing with OSPF	19-9
Filtering OSPF Routes	19-9
Addressless Interfaces	19-10
Network Types	19-10
Passive Interfaces	19-12
Authenticating OSPF	19-13
Password Authentication	19-13
Cryptographic Authentication	19-13
Exchanging Information Between OSPF and RIP	19-14
Importing BGP routes into OSPF	19-15
Redistributing External Routes	19-15
Summarising Routes for Redistribution	19-17
Configuration Examples	19-17
Basic OSPF Network	19-18
OSPF Network with Virtual Links	19-19
Command Reference	19-23
add ospf area	19-23
add ospf host	19-25
add ospf interface	19-26
add ospf md5key	19-30
add ospf neighbour	19-31
add ospf range	19-32
add ospf redistribute	19-33
add ospf stub	19-35
add ospf summaryaddress	19-36
delete ospf area	19-37
delete ospf host	19-37
delete ospf interface	19-38
delete ospf md5key	19-39
delete ospf neighbour	19-40
delete ospf range	19-40
delete ospf redistribute	19-41
delete ospf stub	19-42
delete ospf summaryaddress	19-43
disable ospf	19-43
disable ospf debug	19-43
disable ospf interface	19-45
disable ospf log	19-45
enable ospf	19-46
enable ospf debug	19-46
enable ospf interface	19-47
enable ospf log	19-48
purge ospf	19-49
reset ospf	19-49
reset ospf counter	19-50

reset ospf interface	19-50
reset ospf spf	19-51
set ospf	19-52
set ospf area	19-55
set ospf host	19-57
set ospf interface	19-58
set ospf neighbour	19-62
set ospf range	19-63
set ospf redistribute	19-64
set ospf stub	19-65
set ospf summaryaddress	19-66
show ospf	19-67
show ospf area	19-69
show ospf debug	19-72
show ospf host	19-72
show ospf interface	19-74
show ospf lsa	19-78
show ospf md5key	19-84
show ospf neighbour	19-85
show ospf range	19-86
show ospf redistribute	19-87
show ospf route	19-88
show ospf stub	19-90
show ospf summaryaddress	19-91

CHAPTER 20 **Border Gateway Protocol version 4 (BGP-4)**

Introduction	20-3
Overview	20-3
BGP Operation	20-5
BGP Attributes	20-6
BGP Route Selection	20-8
Classless Inter-domain Routing (CIDR) and Aggregation	20-10
BGP Multi-Homing	20-11
BGP Route Filtering	20-13
AS Confederations	20-13
Triggers	20-14
Redistributing BGP Routes	20-15
Configuring BGP Peers	20-15
How to Create a Basic BGP AS	20-16
How to Create BGP Peers Using Peer Templates	20-19
How to Modify BGP Peers (Without Templates)	20-20
How to Use a Template to Modify BGP Peers	20-21
How to Modify BGP Peers that Use a Template	20-22
How to Delete BGP Peers	20-22
Optimising BGP	20-23
How to Minimise the Impact of Unstable EBGp Routes	20-23
How to Withdraw Routes As Soon As they Fail	20-28
How to Advertise as Few Routes as Possible	20-29
How to Improve IBGP Scalability	20-32
How to Handle Spikes in Memory Use	20-37
How to Stop BGP from Overloading System Memory	20-38
How to Avoid Leaking Private AS Numbers into Global BGP Tables	20-39
How to Set the IP Address that Identifies the Switch	20-40
Configuration Examples	20-41
Basic BGP Configuration	20-41
Advanced BGP Configuration	20-42
Command Reference	20-46
add bgp aggregate	20-46
add bgp confederationpeer	20-48
add bgp import	20-49

add bgp network	20-50
add bgp peer	20-51
add bgp peertemplate	20-58
create bgp damping parameterset	20-63
delete bgp aggregate	20-65
delete bgp confederationpeer	20-66
delete bgp import	20-66
delete bgp network	20-67
delete bgp peer	20-67
delete bgp peertemplate	20-68
destroy bgp damping parameterset	20-68
disable bgp autosoftupdate	20-69
disable bgp autosummary	20-69
disable bgp backoff	20-70
disable bgp damping	20-70
disable bgp debug	20-71
disable bgp defaultoriginate	20-72
disable bgp peer	20-72
enable bgp autosoftupdate	20-72
enable bgp autosummary	20-73
enable bgp backoff	20-73
enable bgp damping	20-74
enable bgp debug	20-75
enable bgp defaultoriginate	20-76
enable bgp peer	20-77
purge bgp damping	20-77
reset bgp damping	20-78
reset bgp peer	20-78
reset bgp peer soft	20-79
set bgp	20-80
set bgp aggregate	20-82
set bgp backoff	20-83
set bgp damping parameterset	20-84
set bgp import	20-86
set bgp memlimit	20-86
set bgp peer	20-87
set bgp peertemplate	20-95
set ip autonomous	20-100
show bgp	20-101
show bgp aggregate	20-103
show bgp confederation	20-104
show bgp backoff	20-105
show bgp counters	20-107
show bgp damping	20-111
show bgp damping routes	20-113
show bgp import	20-114
show bgp memlimit	20-115
show bgp memlimit scan	20-115
show bgp network	20-118
show bgp peer	20-119
show bgp peertemplate	20-124
show bgp route	20-126

CHAPTER 21 Filtering IP Routes

Introduction	21-3
Types of Filters	21-4
Prefix Lists	21-4
AS Path Lists	21-5
Route Maps	21-5
IP Route Filters	21-7
IP Filters	21-8
Creating Filters	21-8
Creating Prefix Lists	21-9
Creating AS Path Lists for BGP Routes	21-9
Creating Route Maps for BGP Routes	21-10
Creating Route Maps for OSPF Routes	21-15
Creating Route Maps for Redistributing BGP Routes into RIP	21-18
Creating IP Route Filters	21-20
Creating IP Filters	21-20
Applying Filters	21-21
Applying Filters when Writing to the RIB	21-21
Applying Filters when Redistributing from the RIB	21-23
Applying Filters before Advertising Routes	21-25
Filters for Route Sources	21-28
Border Gateway Protocol (BGP-4)	21-28
Open Shortest Path First (OSPF)	21-29
Routing Information Protocol (RIP)	21-31
Interface Routes	21-32
Statically-Configured Routes	21-32
Configuration Examples	21-33
Filtering when Writing BGP Routes to the RIB: Using an AS Path Filter ..	21-33
Filtering when Writing BGP Routes to the RIB: Using a Route Map	21-34
Filtering before Advertising Routes with BGP: Using an AS Path Filter ..	21-35
Filtering before Advertising Routes with BGP: Using a Route Map	21-35
Filtering Inbound and Outbound BGP Routes: Using Communities	21-36
Filtering when Importing Routes from BGP to OSPF	21-37
Command Reference	21-38
add ip aspathlist	21-38
add ip communitylist	21-40
add ip prefixlist	21-42
add ip route filter	21-44
add ip routemap	21-46
delete ip aspathlist	21-53
delete ip communitylist	21-53
delete ip prefixlist	21-54
delete ip route filter	21-54
delete ip routemap	21-55
set ip prefixlist	21-56
set ip route filter	21-57
set ip routemap	21-59
show ip aspathlist	21-65
show ip communitylist	21-66
show ip prefixlist	21-67
show ip route filter	21-68
show ip routemap	21-69

CHAPTER 22 Generic Routing Encapsulation (GRE)

Introduction	22-2
GRE on the Switch	22-3
Configuration Examples	22-5
Basic Configuration	22-5
Multi-Point Configuration	22-7

Command Reference	22-11
add gre	22-11
add gre tunnel	22-13
delete gre	22-14
delete gre tunnel	22-14
disable gre	22-15
disable gre debug	22-15
enable gre	22-15
enable gre debug	22-16
purge gre	22-16
reset gre	22-17
set gre	22-17
set gre tunnel	22-19
show gre	22-20
show gre general	22-21
show gre tunnel	22-22
CHAPTER 23 Internet Protocol version 6 (IPv6)	
Introduction	23-3
Overview	23-3
The 6bone	23-4
IPv6 Addresses and Prefixes	23-4
IPv6 Headers	23-5
The Internet Control Message Protocol (ICMPv6)	23-8
IPv6 Routing	23-10
IPv6 Filtering	23-11
Integration of IPv4 and IPv6	23-11
IPv6 on the Switch	23-11
Enabling IPv6	23-12
IPv6 Interfaces and Addresses	23-12
Extension Header Processing	23-14
Routing Table Processing and RIPv6	23-14
Neighbour Discovery	23-15
IPv6 Filtering	23-16
IPv6 Fragmentation	23-17
Telnet v6	23-17
Ping	23-18
Secure Shell	23-19
Tunnelling IPv6 Packets over IPv4	23-19
IPv6 Acceleration	23-21
Troubleshooting the Accelerator Card	23-22
Configuration Examples	23-23
Basic Routing	23-23
Dynamic Routing with RIPv6	23-24
Dynamic (6-to-4) Tunnelling over an IPv4 Network	23-28
Static Tunnelling over an IPv4 Network	23-31
IPv6 Filters	23-33
Command Reference	23-35
add ipv6 6to4	23-35
add ipv6 filter	23-35
add ipv6 host	23-41
add ipv6 interface	23-42
add ipv6 nd	23-44
add ipv6 prefix	23-45
add ipv6 rip	23-46
add ipv6 route	23-47
add ipv6 tunnel	23-48
create ipv6 interface	23-49

delete ipv6 6to4	23-50
delete ipv6 filter	23-50
delete ipv6 host	23-51
delete ipv6 interface	23-51
delete ipv6 nd	23-52
delete ipv6 prefix	23-53
delete ipv6 rip	23-54
delete ipv6 route	23-55
delete ipv6 tunnel	23-56
destroy ipv6 interface	23-57
disable ipv6	23-57
disable ipv6 advertise	23-58
disable ipv6 debug	23-58
disable ipv6 mtudiscovery	23-59
disable ipv6 rip	23-59
enable ipv6	23-59
enable ipv6 advertise	23-60
enable ipv6 debug	23-60
enable ipv6 mtudiscovery	23-61
enable ipv6 rip	23-61
reset ipv6 ndcache	23-61
set ipv6 filter	23-62
set ipv6 interface	23-65
set ipv6 mtu	23-66
set ipv6 nd	23-67
set ipv6 prefix	23-69
set ipv6 route preference	23-70
show ipv6	23-71
show ipv6 counter	23-73
show ipv6 counter	23-77
show ipv6 filter	23-81
show ipv6 host	23-83
show ipv6 interface	23-84
show ipv6 multicast	23-86
show ipv6 ndcache	23-87
show ipv6 ndconfig	23-88
show ipv6 rip	23-90
show ipv6 route	23-92
show ipv6 route multicast	23-93
show ipv6 route preference	23-95
show ipv6 tunnel	23-96
show ipv6 udp	23-97

CHAPTER 24 **Dynamic Host Configuration Protocol for IPv6 (DHCP6)**

Introduction	24-2
DHCP for IPv6	24-2
DHCP6 Messages	24-3
DHCP Unique Identifier (DUID)	24-3
Identity Associations	24-3
Configuring DHCP6 Servers	24-4
Configuring DHCP6 Clients	24-5
DHCP6 Message Authentication	24-6
Rapid Commit	24-6
Configuration Examples	24-7
Address Assignment	24-7
Prefix Delegation	24-8
Command Reference	24-10
add dhcp6 interface	24-10
add dhcp6 key	24-11
add dhcp6 policy	24-12

add dhcp6 range	24-13
create dhcp6 policy	24-14
create dhcp6 range	24-15
delete dhcp6 interface	24-16
delete dhcp6 key	24-16
delete dhcp6 policy	24-17
delete dhcp6 range	24-18
destroy dhcp6 policy	24-18
destroy dhcp6 range	24-19
disable dhcp6	24-19
disable dhcp6 debug	24-19
disable dhcp6 rapidcommit	24-20
enable dhcp6	24-20
enable dhcp6 debug	24-20
enable dhcp6 rapidcommit	24-21
set dhcp6 key	24-21
set dhcp6 policy	24-22
show dhcp6	24-23
show dhcp6 client	24-25
show dhcp6 counter	24-27
show dhcp6 interface	24-30
show dhcp6 key	24-32
show dhcp6 policy	24-33
show dhcp6 range	24-34
show dhcp6 server	24-35

CHAPTER 25 **IPv6 Multicasting**

Introduction	25-3
Overview	25-3
Interoperability between Multicast Routing Protocols	25-4
Multicast Listener Discovery (MLD)	25-5
Queries and Reports	25-5
Configuring MLD	25-7
MLD Snooping	25-7
Protocol Independent Multicast Sparse Mode (PIM-SM)	25-9
Configuring PIM Sparse Mode	25-9
Protocol Independent Multicast Dense Mode (PIM-DM)	25-12
Configuring PIM Dense Mode	25-13
Configuration Examples	25-15
Command Reference	25-26
add pim6 bsr candidate	25-26
add pim6 interface	25-27
add pim6 rpcandidate	25-28
delete pim6 bsr candidate	25-29
delete pim6 interface	25-29
delete pim6 rpcandidate	25-30
disable ipv6 mld	25-30
disable ipv6 mld debug	25-31
disable ipv6 mld interface	25-31
disable mld snooping	25-32
disable mld snooping debug	25-32
disable pim6	25-32
disable pim6 debug	25-33
enable ipv6 mld	25-33
enable ipv6 mld debug	25-33
enable ipv6 mld interface	25-34
enable mld snooping	25-35
enable mld snooping debug	25-35

enable pim6	25-35
enable pim6 debug	25-36
purge pim6	25-36
reset pim6 interface	25-37
set ipv6 mld	25-38
set ipv6 mld interface	25-39
set pim6	25-40
set pim6 bsrcandidate	25-41
set pim6 interface	25-42
set pim6 rpcandidate	25-43
show ipv6 mld	25-44
show ipv6 mld config	25-46
show ipv6 mld counters	25-47
show ipv6 mld debug	25-48
show mldsnooping	25-48
show mldsnooping counter	25-50
show pim6	25-51
show pim6 bsrcandidate	25-52
show pim6 config	25-53
show pim6 counters	25-54
show pim6 debug	25-57
show pim6 interface	25-57
show pim6 neighbour	25-59
show pim6 route	25-60
show pim6 rpcandidate	25-65
show pim6 rpset	25-66
show pim6 staterefresh	25-68
show pim6 timer	25-69

CHAPTER 26 **Generic Packet Classifier**

Introduction	26-2
Classification Functions	26-2
Configuration of Classifiers	26-3
Command Reference	26-4
create classifier	26-4
destroy classifier	26-15
set classifier	26-16
show classifier	26-24

CHAPTER 27 **Quality of Service (QoS)**

What is Quality of Service?	27-3
QoS Operations	27-3
Packet Flow through the Switch	27-4
Packet Flow for Accelerated IPv6 Traffic	27-8
QoS and the Switching Fabric	27-11
Storm Protection	27-12
Filtering Actions	27-13
QoS Entities	27-15
Classifiers	27-15
Flow Groups	27-15
Traffic Classes	27-16
QoS Policies	27-18
RED Curves	27-19
Port Groups	27-21
QoS Processes	27-23
Premarking	27-23
Bandwidth Metering	27-24
Re-Marking	27-27
Replacing Priorities on Egress	27-29
Scheduling Queues	27-31

Configuring QoS on the Switch	27-32
Rules for QoS Configuration	27-32
Overview of Procedure	27-32
Configuring QoS for Accelerated IPv6 Traffic	27-34
DiffServ Domains	27-36
Layer 2 Priority-Based QoS	27-39
Configuration Examples	27-40
Command Reference	27-42
add qos flowgroup	27-42
add qos policy	27-43
add qos portgroup port	27-44
add qos trafficclass	27-45
create qos flowgroup	27-46
create qos policy	27-48
create qos portgroup	27-53
create qos red	27-54
create qos trafficclass	27-55
delete qos flowgroup	27-61
delete qos policy	27-62
delete qos portgroup port	27-63
delete qos trafficclass	27-64
destroy qos flowgroup	27-65
destroy qos policy	27-66
destroy qos portgroup	27-66
destroy qos red	27-67
destroy qos trafficclass	27-68
disable qos debug	27-69
enable qos debug	27-69
purge qos	27-70
reset qos accelerator counters	27-70
reset qos port counters	27-71
reset qos portgroup counters	27-72
set qos accelerator policy	27-73
set qos defaultpriority	27-73
set qos dscpmap	27-74
set qos fabric queue	27-76
set qos fabric queuemap	27-77
set qos flowgroup	27-78
set qos policy	27-80
set qos port	27-85
set qos port egressqueue	27-87
set qos portgroup	27-89
set qos prio2queuemap	27-90
set qos red	27-90
set qos trafficclass	27-93
show qos accelerator counters	27-98
show qos defaultpriority	27-100
show qos dscpmap	27-101
show qos fabric	27-103
show qos flowgroup	27-104
show qos policy	27-106
show qos port	27-109
show qos port counters	27-112
show qos portgroup	27-114
show qos portgroup counters	27-115
show qos prio2queuemap	27-117
show qos red	27-118
show qos trafficclass	27-122

CHAPTER 28 Resource Reservation Protocol (RSVP)

Introduction	28-2
Overview	28-2
RSVP on the Switch	28-5
RSVP Proxy Agent	28-6
Command Reference	28-9
create rsvp proxy	28-9
destroy rsvp proxy	28-12
disable rsvp	28-12
disable rsvp debug	28-13
disable rsvp interface	28-14
disable rsvp proxy	28-15
enable rsvp	28-15
enable rsvp debug	28-16
enable rsvp interface	28-17
enable rsvp proxy	28-18
reset rsvp proxy	28-19
set rsvp interface	28-20
set rsvp proxy	28-21
show rsvp	28-23
show rsvp counter	28-24
show rsvp interface	28-26
show rsvp path	28-28
show rsvp proxy	28-29
show rsvp proxy counter	28-31
show rsvp resv	28-32

CHAPTER 29 User Authentication

Introduction	29-3
Privilege Levels	29-3
User Level	29-3
Manager Level	29-4
Security Officer Level	29-5
Remote Security Officer Level	29-6
Operating Modes	29-6
User Authentication Facility	29-8
User Authentication Database	29-10
Adding Entries to the User Authentication Database	29-10
Modifying Entries in the User Authentication Database	29-11
Choosing Passwords	29-12
Asynchronous Port Security	29-12
Telnetting from the Switch	29-13
Counters	29-13
Semipermanent Manager Port	29-13
RADIUS	29-14
TACACS	29-17
TACACS+	29-17
Token Card Authentication	29-21
Token Card Authentication on the Switch	29-21
Using Token Card with TACACS+	29-22
Using Token Card with RADIUS or TACACS	29-23
Debug Support for RADIUS, TACACS and TACACS+	29-25
S/Key and OTP One-Time Password Systems	29-25
Initialising the S/Key or OTP System on the Authentication Server	29-26
Configuring S/Key and OTP on the Switch	29-27
Command Reference	29-29
add radius server	29-29
add tacacs server	29-30

add tacplus server	29-31
add user	29-32
add user rso	29-34
delete radius server	29-35
delete tacacs server	29-36
delete tacplus server	29-36
delete user	29-37
delete user rso	29-38
disable radius debug	29-39
disable system security_mode	29-39
disable tacacs debug	29-40
disable tacplus	29-40
disable tacplus debug	29-40
disable user	29-41
disable user rso	29-41
enable	29-42
enable radius debug	29-42
enable system security_mode	29-43
enable tacacs debug	29-44
enable tacplus	29-44
enable tacplus debug	29-45
enable user	29-45
enable user rso	29-46
login	29-46
logout	29-47
purge user	29-47
reset user	29-48
set manager asyn	29-49
set password	29-49
set radius	29-50
set skey	29-51
set tacplus key	29-51
set tacplus server	29-52
set tacplus telnet	29-53
set user	29-54
show manager asyn	29-57
show radius	29-57
show radius debug	29-58
show skey	29-59
show tacacs debug	29-61
show tacacs server	29-62
show tacplus	29-63
show tacplus key	29-63
show tacplus server	29-64
show tacplus telnet	29-65
show tacplus user	29-66
show user	29-67
show user rso	29-71

CHAPTER 30 **Encryption Services for x900-24X Switches**

Introduction	30-2
Data Encryption	30-2
Symmetrical Encryption	30-3
Asymmetrical (Public Key) Encryption	30-4
Payload Encryption	30-4
Authentication	30-5
Key Exchange Algorithms	30-6

ENCO Services	30-7
Encryption	30-7
Authentication	30-8
Diffie-Hellman Key Exchange Algorithm	30-8
Key Creation and Storage	30-8
Access Control	30-10
Command Reference	30-11
create enco key	30-11
destroy enco key	30-13
disable enco compstatistics	30-14
disable enco debugging	30-14
enable enco compstatistics	30-14
enable enco debugging	30-15
reset enco counter	30-16
set enco dhpriority	30-16
set enco key	30-17
show enco	30-18
show enco channel	30-19
show enco counter	30-24
show enco debug	30-35
show enco key	30-35

CHAPTER 31 **Compression and Encryption Services for x900-48FE and AT-9900 Switches**

Introduction	31-2
Data Compression	31-2
Data Encryption	31-4
Symmetrical Encryption	31-4
Asymmetrical (Public Key) Encryption	31-5
Network Encryption	31-6
Data Authentication	31-7
Key Exchange Algorithms	31-8
ENCO on the Switch	31-8
Compression	31-9
Encryption	31-9
Authentication	31-9
Key Creation and Storage	31-10
Key Exchange	31-11
Access Control	31-12
User Applications	31-13
Command Reference	31-14
create enco key	31-14
destroy enco key	31-17
disable enco compstatistics	31-17
disable enco debugging	31-18
enable enco compstatistics	31-18
enable enco debugging	31-19
reset enco counters	31-20
set enco dhpadding	31-21
set enco dhpriority	31-21
set enco key	31-22
set enco sw	31-23
show enco	31-24
show enco channel	31-26
show enco counters	31-31
show enco debug	31-45
show enco key	31-45

CHAPTER 32 Port Authentication

Introduction	32-2
802.1x Port Based Network Access Control	32-2
The 802.1x Implementation	32-2
Port Authentication Control	32-5
The Authentication Server	32-7
The Authentication Process	32-8
802.1x Guest VLAN	32-9
MAC-Based Authentication	32-10
Implementation	32-10
The MAC-Based Authentication Process	32-11
Dynamic VLAN Assignment	32-12
Port Authentication on the Switch	32-14
Enabling Port Authentication on the Switch	32-14
Enabling Port Authentication on a Port	32-14
Reauthenticate Supplicants	32-16
Setting Global 802.1x Username and Password	32-17
Debug Port Authentication	32-17
Multi-Supplicant Configuration	32-17
Configuration Examples	32-19
Port as Authenticator	32-19
Port as Supplicant	32-20
Command Reference	32-22
activate portauth port reauthenticate	32-22
disable portauth	32-23
disable portauth debug	32-24
disable portauth port	32-25
enable portauth	32-26
enable portauth debug	32-27
enable portauth port	32-28
purge portauth port	32-34
reset portauth port	32-35
reset portauth port multimib	32-36
set portauth port	32-37
set portauth port supplicantmac	32-43
set portauth username	32-46
show portauth	32-48
show portauth counter	32-50
show portauth port	32-53
show portauth port multisupplicant	32-60
show portauth timer	32-66

CHAPTER 33 Secure Shell

Introduction	33-2
Secure Shell on the Switch	33-2
Configuring Secure Shell	33-4
Configuration Example	33-6
Command Reference	33-10
add ssh user	33-10
delete ssh session	33-11
delete ssh user	33-11
disable ssh debug	33-12
disable ssh server	33-13
disable ssh user	33-14
enable ssh debug	33-14
enable ssh server	33-15
enable ssh user	33-16
set ssh client	33-17

	set ssh server	33-18
	set ssh user	33-19
	show ssh	33-20
	show ssh counter	33-22
	show ssh session	33-29
	show ssh user	33-31
	ssh	33-33
CHAPTER 34	Secure Sockets Layer (SSL)	
	Introduction	34-2
	SSL Operations	34-2
	Phases	34-3
	SSL on the Switch	34-5
	Configuration Example	34-6
	Command Reference	34-8
	disable ssl debug	34-8
	enable ssl debug	34-8
	set ssl	34-9
	show ssl	34-10
	show ssl counters	34-12
	show ssl sessions	34-20
CHAPTER 35	Public Key Infrastructure (PKI)	
	Introduction	35-2
	Overview	35-2
	Public Keys	35-2
	Certificates	35-3
	Elements of a Public Key Infrastructure	35-5
	Certificate Validation	35-6
	Certificate Revocation Lists (CRLs)	35-6
	PKI on the Switch	35-7
	Certificate Retrieval and Storage	35-7
	Certificate Validation	35-8
	Certificate Revocation Lists	35-9
	Requesting a Certificate	35-9
	Global PKI Parameters	35-10
	Configuration Examples	35-11
	Manual Enrollment	35-12
	Automatic Enrollment with CMP	35-14
	Command Reference	35-16
	add pki certificate	35-16
	add pki crl	35-18
	add pki ldaprepository	35-19
	create pki certificate	35-20
	create pki enrollmentrequest	35-21
	create pki keyupdaterequest	35-22
	delete pki certificate	35-23
	delete pki crl	35-23
	delete pki ldaprepository	35-24
	destroy pki enrollmentrequest	35-24
	destroy pki keyupdaterequest	35-25
	disable pki debug	35-25
	enable pki debug	35-26
	purge pki	35-27
	set pki	35-27
	set pki certificate	35-28
	set pki crl	35-29
	set pki ldaprepository	35-30

set system distinguishedname	35-31
show pki	35-32
show pki certificate	35-39
show pki crl	35-42
show pki enrollmentrequest	35-45
show pki keyupdaterequest	35-47
show pki ldaprepository	35-49

CHAPTER 36 Virtual Router Redundancy Protocol (VRRP)

Introduction	36-2
Overview	36-2
Interface Monitoring	36-3
Port Monitoring	36-4
VRRP on the Switch	36-4
Adopting the VRRP IP Address	36-6
Triggers	36-8
Configuration Examples	36-9
Master with Backup Switch	36-9
Authenticated Virtual Router with No Preferred Master	36-10
Command Reference	36-11
add vrrp	36-11
add vrrp monitoredinterface	36-12
create vrrp	36-13
delete vrrp	36-16
delete vrrp monitoredinterface	36-16
destroy vrrp	36-17
disable vrrp	36-17
disable vrrp debug	36-18
enable vrrp	36-18
enable vrrp debug	36-19
set vrrp	36-19
show vrrp	36-22

CHAPTER 37 Ping Polling of Device Reachability

Introduction	37-2
Configuring Ping Polling	37-2
Triggers	37-4
Logging	37-6
Interaction with Other Protocols	37-6
Command Reference	37-7
add ping poll	37-7
delete ping poll	37-9
disable ping poll	37-10
disable ping poll debug	37-10
enable ping poll	37-11
enable ping poll debug	37-11
reset ping poll	37-12
set ping poll	37-12
show ping poll	37-15

CHAPTER 38 Ethernet Protection Switching Ring (EPSR)

Introduction	38-2
Ring Components and Operation	38-2
Fault Detection and Recovery	38-4
Fault Recovery	38-4
Restoring Normal Operation	38-5

Configuration Examples	38-6
Single Domain, Single Ring Network	38-6
Single Ring, Dual Domain Network	38-8
EPSR and Spanning Tree Operation	38-12
Command Reference	38-15
add epsr datavlan	38-15
create epsr	38-16
delete epsr datavlan	38-18
destroy epsr	38-19
disable epsr	38-20
disable epsr debug	38-21
enable epsr	38-21
enable epsr debug	38-22
purge epsr	38-23
set epsr	38-23
set epsr port	38-25
show epsr	38-26
show epsr counter	38-29
show epsr debug	38-30

CHAPTER 39 **Simple Network Management Protocol (SNMP)**

Introduction	39-3
Network Management Framework	39-3
Structure of Management Information	39-5
Names	39-6
Instances	39-6
Syntax	39-7
Access	39-7
Status	39-8
Description	39-8
The SNMP Protocol	39-8
SNMP Versions	39-8
SNMP Messages	39-9
Polling versus Event Notification	39-9
Message Format for SNMPv1 and SNMPv2c	39-10
SNMP Communities (Version v1 and v2c)	39-11
SNMPv3 Entities	39-12
SNMPv3 Message Protocol Format	39-13
SNMPv1 and SNMPv2c on the Switch	39-15
SNMP MIB Views for SNMPv1 and SNMPv2c	39-15
SNMP Communities	39-16
Configuration Example (SNMPv1 and v2)	39-19
SNMPv3 on the Switch	39-20
SNMP MIB Views for SNMPv3	39-20
SNMP Defined MIB Names	39-20
SNMP Groups	39-21
SNMP Users	39-21
SNMP Target Addresses	39-22
SNMP Target Params	39-22
Configuration Example (SNMPv3)	39-23
Command Reference	39-24
add snmp community	39-24
add snmp group	39-26
add snmp targetaddr	39-27
add snmp targetparams	39-28
add snmp user	39-29
add snmp view	39-30
create snmp community	39-31

delete snmp community	39-32
delete snmp group	39-33
delete snmp targetaddr	39-33
delete snmp targetparams	39-34
delete snmp user	39-34
delete snmp view	39-35
destroy snmp community	39-36
disable snmp	39-36
disable snmp authenticate_trap	39-36
disable snmp community	39-37
enable snmp	39-37
enable snmp authenticate_trap	39-38
enable snmp community	39-38
purge snmp	39-39
set snmp community	39-39
set snmp engineid	39-40
set snmp group	39-41
set snmp local	39-42
set snmp targetaddr	39-42
set snmp targetparams	39-43
set snmp user	39-44
show snmp	39-45
show snmp community	39-48
show snmp group	39-49
show snmp targetaddr	39-50
show snmp targetparams	39-51
show snmp user	39-52
show snmp view	39-53

CHAPTER 40 **Link Layer Discovery Protocol (LLDP)**

Introduction	40-3
Overview of LLDP	40-4
Type Length Value (TLV)	40-4
Transmission and Reception	40-6
Storing LLDP Information	40-7
Configuring LLDP	40-9
LLDP Triggers	40-10
Overview of CDP	40-12
CDP Advertisements	40-12
CDP Neighbours	40-13
Receiving and Checking Advertisements	40-13
Storing CDP Data	40-13
Configuring CDP	40-14
CDP Triggers	40-15
Command Reference	40-16
disable lldp cdp	40-16
disable lldp cdp debug	40-16
disable lldp cdp interface	40-17
disable lldp cdp ppptemplate	40-17
disable lldp managementaddress	40-18
disable lldp notifications	40-19
disable lldp port	40-20
disable lldp portdescription	40-21
disable lldp systemcapabilities	40-22
disable lldp systemdescription	40-23
disable lldp systemname	40-24
enable lldp cdp	40-24
enable lldp cdp debug	40-25

enable lldp cdp interface	40-25
enable lldp cdp ppptemplate	40-26
enable lldp managementaddress	40-27
enable lldp notifications	40-28
enable lldp port	40-29
enable lldp portdescription	40-30
enable lldp systemcapabilities	40-31
enable lldp systemdescription	40-32
enable lldp systemname	40-33
purge lldp	40-34
reset lldp	40-34
reset lldp cdp counters	40-34
reset lldp cdp table	40-35
set lldp managementaddress	40-35
set lldp notification interval	40-36
set lldp reinitdelay	40-36
set lldp txdelay	40-37
set lldp txhold	40-37
set lldp txinterval	40-38
show lldp	40-38
show lldp cdp	40-45
show lldp cdp counters	40-46
show lldp cdp entry	40-47
show lldp cdp interface	40-49
show lldp cdp neighbour	40-50
show lldp counters	40-53
show lldp memory	40-56
show lldp neighbour	40-57

CHAPTER 41 **Network Time Protocol (NTP)**

Introduction	41-2
Overview	41-2
NTP on the Switch	41-4
Configuration Example	41-4
Troubleshooting	41-7
Command Reference	41-8
add ntp peer	41-8
delete ntp peer	41-8
disable ntp	41-9
enable ntp	41-9
purge ntp	41-9
reset ntp	41-10
set ntp utcoffset	41-10
show ntp	41-11

CHAPTER 42 **Management Stacking**

Introduction	42-2
What is Stacking?	42-2
How Stacking Works	42-4
Configuring a Stack	42-6
Configuration Example	42-15
Command Reference	42-17
Host-Directed Commands (HDC)	42-17
add stack interface	42-18
delete stack interface	42-18
disable stack	42-19
disable stack debug	42-19
enable stack	42-20

	enable stack debug	42-21
	set stack authentication	42-22
	set stack stackid	42-23
	set system hostid	42-23
	show stack	42-24
CHAPTER 43	Scripting	
	Introduction	43-2
	Activating a Script at Login	43-2
	Creating Scripts	43-2
	Using Script Commands	43-3
	Using the Built-In Text Editor	43-3
	Loading from a TFTP Server	43-3
	Loading from an Asynchronous Port	43-4
	Using Scripts	43-4
	Script Parameters	43-4
	Script Control Structures	43-5
	Command Reference	43-6
	activate script	43-6
	add script	43-8
	deactivate script	43-9
	delete script	43-10
	if..then..else..endif	43-11
	set script	43-12
	show script	43-14
	wait	43-15
CHAPTER 44	Trigger Facility	
	Introduction	44-2
	Defining Triggers	44-3
	Power Supply Units (PSUs)	44-3
	Command Reference	44-5
	activate trigger	44-5
	add trigger	44-6
	create trigger	44-7
	delete trigger	44-12
	destroy trigger	44-12
	disable trigger	44-13
	enable trigger	44-14
	purge trigger	44-14
	set trigger	44-15
	show trigger	44-19
CHAPTER 45	Logging Facility	
	Introduction	45-2
	Format of Log Messages	45-3
	Secure Router Log Protocol (SRLP)	45-4
	Net Manage Message Protocol	45-4
	Output Definitions and Message Filters	45-4
	Destinations	45-6
	Configuring Output Definitions	45-8
	Configuring Message Filters	45-8
	Command Reference	45-10
	add log output	45-10
	add log receive	45-13
	create log output	45-14
	delete log output	45-18

delete log receive	45-19
destroy log output	45-19
disable log	45-19
disable log generation	45-20
disable log output	45-20
disable log reception	45-20
enable log	45-21
enable log generation	45-21
enable log output	45-21
enable log reception	45-22
flush log output	45-22
purge log	45-23
set log output	45-23
set log receive	45-29
set log utcoffset	45-30
show log	45-31
show log counter	45-37
show log output	45-39
show log queue	45-43
show log receive	45-44
show log status	45-45

CHAPTER 46 **Terminal Server**

Introduction	46-2
TTY Devices	46-2
Multiple Sessions	46-4
Accessing Telnet Hosts	46-5
Command Reference	46-7
connect	46-7
disable telnet server	46-7
disconnect	46-8
enable telnet server	46-8
reconnect	46-9
set telnet	46-9
set tty	46-11
show sessions	46-12
show telnet	46-13
show tty	46-14
telnet	46-17

CHAPTER 47 **Stream Printing for AT-9900 Switches**

Introduction	47-2
Overview	47-2
Configuring Stream Printing	47-3
Command Reference	47-4
add stream	47-4
delete stream	47-5
reset stream	47-5
set stream	47-6
show stream	47-7

CHAPTER 48 **Test Facility**

Introduction	48-2
Ethernet Port Tests	48-3
Asynchronous Port Tests	48-5
Cable Tests for AT-9900 Switches	48-6
Storage Device Tests	48-7

Command Reference	48-9
disable test cable	48-9
disable test interface	48-9
enable test cable	48-10
enable test device	48-10
enable test interface	48-11
reset test cable	48-12
reset test interface	48-12
show test	48-13
show test cable	48-19

APPENDIX A Messages

Introduction	A-3
Message Descriptions	A-4
smmm001–smmm255: Global Messages	A-4
s003256–s003999: Point-to-Point Protocol	A-14
s004256–s004999: AppleTalk	A-18
s005256–s005999: Internet Protocol (IP)	A-22
s006256–s006999: Novell IPX	A-35
s018256–s018999: TEST Module	A-38
s021256–s021999: Stream Printing	A-41
s022256–s022999: TCP	A-41
s023256–s023999: Ethernet Driver	A-41
s031256–s031999: FLASH Driver	A-42
s033256–s033999: TELNET	A-43
s034256–s034999: System	A-44
s035256–s035999: Command Processor	A-50
s036256–s036999: TTY	A-51
s039256–s039999: BOOTP	A-54
s040256–s040999: Network Time Protocol (NTP)	A-54
s043256–s043999: PORT Driver	A-56
s045256–s045999: User Authentication Facility	A-59
s048256–s048999: LOADER	A-62
s048256–s048999: LOADER	A-62
s049256–s049999: INSTALL	A-66
s050256–s050999: Open Shortest Path First (OSPF)	A-69
s051256–s051999: RADIUS	A-73
s052256–s052999: Generic Routing Encapsulation (GRE)	A-74
s053256–s053999: Trigger Facility	A-75
s054256–s054999: Scripting	A-77
s056256–s056999: File Subsystem	A-78
s057256–s057999: Logging Facility	A-81
s058256–s058999: PING	A-84
s059256–s059999: Simple Network Management Protocol (SNMP)	A-86
s062256–s062999: Security Associations	A-89
s066256–s066999: Internet Protocol version 6 (IPv6)	A-90
s067256–s067999: Layer 2 Tunnelling Protocol (L2TP)	A-94
s070256–s070999: Dynamic Host Configuration Protocol (DHCP)	A-94
s073256–s073999: Encryption	A-97
s074256–s074999: Star Key Management	A-99
s075256–s075999: Secure Shell	A-100
s076256–s076999: Resource Reservation Protocol (RSVP)	A-101
s081256–s081999: IP Security (IPsec)	A-102
s082256–s082999: ISAKMP/IKE	A-107
s083256–s083999: Finger	A-108
s084256–s084999: HTTP	A-109
s087256–s087999: Layer 3 Switching	A-109
s088256–s088999: Virtual Router Redundancy Protocol (VRRP)	A-124

s089256–s089999: VLANs	A-125
s091256–s091999: GARP	A-137
s092256–s092999: Spanning Tree Protocol (STP)	A-140
s093256–s093999: GUI	A-143
s094256–s094999: Open Systems Interconnection (OSI)	A-144
s095256–s095999: Public Key Infrastructure (PKI)	A-146
s096256–s096999: Lightweight Directory Access Protocol (LDAP)	A-147
s097256–s097999: Protocol Independent Multicast (PIM)	A-151
s099256–s099999: Quality of Service (QoS)	A-154
s100256–s100999: Generic Classifier	A-157
s103256–s103999: Border Gateway Protocol version 4 (BGP-4)	A-159
s106256–s106999: Compact Flash	A-165
s112256–s112999: S/Key	A-168
s117256–s117999: Dynamic Host Configuration Protocol v6 (DHCP6)	A-168
s118256–s118999: Port Authentication	A-170
s120256–s120999: Management Stacking	A-172
s122256–s122999: Link Aggregation Control Protocol (LACP)	A-173
s124256–s124999: Multiple Spanning Tree Protocol (MSTP)	A-173
s127256–s127999: IPv6 Accelerator	A-176
s132256–s132999: Link Layer Discovery Protocol	A-176
s136256–s136999: Ethernet Protection Switching Ring (EPSR)	A-177
s137256–s137999: DHCP Snooping	A-180
s141256–s141999: MAC-Forced Forwarding (MACFF)	A-181

APPENDIX B Reference Tables

Module Identifiers and Names	B-2
Flash File System Message Codes	B-7
Log Message Types and Subtypes	B-9

APPENDIX C SNMP MIBs

Introduction	C-3
Allied Telesis Enterprise MIB	C-4
Products Subtree	C-5
AT Router Subtree	C-9
Objects Group	C-9
traps Group	C-16
sysinfo Group	C-16
arInterfaces Group	C-17
Modules Group	C-18
MIB-II MIB	C-26
Implementation	C-27
Interfaces Group MIB	C-28
Implementation	C-29
IP Forwarding Table MIB	C-30
Implementation	C-30
Ethernet-like Interface Types MIB	C-31
Implementation	C-31
Medium Attachment Unit (MAU) MIB	C-32
Implementation	C-33
Bridge MIB	C-34
Implementation	C-35
Virtual Bridge (VLAN) MIB	C-36
Implementation	C-36
Link Aggregation MIB	C-38
Implementation	C-39
Port Access Control MIB	C-40
Implementation	C-41

RMON MIB C-42
 Implementation C-43
Host Resources MIB C-44
 Implementation C-45
SNMP v3 MIBs C-47
 Implementation C-47
Border Gateway Protocol v4 (BGP-4) MIB C-48
 Implementation C-49
Link Layer Discovery Protocol (LLDP) MIB C-50
 Implementation C-50
State and Topology Change Traps C-51

Glossary

Index

