

AR725
AR745
AR750S
AR750S-DP
AR770S

AlliedWare OS Software Reference for Software Version 2.9.1
Document Number C613-03125-00 REV A.

© 2007 Allied Telesis, Inc. All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

All company names, logos, and product designs that are trademarks or registered trademarks are the property of their respective owners.

Contents

About this Software Reference

Introduction	lix
Structure of this Software Reference	lix
Intended Audience	lxiv
Conventions	lxiv
Command Descriptions	lxv
Where To Find More Information	lxvii
Obtaining Copies of Internet Protocols and Standards	lxviii
Publicly Accessible Documents	lxviii
Allied Telesis Offices and Locations	lxviii
Reader's Comments	lxix

Command Summary

CHAPTER 1 Getting Started

Establishing a Management Session with the Router	1-2
Assigning an IP Address	1-3
About Setting Routes	1-3
Checking Connections with PING	1-3
Changing a Password	1-4
Using Command Line Help	1-4
Using GUI Help	1-5
Special Feature Licences	1-5
Setting System Parameters	1-6
Saving Configurations Entered with the CLI	1-6
Saving Configurations Entered with the GUI	1-7
Troubleshooting Traffic Flow	1-7
Software Upgrades	1-8
SNMP and MIBs	1-8
To Avoid Problems	1-9
For More Information	1-10

CHAPTER 2 Using the Command Line Interface (CLI)

Introduction	2-2
Parts of a Command	2-3
Entering a Command	2-4
Shortcuts	2-4
Command Sets	2-6
What is Valid Syntax?	2-7
What Commands does a Feature Support?	2-9

Editing Commands	2-10
Recalling Commands	2-11
Command Reference	2-12
add alias	2-12
delete alias	2-13
help	2-13
set command assignmentoperator	2-14
set help	2-15
show alias	2-15
show command history	2-16

CHAPTER 3 **Using the Graphical User Interface (GUI)**

Introduction	3-2
What is the GUI?	3-2
Accessing the Router via the GUI	3-3
Browser and PC Setup	3-3
Establishing a Connection to the Router	3-5
Secure Access	3-11
System Status and System Hardware Details	3-11
Using the GUI: Navigation and Features	3-12
The Quick Start Menu on AR750S and AR750S-DP Routers	3-12
The Configuration Menu	3-13
Using Configuration Pages	3-14
The Management Menu	3-17
The Monitoring Menu	3-17
The Monitoring Menu	3-18
The Diagnostics Menu	3-19
Combining GUI and CLI Configuration	3-19
Troubleshooting	3-20
Enabling and Disabling the GUI	3-20
Deleting Temporary Files	3-20
Accessing the Router via the GUI	3-21
Command Reference	3-23
disable gui	3-23
enable gui	3-23
reset gui	3-24
show gui	3-25

CHAPTER 4 **Configuring and Monitoring the System**

Introduction	4-3
System Identification	4-3
Time and Date	4-4
Timezone and UTC Offset	4-5
Monitoring Router Operations	4-7
Monitoring the Power Supply	4-10
Emailing Alerts from the Router	4-11
Configuration Examples	4-12
Command Reference	4-14
activate cpu extended	4-14
clear summertime	4-15
clear timezone	4-16
delete mail	4-16
disable cpu extended	4-17
disable debug active	4-18
disable mail debug	4-18
disable summertime	4-19
dump	4-20
enable cpu extended	4-21

enable summertime	4-22
enable mail debug	4-22
mail	4-23
modify	4-25
reset cpu utilisation	4-26
reset mail	4-26
set mail	4-27
set summertime	4-28
set system contact	4-30
set system location	4-31
set system name	4-32
set system rpsmonitor	4-33
set time	4-34
set timezone	4-35
show buffer	4-36
show cpu	4-40
show debug	4-42
show debug active	4-44
show exception	4-49
show mail	4-50
show startup	4-51
show summertime	4-52
show system	4-53
show system environmental	4-56
show system serialnumber	4-57
show system startup	4-57
show time	4-58
show timezone	4-59

CHAPTER 5 **Managing Configuration Files and Software Versions**

Managing Configuration Files	5-3
Loading Files onto the Router	5-5
Loading from a Trivial File Transfer Protocol (TFTP) Server	5-5
Loading from a Web Server	5-6
Loading from a Lightweight Directory Access Protocol (LDAP) Server	5-7
Loading from a Remote Device using Secure Copy	5-8
Additional Loader Commands	5-9
Uploading Files from the Router	5-10
Using HTTP	5-10
Using TFTP and ZMODEM	5-12
Using Secure Copy	5-12
Software Upgrades	5-14
Upgrade Overview	5-14
Install Process	5-15
Filenames	5-16
Licencing	5-16
Patches	5-18
Example: Upgrading to new software	5-18
Example: Upgrading to a new patch file	5-20
Upgrading the GUI	5-20
Command Reference	5-23
create config	5-23
delete install	5-24
disable feature	5-25
disable http debug	5-26
disable http server	5-26
disable ldap debug	5-27
disable release	5-27

enable feature	5-28
enable http debug	5-29
enable http server	5-29
enable ldap debug	5-30
enable release	5-31
load	5-32
purge ldap	5-37
reset http server	5-38
reset loader	5-38
restart	5-39
set config	5-40
set http server	5-41
set install	5-42
set loader	5-44
show config	5-48
show feature	5-50
show http client	5-52
show http debug	5-53
show http server	5-54
show http server session	5-55
show install	5-56
show ldap	5-57
show ldap request	5-58
show loader	5-60
show patch	5-62
show release	5-63
upload	5-64

CHAPTER 6 **Managing the File System**

Introduction	6-3
File Naming Conventions	6-3
Long Filenames in Releases	6-4
Working with Files	6-5
Built-In Editor	6-6
Using Wildcards	6-6
Sending Output to a Text File	6-7
Flash Memory	6-8
The Flash File System (FFS)	6-8
If You Clear Flash Memory Completely	6-10
Non-Volatile Storage (NVS)	6-11
CompactFlash (CFlash) Cards	6-11
The FAT File System	6-11
Command Reference	6-14
activate flash compaction	6-14
add cflash dir	6-15
add file	6-16
clear cflash	6-17
clear flash totally	6-17
clear nvs totally	6-18
copy	6-19
create file	6-20
delete cflash dir	6-21
delete file	6-22
delete nvs	6-23
disable cflash test	6-23
disable flash autowrite	6-24
dump nvs	6-25
edit	6-27

enable cflash test	6-30
enable flash autowrite	6-30
modify nvs	6-31
purge file translationtable	6-32
rename	6-33
reset file permanentredirect	6-34
set cflash dir	6-35
show cflash	6-36
show cflash counters	6-37
show cflash file	6-38
show cflash test	6-39
show ffile	6-41
show file	6-43
show file permanentredirect	6-46
show flash	6-47
show flash physical	6-49
show nvs	6-50
show nvs free	6-51

CHAPTER 7 **Overview of Physical and Layer 2 Interfaces**

Introduction	7-2
Interfaces	7-2
Naming Interfaces	7-3
Ethernet Ports	7-4
Asynchronous Port	7-4
Asynchronous Call Control (ACC)	7-5
Synchronous Ports	7-6
Switch Ports	7-6
Port Speed and Duplex Mode	7-6
Packet Storm Protection	7-7
Virtual LANs	7-8
Point to Point Protocol (PPP)	7-9
Dynamic PPP Interfaces and PPP Templates	7-9
PPPoE	7-10
Frame Relay	7-10
Integrated Services Digital Network (ISDN)	7-13
BRI Versus PRI	7-13
Configuring the Basic Rate Interface	7-13
Configuring the Primary Rate Interface	7-13
Default Setup	7-14
Testing the BRI or PRI PIC	7-14
Ordering ISDN in the USA and Canada	7-14
Connecting to a Leased Line Circuit	7-15

CHAPTER 8 **Switching**

Introduction	8-3
Switch Ports	8-4
Enabling and Disabling Switch Ports	8-4
Port Speed and Duplex Mode	8-4
Packet Storm Protection	8-6
Virtual Local Area Networks (VLANs)	8-6
Dynamic VLAN Assignment	8-7
802.1x Guest VLAN	8-8
VLAN Tagging	8-8
VLAN Membership using VLAN Tags	8-11
VLAN Membership of Untagged Packets	8-12
Setting Up VLANs	8-13
Summary of VLAN Tagging Rules	8-14

The Layer 2 Switching Process	8-15
The Ingress Rules	8-15
The Learning Process	8-16
The Forwarding Process	8-17
Quality of Service (QoS)	8-17
The Egress Rules	8-18
Triggers	8-18
Configuration Examples	8-20
One Router to Extend a LAN	8-20
VLAN Using Untagged Ports	8-20
VLAN Using Tagged Ports	8-22
Command Reference	8-24
add vlan port	8-24
create vlan	8-26
delete vlan port	8-27
destroy vlan	8-28
disable switch ageingtimer	8-28
disable switch debug	8-29
disable switch learning	8-29
disable switch port	8-30
disable vlan debug	8-30
enable switch ageing timer	8-31
enable switch debug	8-32
enable switch learning	8-33
enable switch port	8-33
enable vlan debug	8-34
reset switch	8-34
reset switch port	8-35
set switch ageingtimer	8-36
set switch port	8-37
set switch qos	8-40
set vlan port	8-41
show switch	8-42
show switch debug	8-43
show switch counter	8-44
show switch fdb	8-46
show switch port	8-47
show switch port counter	8-49
show switch qos	8-53
show vlan	8-54
show vlan debug	8-56

CHAPTER 9 Interfaces

Introduction	9-3
Naming Interfaces	9-4
Simple Interface Names	9-4
Fully Qualified Interface Names	9-5
Ethernet	9-7
Encapsulations	9-8
Configuration	9-10
Synchronous Interfaces	9-12
Encapsulations	9-13
Modem Control Signals	9-13
Configuration	9-14

Asynchronous Interfaces	9-16
Encapsulations	9-17
Configuration	9-17
Session Timeout	9-20
Connecting a Modem to the Asynchronous Port	9-21
MIB Counters	9-21
Autobauding	9-22
Making Asynchronous Ports Respond More Quickly	9-23
Testing Serial Data Circuits	9-23
Displaying Interfaces	9-24
Interface Link Traps	9-24
Managing Interfaces with SNMP	9-25
Command Reference	9-26
connect asyn	9-26
disable asyn	9-27
disable interface debug	9-28
disable interface linktrap	9-29
disable syn	9-30
disable syn debug	9-30
enable asyn	9-31
enable interface debug	9-31
enable interface linktrap	9-32
enable syn	9-33
enable syn debug	9-33
purge asyn	9-34
reset asyn	9-34
reset asyn counter	9-35
reset asyn history	9-36
reset eth	9-36
reset eth counters	9-37
reset interface counters	9-37
reset syn	9-38
reset syn counters	9-39
set asyn	9-40
set eth linkup	9-45
set eth maxbandwidth	9-45
set eth speed	9-46
set interface mtu	9-48
set interface traplimit	9-49
set syn	9-50
show asyn	9-53
show eth configuration	9-61
show eth counters	9-62
show eth macaddress	9-69
show eth receive	9-70
show eth state	9-71
show interface	9-73
show syn	9-79
show syn counter	9-81

CHAPTER 10 Integrated Services Digital Network (ISDN)

Introduction	10-4
Basic Rate Access	10-4
Primary Rate Access	10-7
ISDN on the Router	10-13
BRI Physical Layer	10-15
Configuring and Controlling the Basic Rate Interface	10-15
Examining the Status of the Basic Rate Interface	10-17
Monitoring Operation of the Basic Rate Interface	10-19
PRI Physical Layer	10-19
Configuring and Controlling the Primary Rate Interface	10-20
Examining the Status of the Primary Rate Interface	10-22
Monitoring Operation of the Primary Rate Interface	10-24
LAPD	10-25
BRI Versus PRI	10-25
Operation	10-25
Packet mode support	10-26
Fault Finding	10-26
Default Setup	10-27
Addressing	10-27
Frame Control Fields	10-28
Non-Associated Signalling	10-29
Q.931	10-31
Service Profile Identifiers (SPIDs)	10-32
Profiles That Require SPIDs	10-32
Definition of SPIDs	10-33
SPID Initialisation	10-33
SPID Debugging	10-34
Automatic ISDN Switch Detection	10-36
Call Control	10-37
Call Logging	10-41
Using a Domain Name Server	10-42
Slotted Interface Numbering	10-42
Always On/Dynamic ISDN (AODI)	10-43
Components of AODI	10-43
Configuring AODI	10-44
Data Over Voice	10-46
Configuration Examples	10-47
A Basic ISDN Setup	10-47
Configuring ISDN Dial on Demand	10-56
Configuring ISDN Bandwidth on Demand	10-56
Refining the ISDN Setup	10-57
Command Reference	10-59
activate isdn call	10-59
activate q931 aspid	10-60
activate q931 message	10-61
add isdn call	10-62
add isdn clilist	10-68
add isdn domainname	10-68
add lapd tei	10-69
add lapd xspid	10-69
add lapd xtei	10-70
deactivate isdn call	10-71
delete isdn call	10-71
delete isdn clilist	10-72
delete isdn domainname	10-72
delete lapd tei	10-73
delete lapd xspid	10-74
delete lapd xtei	10-75

disable bri ctest	10-75
disable bri debug	10-76
disable bri test	10-76
disable isdn call	10-77
disable isdn log	10-78
disable pri ctest	10-78
disable pri debug	10-79
disable pri test	10-79
disable q931 debug	10-80
enable bri ctest	10-82
enable bri debug	10-83
enable bri test	10-84
enable isdn call	10-86
enable isdn log	10-86
enable pri ctest	10-87
enable pri debug	10-88
enable pri test	10-89
enable q931 aspid	10-90
enable q931 debug	10-91
reset bri	10-96
reset bri counter	10-96
reset pri	10-97
reset pri counter	10-98
reset q931	10-99
set bri	10-100
set isdn call	10-102
set isdn domainname	10-108
set isdn log	10-108
set lapd	10-109
set pri	10-111
set q931	10-115
set system territory	10-118
show bri configuration	10-119
show bri counter	10-121
show bri ctest	10-128
show bri debug	10-129
show bri state	10-130
show bri test	10-134
show isdn call	10-137
show isdn clilist	10-141
show isdn domainname	10-142
show isdn log	10-143
show lapd	10-145
show lapd count	10-148
show lapd state	10-149
show pri configuration	10-150
show pri counter	10-151
show pri ctest	10-161
show pri debug	10-162
show pri state	10-163
show pri test	10-169
show q931	10-171
show q931 spid	10-174

CHAPTER 11 Time Division Multiplexing (TDM)

Introduction	11-2
E1/T1 Time Division Multiplexing	11-3
Static E1/T1 TDM Versus ISDN Calling	11-4
BRI Time Division Multiplexing	11-5
Configuration Examples	11-5
Configuring static E1/T1 TDM on a PRI	11-5
Configuring TDM on a BRI	11-7
Command Reference	11-8
add tdm	11-8
create tdm	11-9
delete tdm	11-10
destroy tdm	11-11
purge tdm	11-11
show tdm	11-12

CHAPTER 12 X.25

Introduction	12-3
LAPB	12-4
DCE Mode	12-4
DTE Mode	12-5
DTE Addresses	12-7
X.25 DCE Route Mapping	12-7
Encapsulations	12-8
Configuring LAPB	12-10
Configuring an Interface for LAPB	12-10
Configuring LAPB Interface Parameters	12-10
Configuring X.25 DCE	12-11
Configure an LAPB Interface	12-11
Configure the X.25 DCE Interface	12-11
Configuring DTE Addresses on DCEs	12-12
Configuring X.25 Route Mapping	12-13
Configuring X.25 DCE TCP Keepalive parameters	12-13
Displaying and Debugging X.25 DCE Interfaces	12-13
Configuring X.25 DTE	12-14
Configure an LAPB Interface	12-14
Configure the X.25 DTE Interface	12-14
Configuring Call Parameter Entries	12-15
Configuring Permanent Virtual Circuits	12-15
Hunt Groups	12-16
Configuration Examples	12-19
A Basic X.25 Setup	12-19
An Extended X.25 Setup	12-25
X.25 over ISDN D Channel	12-30
X.25 Hunt Groups	12-31
Command Reference	12-38
activate miox circuit	12-38
activate x25c test	12-39
add miox circuit	12-40
add x25c dteaddress	12-42
add x25c huntgroup	12-43
add x25c route	12-44
add x25t cpar	12-45
create lapb	12-46
create x25c	12-48
create x25c huntgroup	12-50
create x25t	12-51
deactivate miox circuit	12-53

delete miox circuit	12-54
delete x25c dteaddress	12-55
delete x25c huntgroup	12-56
delete x25c route	12-57
delete x25t cpar	12-57
destroy lapb	12-58
destroy x25c	12-58
destroy x25c huntgroup	12-59
destroy x25t	12-59
disable miox circuit	12-60
disable x25c debug	12-60
enable miox circuit	12-61
enable x25c debug	12-61
reset lapb	12-62
reset x25t	12-62
set lapb	12-63
set miox	12-64
set miox circuit	12-65
set x25c	12-67
set x25c huntgroup	12-69
set x25c tcpkeepalive	12-70
set x25t	12-71
set x25t cpar	12-73
show lapb	12-74
show miox	12-79
show miox count	12-80
show miox circuit	12-82
show x25c	12-86
show x25c counter	12-88
show x25c dteaddress	12-91
show x25c huntgroup	12-92
show x25c path	12-94
show x25c route	12-95
show x25c state	12-96
show x25c tcpkeepalive	12-97
show x25t	12-98
show x25t cpar	12-103

CHAPTER 13 **Frame Relay**

Introduction	13-3
Encapsulation	13-4
Data Link Connections	13-6
The Local Management Interface (LMI)	13-7
Logical Interfaces	13-8
Disabling or Resetting a Frame Relay Interface	13-8
Disabling or Resetting a Frame Relay DLC	13-9
Slow-Start Mechanism	13-10
Congestion Detection	13-11
Detection using CLLM messages	13-11
Detection using BECN bits	13-11
Congestion Control Scheme	13-12
Frame Relay on the Router	13-14
Encryption and Compression over Frame Relay	13-15
Troubleshooting Frame Relay Networks	13-16
Configuring Frame Relay	13-17
Configuration Examples	13-20
Frame Relay without an LMI	13-20
Frame Relay with an LMI	13-24
Using Frame Relay Logical Interfaces	13-26

Command Reference	13-27
add framerelay dlc	13-27
add framerelay li	13-28
create framerelay	13-29
delete framerelay dlc	13-32
delete framerelay li	13-32
destroy framerelay	13-33
disable framerelay	13-33
disable framerelay congestioncontrol	13-34
disable framerelay debug	13-34
disable framerelay dlc	13-35
disable framerelay dlc debug	13-36
disable framerelay li debug	13-37
disable framerelay slowstart	13-38
enable framerelay	13-38
enable framerelay congestioncontrol	13-39
enable framerelay debug	13-40
enable framerelay dlc	13-41
enable framerelay dlc debug	13-42
enable framerelay li debug	13-44
enable framerelay slowstart	13-44
reset framerelay	13-45
reset framerelay dlc	13-46
set framerelay	13-47
set framerelay dlc	13-50
show framerelay	13-52
show framerelay dlc	13-62
show framerelay li	13-70

CHAPTER 14 **Point-to-Point Protocol (PPP)**

Introduction	14-3
The Point-to-Point Protocol	14-3
Encapsulation	14-3
Control Protocols	14-5
LCP Options	14-6
Configuring PPP	14-7
Link Quality Management	14-9
Multilink PPP	14-9
Bandwidth Allocation Protocol	14-10
Dial-On-Demand	14-11
Link Backup	14-11
Bandwidth on Demand	14-13
Always On/Dynamic ISDN (AODI)	14-14
Synchronous Dialling	14-15
PPP Over Ethernet	14-16
PPP over Ethernet Client Mode	14-17
PPP over Ethernet Access Concentrator Mode	14-17
Templates	14-18
PPP Callback	14-19
Magic Number	14-21
MSS Clamping	14-21
Overview	14-21
Example	14-22
Authentication Protocols	14-22
Password Authentication Protocol (PAP)	14-23
Challenge-Handshake Authentication Protocol (CHAP)	14-23
Router configuration	14-25
Assigning IP Addresses	14-28

PPP Link Management	14-29
Configuring PPP Control Protocols	14-31
Debugging PPP Links	14-31
Configuration Examples	14-35
Configuring a PPP link	14-35
Multilink Aggregation	14-38
Dial-on-Demand Links	14-40
Link Quality Monitoring	14-40
Compression and Encryption	14-41
Leased Line Backup	14-42
Bandwidth on Demand	14-44
Bandwidth on Demand with Leased Line Circuits and ISDN	14-46
Command Reference	14-49
activate ppp	14-50
add ppp	14-51
add ppp acservice	14-55
create ppp	14-57
create ppp template	14-64
delete ppp	14-71
delete ppp acservice	14-72
destroy ppp	14-73
destroy ppp template	14-73
disable ppp	14-74
disable ppp accessconcentrator	14-74
disable ppp debug	14-75
disable ppp template debug	14-76
enable ppp	14-77
enable ppp accessconcentrator	14-78
enable ppp debug	14-79
enable ppp template debug	14-81
purge ppp	14-82
reset ppp	14-83
set ppp	14-84
set ppp acservice	14-91
set ppp template	14-93
show ppp	14-99
show ppp config	14-100
show ppp count	14-106
show ppp debug	14-119
show ppp idletimer	14-120
show ppp limits	14-121
show ppp multilink	14-122
show ppp nameserver	14-124
show ppp pppoe	14-125
show ppp template	14-127
show ppp txstatus	14-131
show ppp utilisation	14-133

CHAPTER 15 Bridging

Introduction	15-3
Bridging on the Router	15-4
Remote Bridging	15-5
Virtual Ports and Switch Ports	15-5
VLAN-to-WAN Bridging	15-7
Internal Representation of the VLAN-to-WAN Bridge	15-7
The VLAN-to-WAN Bridging Process	15-8
LAN-to-LAN Bridging	15-8
WAN-to-WAN Bridging	15-10
Internal Representation of the WAN-to-WAN Bridge	15-11

Bridge Learning and Forwarding	15-11
The Learning Process	15-12
The Forwarding Process	15-12
Filtering	15-14
Telnet to a Router Bridging IP	15-15
Spanning Tree Protocol	15-15
Electing the Root Bridge and Designated Bridge	15-16
Configuration Examples	15-17
A Basic LAN Bridge Setup	15-17
Bridging in a Meshed Network with Spanning Tree	15-19
A Bridge Setup Using Filters	15-20
VLAN-to-WAN Bridge Configuration	15-23
Command Reference	15-25
add bridge filter	15-25
add bridge group	15-28
add bridge port	15-29
add bridge protocol	15-30
add bridge station	15-33
add vlan bridge	15-34
delete bridge filter	15-35
delete bridge group	15-35
delete bridge port	15-36
delete bridge protocol	15-36
delete bridge station	15-37
delete vlan bridge	15-38
disable bridge	15-38
disable bridge learning	15-38
disable bridge spanning	15-39
enable bridge	15-39
enable bridge learning	15-39
enable bridge spanning	15-40
purge bridge	15-40
reset bridge	15-41
set bridge ageingtimer	15-41
set bridge filter	15-42
set bridge group	15-44
set bridge port	15-45
set bridge protocol	15-46
set bridge spanning	15-47
set bridge stripvlantag	15-48
show bridge	15-49
show bridge counter	15-52
show bridge counter	15-55
show bridge filter	15-58
show bridge group	15-61
show bridge port	15-63
show bridge protocol	15-66
show bridge spanning	15-67
show bridge station	15-69

CHAPTER 16 Synchronous Tunnelling

Introduction	16-2
Synchronous Tunnelling on the Router	16-2
Configuration Example	16-3
Command Reference	16-4
add stt	16-5
delete stt	16-6
reset stt	16-6
set stt	16-7
show stt	16-8

CHAPTER 17 Transaction Packet Assembler Disassembler (TPAD)

Introduction	17-2
The TPAD Protocol	17-3
TPAD on the Router	17-5
TPAD Chip and PIN Authentication	17-7
The Hayes Standard AT Command Set on the Router	17-8
TPAD Fast Disconnect	17-9
Configuration Examples	17-10
Configuring X.25 Interfaces	17-10
Creating TPAD Instances	17-12
Troubleshooting TPAD	17-14
Command Reference	17-17
add tpad	17-17
create tpad	17-18
delete tpad	17-21
destroy tpad	17-21
disable tpad	17-22
disable tpad debug	17-22
enable tpad	17-23
enable tpad debug	17-23
reset tpad	17-24
set tpad	17-25
show tpad	17-28
show tpad connections	17-31
show tpad counter	17-33

CHAPTER 18 Asynchronous Call Control

Introduction	18-2
Call Definitions	18-2
Authenticating Incoming Calls	18-5
RADIUS Authentication	18-5
RADIUS Accounting	18-6
Using Modem Scripts	18-7
Bidirectional Calls	18-9
Interface with Higher Layers	18-9
Using a Domain Name Server	18-10
Configuration Examples	18-11
Defining an ACC Call	18-11
Assigning IP Addresses	18-12
Dial-in IPX	18-13
Router-to-Router PPP	18-13
Command Reference	18-16
activate acc call	18-16
add acc call	18-17
add acc domainname	18-20
add acc script	18-21
deactivate acc call	18-22
delete acc call	18-23
delete acc domainname	18-23
delete acc script	18-24
disable acc call	18-24
disable acc call debug	18-25
enable acc call	18-25
enable acc call debug	18-26
purge acc	18-26
purge acc script	18-27
set acc call	18-28
set acc call asyn	18-31

set acc script	18-32
show acc	18-34
show acc call	18-35
show acc domainname	18-38
show acc script	18-39

CHAPTER 19 **Layer Two Tunnelling Protocol (L2TP)**

Introduction	19-3
Overview of L2TP	19-3
Overview of L2TP on the Router	19-5
Enabling L2TP on the Router	19-6
Accepting Incoming Calls as an LAC	19-6
Accepting L2TP Sessions as an LNS	19-7
Creating a Call from an LNS to an LAC	19-8
Monitoring L2TP Connections	19-10
Debugging L2TP Connections	19-10
Reflecting TOS onto L2TP-Tunnelled Packets	19-11
Configuration Examples	19-12
Inter-Router Tunnels	19-12
Simple Dial-In System	19-14
Configure L2TP to Tunnel PPPoE Sessions	19-15
Command Reference	19-18
activate l2tp call	19-18
add l2tp call	19-19
add l2tp ip	19-22
add l2tp password	19-24
add l2tp user	19-25
deactivate l2tp call	19-28
delete l2tp call	19-28
delete l2tp ip	19-29
delete l2tp password	19-30
delete l2tp user	19-31
disable l2tp	19-32
disable l2tp debug	19-33
disable l2tp server	19-34
enable l2tp	19-34
enable l2tp debug	19-35
enable l2tp server	19-39
reset l2tp counter	19-39
set l2tp call	19-40
set l2tp checksum	19-43
set l2tp filter	19-43
set l2tp password	19-44
set l2tp user	19-45
show l2tp	19-48
show l2tp call	19-50
show l2tp counter	19-52
show l2tp ip	19-55
show l2tp tunnel	19-56
show l2tp tunnel call	19-59
show l2tp tunnel call counter	19-63
show l2tp tunnel counter	19-65
show l2tp user	19-67

CHAPTER 20 Overview of Routing

Introduction	20-2
IP Networks	20-2
Configuration Example	20-2
OSPF	20-5
Routing Information Protocol (RIP)	20-6
IP Multicasting	20-6
Configuring IGMP	20-7
Configuring Multicast Routing	20-7
Novell IPX	20-8
AppleTalk	20-10

CHAPTER 21 Internet Protocol (IP)

Introduction	21-5
IP Packets	21-5
Addressing	21-7
Subnets	21-9
Assigning an IP Address	21-10
Multihoming	21-11
Local Interfaces	21-11
Address Resolution Protocol (ARP)	21-13
Static ARP Entries	21-13
Adding Static ARP Entries with Multicast MAC Addresses	21-13
Timing Out ARP Entries	21-14
Deleting ARP Entries	21-16
Proxy ARP	21-17
MAC Address Logging	21-17
Waiting for a Response to an ARP Request	21-18
DHCP Client	21-18
ICMP	21-19
Routing	21-20
Types of Routes	21-20
The Routing Table	21-20
Configuring Static Routes	21-21
Caching Routes	21-21
Dynamic Routing Protocols	21-22
Setting Preference of Dynamically-Learned Routes	21-22
Displaying Route Information	21-23
Equal Cost Multipath Routing	21-23
Routing Information Protocol (RIP)	21-24
Open Shortest Path First (OSPF)	21-24
Border Gateway Protocol (BGP)	21-24
Metrics	21-24
OSPF Auto Cost Calculation	21-24
Policy-Based Routing	21-25
Priority-Based Routing	21-26
Route Templates	21-27
VLAN Tagging on Eth Interfaces	21-28
Domain Name System (DNS)	21-29
Usage of Domain Name Servers	21-29
Configuring Domain Name Servers	21-31
DNS Caching	21-33
Dynamic DNS Client	21-33
Named Hosts	21-34
Traffic Filters	21-35
SNMP	21-37
Control and Debug Commands	21-37
Ping and Trace Route	21-38
Ping	21-38
Trace Route	21-39

Finger	21-39
Security Options	21-41
Security Associations	21-41
Broadcast Forwarding	21-43
IP Multicasting	21-46
Static Multicast Forwarding	21-46
Network Address Translation (NAT)	21-47
PPTP Pass Through	21-50
Remote Address Assignment	21-50
IP Address Pools	21-51
Configuration Examples	21-53
Basic IP Setup over PPP	21-53
Configuring IP Filters	21-56
Troubleshooting	21-61
No Route Exists to the Remote Router	21-61
Getting an IP Address from DHCP	21-62
Telnet Fails	21-63
Command Reference	21-64
activate ddns update	21-64
add ip arp	21-65
add ip dns	21-67
add ip filter	21-69
add ip helper	21-77
add ip host	21-78
add ip interface	21-79
add ip local	21-84
add ip nat	21-85
add ip route	21-88
add ip route template	21-91
add ip sa	21-93
create ip pool	21-94
delete ip arp	21-94
delete ip dns	21-95
delete ip filter	21-96
delete ip helper	21-97
delete ip host	21-98
delete ip interface	21-99
delete ip local	21-100
delete ip nat	21-101
delete ip route	21-103
delete ip route template	21-104
delete ip sa	21-105
delete tcp	21-106
destroy ip pool	21-106
disable ddns	21-106
disable ddns debug	21-107
disable ip	21-107
disable ip arp agepoll	21-108
disable ip arp log	21-108
disable ip debug	21-108
disable ip dnsrelay	21-109
disable ip echoreply	21-109
disable ip fofilter	21-110
disable ip forwarding	21-111
disable ip helper	21-111
disable ip icmpreply	21-112
disable ip interface	21-113
disable ip macdisparity	21-114
disable ip nat	21-115

disable ip remoteassign	21-116
disable ip route	21-116
disable ip spoofcheck	21-117
disable ip srcroute	21-117
disable tcp debug	21-118
disable telnet server	21-118
enable ddns	21-119
enable ddns debug	21-119
enable ip	21-120
enable ip arp agepoll	21-120
enable ip arp log	21-120
enable ip debug	21-121
enable ip dnsrelay	21-122
enable ip echoreply	21-122
enable ip fofilter	21-123
enable ip forwarding	21-124
enable ip helper	21-124
enable ip icmpreply	21-125
enable ip interface	21-126
enable ip macdisparity	21-127
enable ip nat	21-128
enable ip remoteassign	21-129
enable ip route	21-129
enable ip spoofcheck	21-130
enable ip srcroute	21-130
enable tcp debug	21-131
enable telnet server	21-131
finger	21-132
ping	21-133
purge ip	21-135
reset ip	21-136
reset ip counter	21-136
reset ip interface	21-137
set ddns	21-138
set ip arp	21-140
set ip arp refresharp	21-141
set ip arp timeout	21-142
set ip arpwaittimeout	21-143
set ip dns	21-144
set ip dns cache	21-146
set ip dnsrelay	21-147
set ip filter	21-148
set ip host	21-152
set ip interface	21-153
set ip local	21-158
set ip nameserver	21-160
set ip nat maxfragments	21-161
set ip route	21-162
set ip route preference	21-164
set ip route template	21-166
set ip secondarynameserver	21-168
set ping	21-169
set trace	21-172
show ddns	21-174
show ip	21-176
show ip arp	21-179
show ip cache	21-180
show ip counter	21-181
show ip debug	21-190

show ip dns	21-191
show ip dns cache	21-193
show ip filter	21-194
show ip helper	21-196
show ip host	21-198
show ip icmpreply	21-199
show ip interface	21-200
show ip nat	21-204
show ip pool	21-209
show ip route	21-211
show ip route multicast	21-215
show ip route preference	21-216
show ip route template	21-217
show ip sa	21-219
show ip udp	21-220
show ping	21-222
show tcp	21-224
show trace	21-229
stop ping	21-231
stop trace	21-231
trace	21-232

CHAPTER 22 **Dynamic Host Configuration Protocol (DHCP)**

Introduction	22-2
Configuring the DHCP Server	22-3
BOOTP Relay Agent	22-4
DHCP Option 82 Relay	22-6
Configuring the DHCP Client	22-6
DHC Files	22-6
Configuration Example	22-7
Troubleshooting	22-8
Command Reference	22-9
add bootp relay	22-10
add dhcp option	22-11
add dhcp policy	22-13
add dhcp range	22-18
create dhcp policy	22-19
create dhcp range	22-20
delete bootp relay	22-21
delete dhcp option	22-22
delete dhcp policy	22-23
delete dhcp range	22-27
destroy dhcp policy	22-28
destroy dhcp range	22-28
disable bootp relay	22-29
disable bootp relay option82	22-29
disable dhcp	22-30
disable dhcp debug	22-31
enable bootp relay	22-31
enable bootp relay option82	22-32
enable dhcp	22-32
enable dhcp debug	22-33
purge bootp relay	22-33
set bootp relay maxhops	22-34
set bootp relay option82	22-35
set bootp relay option82 port	22-36
set dhcp	22-37
set dhcp option	22-38

set dhcp policy	22-40
set dhcp range	22-46
show bootp relay	22-47
show bootp relay port	22-49
show dhcp	22-50
show dhcp client	22-52
show dhcp policy	22-54
show dhcp range	22-56

CHAPTER 23 IP Multicasting

Introduction	23-3
References	23-3
IP Multicast Routing	23-4
Interoperability between Multicast Routing Protocols	23-5
Distance Vector Multicast Routing Protocol (DVMRP)	23-5
Configuring DVMRP	23-6
Protocol Independent Multicast (PIM)	23-8
PIM Dense Mode	23-8
PIM Sparse Mode	23-10
Internet Group Management Protocol (IGMP)	23-18
Configuring IGMP	23-19
IGMP Proxy	23-20
IGMP Snooping	23-21
IGMP Filtering	23-24
IGMP Throttling	23-26
Configuration Examples	23-27
Multicasting using DVMRP	23-27
Protocol Independent Multicast (PIM)	23-33
Command Reference	23-41
add dvmrp interface	23-42
add igmp filter	23-43
add igmpsnooping routeraddress	23-44
add igmpsnooping vlan	23-45
add pim bsrcandidate	23-46
add pim interface	23-47
add pim rpcandidate	23-49
create igmp filter	23-51
delete dvmrp interface	23-52
delete igmp filter	23-53
delete igmpsnooping routeraddress	23-53
delete igmpsnooping vlan	23-54
delete pim bsrcandidate	23-54
delete pim interface	23-55
delete pim rpcandidate	23-56
destroy igmp filter	23-57
disable dvmrp	23-57
disable dvmrp debug	23-58
disable igmpsnooping	23-59
disable ip igmp	23-59
disable ip igmp allgroup	23-60
disable ip igmp debug	23-60
disable ip igmp interface	23-61
disable pim	23-61
disable pim bsmsecuritycheck	23-62
disable pim debug	23-62
enable dvmrp	23-63
enable dvmrp debug	23-64
enable igmpsnooping	23-65

enable ip igmp	23-65
enable ip igmp allgroup	23-66
enable ip igmp debug	23-66
enable ip igmp interface	23-67
enable pim	23-67
enable pim bsmsecuritycheck	23-68
enable pim debug	23-68
purge dvmrp	23-69
purge pim	23-69
reset dvmrp interface	23-70
reset pim interface	23-71
set dvmrp interface	23-72
set igmp filter	23-73
set igmpsnooping vlan	23-74
set igmpsnooping routermode	23-75
set ip igmp	23-76
set ip igmp interface	23-77
set pim	23-78
set pim log	23-79
set pim bsrcandidate	23-80
set pim interface	23-81
set pim rpcandidate	23-83
show dvmrp	23-84
show dvmrp counters	23-85
show dvmrp debug	23-86
show dvmrp forwarding	23-87
show dvmrp interface	23-88
show dvmrp neighbour	23-89
show dvmrp route	23-90
show igmp filter	23-91
show igmpsnooping	23-93
show igmpsnooping counter	23-95
show igmpsnooping routeraddress	23-97
show ip igmp	23-98
show ip igmp counter	23-101
show ip igmp debug	23-103
show pim	23-104
show pim bsrcandidate	23-105
show pim config	23-106
show pim counters	23-107
show pim debug	23-111
show pim interface	23-112
show pim neighbour	23-114
show pim route	23-115
show pim rpcandidate	23-121
show pim rpset	23-122
show pim staterefresh	23-124
show pim timer	23-125

CHAPTER 24 Routing Information Protocol (RIP)

Introduction	24-2
Configuring RIP	24-3
Redistributing Routes into RIP	24-4
Statically-Configured Routes	24-4
BGP Routes	24-4
Configuration Example	24-5
Command Reference	24-7
add ip rip interface	24-7
add ip rip redistribute	24-10
add ip trusted	24-11
delete ip rip interface	24-12
delete ip rip redistribute	24-13
delete ip trusted	24-13
set ip rip interface	24-14
set ip rip redistribute	24-17
set ip rip timer	24-18
show ip rip	24-19
show ip rip counter	24-21
show ip rip redistribute	24-23
show ip rip timer	24-24
show ip trusted	24-25

CHAPTER 25 Open Shortest Path First (OSPF)

Introduction	25-3
OSPF Features	25-3
Adjacency and Designated Routers	25-5
Link State Advertisements	25-5
OSPF Packet Types	25-6
OSPF States	25-7
Automatic Cost Calculation	25-8
Routing with OSPF	25-9
Filtering OSPF Routes	25-9
Addressless Interfaces	25-10
Network Types	25-10
Passive Interfaces	25-12
Authenticating OSPF	25-13
Password Authentication	25-13
Cryptographic Authentication	25-13
Exchanging Information Between OSPF and RIP	25-14
Importing BGP routes into OSPF	25-15
Redistributing External Routes	25-15
Summarising Routes for Redistribution	25-17
OSPF On-Demand Circuits	25-18
Configuration Examples	25-20
Basic OSPF Network	25-20
OSPF Network with Addressless PPP Links	25-22
OSPF Network with Virtual Links	25-24
Command Reference	25-27
add ospf area	25-28
add ospf host	25-30
add ospf interface	25-31
add ospf md5key	25-35
add ospf neighbour	25-36
add ospf range	25-37
add ospf redistribute	25-38
add ospf stub	25-40
add ospf summaryaddress	25-41

delete ospf area	25-42
delete ospf host	25-42
delete ospf interface	25-43
delete ospf md5key	25-44
delete ospf neighbour	25-45
delete ospf range	25-45
delete ospf redistribute	25-46
delete ospf stub	25-47
delete ospf summaryaddress	25-48
disable ospf	25-48
disable ospf debug	25-49
disable ospf interface	25-50
disable ospf log	25-50
enable ospf	25-51
enable ospf debug	25-52
enable ospf interface	25-53
enable ospf log	25-54
purge ospf	25-55
reset ospf	25-55
reset ospf counter	25-56
reset ospf interface	25-57
reset ospf spf	25-58
set ospf	25-59
set ospf area	25-63
set ospf host	25-65
set ospf interface	25-66
set ospf neighbour	25-70
set ospf range	25-71
set ospf redistribute	25-72
set ospf stub	25-74
set ospf summaryaddress	25-75
show ospf	25-76
show ospf area	25-79
show ospf debug	25-82
show ospf host	25-83
show ospf interface	25-85
show ospf lsa	25-90
show ospf md5key	25-95
show ospf neighbour	25-96
show ospf range	25-98
show ospf redistribute	25-100
show ospf route	25-101
show ospf stub	25-103
show ospf summaryaddress	25-104

CHAPTER 26 **Border Gateway Protocol version 4 (BGP-4)**

Introduction	26-3
Overview of BGP-4	26-3
BGP Operation	26-5
BGP Attributes	26-6
BGP Route Selection	26-8
Classless Inter-domain Routing (CIDR) and Aggregation	26-10
BGP Multi-Homing	26-11
BGP Route Filtering	26-13
AS Confederations	26-13
Triggers	26-14
Redistributing BGP Routes	26-15

Configuring BGP Peers	26-16
How to Create a Basic BGP AS	26-16
How to Create BGP Peers Using Peer Templates	26-20
How to Modify BGP Peers (Without Templates)	26-21
How to Use a Template to Modify BGP Peers	26-22
How to Modify BGP Peers that Use a Template	26-23
How to Delete BGP Peers	26-23
Optimising BGP	26-24
How to Minimise the Impact of Unstable EBGp Routes	26-24
How to Withdraw Routes As Soon As they Fail	26-29
How to Advertise as Few Routes as Possible	26-30
How to Improve IBGP Scalability	26-33
How to Handle Spikes in Memory Use	26-38
How to Stop BGP from Overloading System Memory	26-39
How to Avoid Leaking Private AS Numbers into Global BGP Tables	26-40
How to Set the IP Address that Identifies the Router	26-40
Configuration Examples	26-42
Basic BGP Configuration	26-42
Advanced BGP Configuration	26-44
Command Reference	26-47
add bgp aggregate	26-47
add bgp confederationpeer	26-49
add bgp import	26-50
add bgp network	26-51
add bgp peer	26-52
add bgp peertemplate	26-60
create bgp damping parameterset	26-65
delete bgp aggregate	26-67
delete bgp confederationpeer	26-68
delete bgp import	26-68
delete bgp network	26-69
delete bgp peer	26-69
delete bgp peertemplate	26-70
destroy bgp damping parameterset	26-70
disable bgp autosoftupdate	26-71
disable bgp autosummary	26-71
disable bgp backoff	26-72
disable bgp damping	26-73
disable bgp debug	26-74
disable bgp defaultoriginate	26-75
disable bgp peer	26-75
enable bgp autosoftupdate	26-76
enable bgp autosummary	26-76
enable bgp backoff	26-77
enable bgp damping	26-78
enable bgp debug	26-79
enable bgp defaultoriginate	26-80
enable bgp peer	26-81
purge bgp damping	26-81
reset bgp damping	26-82
reset bgp peer	26-82
reset bgp peer soft	26-83
set bgp	26-84
set bgp aggregate	26-86
set bgp backoff	26-87
set bgp damping parameterset	26-88
set bgp import	26-90
set bgp memlimit	26-91
set bgp peer	26-92

set bgp peertemplate	26-100
set ip autonomous	26-105
show bgp	26-106
show bgp aggregate	26-108
show bgp confederation	26-109
show bgp backoff	26-110
show bgp counters	26-112
show bgp damping	26-116
show bgp damping routes	26-118
show bgp import	26-119
show bgp memlimit	26-120
show bgp memlimit scan	26-121
show bgp network	26-123
show bgp peer	26-124
show bgp peertemplate	26-129
show bgp route	26-131

CHAPTER 27 **Filtering IP Routes**

Introduction	27-3
Types of Filters	27-4
About Prefix Lists	27-4
About AS Path Lists	27-5
About Route Maps	27-5
About IP Route Filters	27-7
About IP Filters	27-8
Creating Filters	27-9
Creating Prefix Lists	27-9
Creating AS Path Lists for BGP Routes	27-9
Creating Route Maps for BGP Routes	27-10
Creating Route Maps for OSPF Routes	27-16
Creating Route Maps for Redistributing BGP Routes into RIP	27-20
Creating IP Route Filters	27-21
Creating IP Filters	27-22
Applying Filters	27-22
Applying Filters When Writing to the RIB	27-22
Applying Filters When Redistributing from the RIB	27-24
Applying Filters Before Advertising Routes	27-28
Overview of Filters for each Route Source	27-30
Border Gateway Protocol (BGP-4)	27-30
Open Shortest Path First (OSPF)	27-31
Routing Information Protocol (RIP)	27-33
Interface Routes	27-34
Statically-Configured Routes	27-34
Configuration Examples	27-35
Filtering When Writing BGP Routes to the RIB: Using an AS Path Filter ..	27-35
Filtering When Writing BGP Routes to the RIB: Using a Route Map	27-36
Filtering Before Advertising Routes with BGP: Using an AS Path Filter ..	27-37
Filtering Before Advertising Routes with BGP: Using a Route Map	27-38
Filtering Inbound and Outbound BGP Routes: Using Communities	27-39
Filtering When Importing Routes from BGP to OSPF	27-40
Command Reference	27-41
add ip aspathlist	27-41
add ip communitylist	27-43
add ip prefixlist	27-45
add ip route filter	27-47
add ip routemap	27-50
delete ip aspathlist	27-57
delete ip communitylist	27-58

delete ip prefixlist	27-58
delete ip route filter	27-59
delete ip routemap	27-60
set ip prefixlist	27-61
set ip route filter	27-63
set ip routemap	27-65
show ip aspathlist	27-72
show ip communitylist	27-73
show ip prefixlist	27-74
show ip route filter	27-76
show ip routemap	27-77

CHAPTER 28 **Voice over IP (VoIP)**

Introduction	28-3
VoIP Overview	28-3
VoIP Benefits and Business Applications	28-5
VoIP FXS Interface Components	28-6
Ring Generation	28-6
Tone Generation	28-6
Port Gain	28-6
Port Impedance	28-6
Voice Activation and Silence Detection	28-7
Digit Collection	28-7
VoIP Protocols	28-7
H.323	28-7
Session Initiation Protocol (SIP)	28-12
VoIP Engines	28-17
Loading VoIP Firmware onto a PIC	28-18
Configuration Examples	28-20
Using H.323 and no gatekeeper	28-20
Using H.323 and a gatekeeper	28-22
Using a SIP server	28-23
Command Reference	28-25
create h323	28-25
create h323 entry	28-27
create sip	28-28
destroy h323	28-30
destroy h323 entry	28-31
destroy sip	28-32
disable voip	28-32
disable voip debug	28-33
enable voip	28-33
enable voip debug	28-34
reset voip	28-35
set h323	28-36
set h323 entry	28-37
set h323 gateway	28-38
set sip	28-39
set sip gateway	28-41
set voip	28-42
set voip ap	28-43
set voip bootcode	28-45
set voip file	28-45
set voip phone	28-46
set voip public interface	28-53
show h323	28-54
show h323 entry	28-55
show h323 gateway	28-56

show sip	28-57
show sip gateway	28-58
show voip	28-59
show voip ap	28-61
show voip counter engine	28-63
show voip instance	28-65
show voip load	28-66
show voip phone	28-67

CHAPTER 29 **Generic Routing Encapsulation (GRE)**

Introduction	29-2
GRE on the Router	29-3
Configuration Examples	29-5
Basic Configuration	29-5
Multi-Point Configuration	29-7
Command Reference	29-11
add gre	29-11
add gre tunnel	29-13
delete gre	29-14
delete gre tunnel	29-14
disable gre	29-15
disable gre debug	29-15
enable gre	29-15
enable gre debug	29-16
purge gre	29-16
reset gre	29-17
set gre	29-18
set gre tunnel	29-20
show gre	29-21
show gre general	29-22
show gre tunnel	29-23

CHAPTER 30 **Internet Protocol version 6 (IPv6)**

Introduction	30-3
Overview of IPv6	30-3
The 6bone	30-4
IPv6 Addresses and Prefixes	30-4
IPv6 Headers	30-6
The Internet Control Message Protocol (ICMPv6)	30-8
IPv6 Routing	30-11
IPv6 Filtering	30-11
Integration of IPv4 and IPv6	30-12
IPv6 on the Router	30-12
Enabling IPv6	30-13
IPv6 Interfaces and Addresses	30-13
Extension Header Processing	30-15
Routing Table Processing and RIPv6	30-15
Neighbour Discovery	30-16
IPv6 Filtering	30-17
IPv6 Fragmentation	30-18
Telnet v6	30-18
Ping	30-19
Secure Shell	30-20
Tunnelling IPv6 Packets over IPv4	30-20
Configuration Examples	30-23
Basic Routing	30-23
Dynamic Routing with RIPv6	30-25
Dynamic (6-to-4) Tunnelling over an IPv4 Network	30-29
Static Tunnelling over an IPv4 Network	30-32
IPv6 Filters	30-34

Command Reference	30-36
add ipv6 6to4	30-36
add ipv6 filter	30-37
add ipv6 host	30-42
add ipv6 interface	30-43
add ipv6 nd	30-46
add ipv6 prefix	30-47
add ipv6 rip	30-48
add ipv6 route	30-49
add ipv6 tunnel	30-51
create ipv6 interface	30-52
delete ipv6 6to4	30-53
delete ipv6 filter	30-53
delete ipv6 host	30-54
delete ipv6 interface	30-54
delete ipv6 nd	30-55
delete ipv6 prefix	30-56
delete ipv6 rip	30-57
delete ipv6 route	30-58
delete ipv6 tunnel	30-59
destroy ipv6 interface	30-60
disable ipv6	30-60
disable ipv6 advertise	30-61
disable ipv6 debug	30-61
disable ipv6 mtudiscovery	30-62
disable ipv6 rip	30-62
enable ipv6	30-62
enable ipv6 advertise	30-63
enable ipv6 debug	30-64
enable ipv6 mtudiscovery	30-64
enable ipv6 rip	30-64
reset ipv6 ndcache	30-65
set ipv6 filter	30-66
set ipv6 interface	30-69
set ipv6 mtu	30-70
set ipv6 nd	30-71
set ipv6 prefix	30-73
set ipv6 route preference	30-74
show ipv6	30-75
show ipv6 counter	30-77
show ipv6 filter	30-81
show ipv6 host	30-83
show ipv6 interface	30-84
show ipv6 multicast	30-86
show ipv6 ndcache	30-87
show ipv6 ndconfig	30-88
show ipv6 rip	30-90
show ipv6 route	30-92
show ipv6 route multicast	30-94
show ipv6 route preference	30-95
show ipv6 tunnel	30-96
show ipv6 udp	30-97

CHAPTER 31 **Dynamic Host Configuration Protocol for IPv6 (DHCP6)**

Introduction	31-2
DHCP for IPv6	31-2
DHCP6 Messages	31-3
DHCP Unique Identifier (DUID)	31-3
Identity Associations	31-3
Configuring DHCP6 Servers	31-4
Configuring DHCP6 Clients	31-5
DHCP6 Message Authentication	31-6
Rapid Commit	31-6
Configuration Examples	31-7
Address Assignment	31-7
Prefix Delegation	31-8
Command Reference	31-10
add dhcp6 interface	31-10
add dhcp6 key	31-11
add dhcp6 policy	31-12
add dhcp6 range	31-14
create dhcp6 policy	31-15
create dhcp6 range	31-16
delete dhcp6 interface	31-17
delete dhcp6 key	31-17
delete dhcp6 policy	31-18
delete dhcp6 range	31-19
destroy dhcp6 policy	31-19
destroy dhcp6 range	31-20
disable dhcp6	31-20
disable dhcp6 debug	31-20
disable dhcp6 rapidcommit	31-21
enable dhcp6	31-21
enable dhcp6 debug	31-22
enable dhcp6 rapidcommit	31-22
set dhcp6 key	31-23
set dhcp6 policy	31-24
show dhcp6	31-26
show dhcp6 client	31-28
show dhcp6 counter	31-30
show dhcp6 interface	31-33
show dhcp6 key	31-35
show dhcp6 policy	31-36
show dhcp6 range	31-37
show dhcp6 server	31-38

CHAPTER 32 **IPv6 Multicasting**

Introduction	32-3
Overview of IPv6 Multicast Routing	32-4
Interoperability between Multicast Routing Protocols	32-5
Multicast Listener Discovery (MLD)	32-5
Queries and Reports	32-5
Configuring MLD	32-7
Protocol Independent Multicast Sparse Mode (PIM-SM)	32-8
Configuring PIM Sparse Mode	32-8
Protocol Independent Multicast Dense Mode (PIM-DM)	32-12
Configuring PIM Dense Mode	32-12
Configuration Examples	32-14
Command Reference	32-24
add pim6 bsrcandidate	32-24
add pim6 interface	32-25
add pim6 rpcandidate	32-26
delete pim6 bsrcandidate	32-27

delete pim6 interface	32-27
delete pim6 rpcandidate	32-28
disable ipv6 mld	32-28
disable ipv6 mld debug	32-29
disable ipv6 mld interface	32-29
disable pim6	32-30
disable pim6 debug	32-30
enable ipv6 mld	32-31
enable ipv6 mld debug	32-31
enable ipv6 mld interface	32-32
enable pim6	32-33
enable pim6 debug	32-33
purge pim6	32-34
reset pim6 interface	32-34
set ipv6 mld	32-35
set ipv6 mld interface	32-36
set pim6	32-37
set pim6 bsrcandidate	32-38
set pim6 interface	32-39
set pim6 rpcandidate	32-40
show ipv6 mld	32-41
show ipv6 mld config	32-43
show ipv6 mld counters	32-44
show ipv6 mld debug	32-45
show pim6	32-46
show pim6 bsrcandidate	32-47
show pim6 config	32-48
show pim6 counters	32-49
show pim6 debug	32-52
show pim6 interface	32-53
show pim6 neighbour	32-55
show pim6 route	32-56
show pim6 rpcandidate	32-61
show pim6 rpset	32-62
show pim6 staterefresh	32-64
show pim6 timer	32-65

CHAPTER 33 **Open Systems Interconnection (OSI)**

Introduction	33-2
ISO NSAP (Network Service Access Point) Addresses	33-2
ISO on the Router	33-4
Mandatory CLNS Standards	33-4
Optional Sections of CLNS Standards	33-5
Mandatory ESIS Standards	33-6
Optional Sections of ESIS Standards	33-6
Mandatory ISIS Standards	33-6
Optional Sections of ISIS Standards	33-7
Layer 2 protocols supporting CLNS	33-7
CLNS circuits over dial-up PPP interfaces	33-7
SNMP	33-7
Configuration Examples	33-8
Two Routers and One OSI Area	33-8
Three Virtual Routers and Three OSI Areas	33-10
Command Reference	33-12
add clns adjacency	33-12
add clns area	33-13
add clns circuit	33-14
add clns ra	33-17

delete clns adjacency	33-18
delete clns area	33-19
delete clns circuit	33-19
delete clns ra	33-20
disable clns circuit	33-21
disable clns debug	33-21
enable clns	33-22
enable clns circuit	33-23
enable clns debug	33-24
purge clns	33-25
reset clns	33-25
set clns	33-26
set clns circuit	33-28
set clns ra	33-30
show clns	33-31
show clns adjacency	33-32
show clns area	33-34
show clns circuit	33-35
show clns circuit counters	33-38
show clns counters	33-40
show clns detail	33-42
show clns ra	33-45
show clns route	33-46

CHAPTER 34 **AppleTalk**

Introduction	34-3
AppleTalk Protocol Architecture	34-3
AppleTalk Nodes and Networks	34-4
LocalTalk	34-4
EtherTalk and TokenTalk	34-5
AppleTalk Address Resolution Protocol (AARP)	34-6
Address Translation	34-6
Dynamic Assignment of Protocol Addresses	34-6
Datagram Delivery Protocol	34-7
Routing Table Maintenance Protocol (RTMP)	34-8
Name Binding Protocol (NBP)	34-9
Zone Information Protocol (ZIP)	34-10
AppleTalk on the Router	34-10
AppleTalk Filtering	34-12
DDP packet filtering	34-12
RTMP or Routing Update filtering	34-13
Zone Filtering	34-14
AppleTalk Dial-On-Demand	34-15
Extended Ping for AppleTalk	34-16
Configuration Example	34-17
Command Reference	34-21
add apple circuit	34-21
add apple dlci	34-22
add apple packetfilter	34-23
add apple port	34-25
add apple route	34-27
add apple routefilter	34-28
add apple zone	34-29
add apple zonefilter	34-30
delete apple circuit	34-31
delete apple dlci	34-32
delete apple packetfilter	34-33
delete apple port	34-33

delete apple route	34-34
delete apple routefilter	34-34
delete apple zone	34-35
delete apple zonefilter	34-36
disable apple	34-36
disable apple debug	34-37
enable apple	34-37
enable apple debug	34-37
purge apple	34-38
reset apple	34-38
set apple packetfilter	34-39
set apple port	34-41
set apple routeconvert	34-43
set apple routefilter	34-44
set apple zone	34-45
set apple zonefilter	34-46
show apple	34-47
show apple aarp	34-48
show apple circuit	34-49
show apple counter	34-50
show apple dlci	34-56
show apple packetfilter	34-57
show apple port	34-59
show apple route	34-61
show apple routefilter	34-62
show apple zone	34-63
show apple zonefilter	34-64

CHAPTER 35 **Novell IPX**

Introduction	35-3
The IPX Protocol	35-3
Addressing in a Novell Network	35-4
Interfaces and Circuits	35-5
Routing	35-5
Service Advertisement	35-7
Traffic Filters	35-8
RIP and SAP Filters	35-8
Wildcard Expressions	35-9
RIP Filters	35-10
SAP Filters	35-11
Global Versus Circuit-Specific Filters	35-11
Dial-on-Demand IPX	35-12
SPX Spoofing with Dial-on-Demand IPX	35-13
Troubleshooting SPX Spoofing	35-14
Extended PING for IPX	35-16
Counters and the MIB	35-16
Configuration Examples	35-17
Basic IPX Setup	35-17
IPX Dial-On-Demand	35-22
Command Reference	35-31
add ipx circuit	35-31
add ipx exclusion	35-35
add ipx inclusion	35-36
add ipx rip	35-37
add ipx route	35-38
add ipx sap	35-39
add ipx service	35-40
delete ipx circuit	35-42

delete ipx exclusion	35-43
delete ipx inclusion	35-44
delete ipx rip	35-45
delete ipx route	35-45
delete ipx sap	35-46
delete ipx service	35-47
disable ipx	35-47
disable ipx circuit	35-48
enable ipx	35-48
enable ipx circuit	35-49
purge ipx	35-49
reset ipx	35-50
set ipx circuit	35-51
set ipx grip gsap	35-54
set ipx rip	35-55
set ipx sap	35-56
show ipx	35-57
show ipx cache	35-59
show ipx callog	35-60
show ipx circuit	35-63
show ipx counter	35-65
show ipx exclusion	35-69
show ipx inclusion	35-70
show ipx rip	35-71
show ipx route	35-72
show ipx sap	35-73
show ipx service	35-75
show ipx spxspooof	35-76

CHAPTER 36 **DECnet**

Introduction	36-2
Overview of a DECnet Network	36-2
DECnet Addresses	36-3
Routing and the Default Router	36-4
Routes and Routing Tables	36-5
Filters	36-5
Managing the Router	36-6
Counters	36-6
Timers	36-6
Costs	36-6
Configuration Examples	36-9
A Basic DECnet Setup	36-9
Troubleshooting	36-11
Refining the DECnet Setup	36-12
Command Reference	36-13
add decnet exclusion	36-13
add decnet inclusion	36-14
add decnet interface	36-15
add decnet lpn	36-16
delete decnet exclusion	36-17
delete decnet inclusion	36-18
delete decnet interface	36-19
delete decnet lpn	36-20
disable decnet	36-20
enable decnet	36-21
purge decnet	36-21
reset decnet	36-22
set decnet	36-23

	set decnet interface	36-26
	show decnet	36-27
	show decnet counter	36-28
	show decnet exclusion	36-30
	show decnet inclusion	36-31
	show decnet interface	36-32
	show decnet lpn	36-33
	show decnet route	36-34
CHAPTER 37	Generic Packet Classifier	
	Introduction	37-2
	Configuration of Classifiers	37-2
	Command Reference	37-3
	create classifier	37-4
	destroy classifier	37-14
	set classifier	37-15
	show classifier	37-23
CHAPTER 38	Software Quality of Service (QoS)	
	Introducing QoS	38-4
	Stages	38-4
	Interfaces for Software QoS	38-5
	When to Use Software QoS	38-5
	Separate Traffic—Separate Needs	38-6
	Applying QoS in a Network	38-6
	Local Level	38-6
	Domain Level: DiffServ, TOS and 802.1p Priority	38-6
	The Hierarchy	38-10
	Traffic Class Trees	38-10
	Traffic Classes	38-12
	Policies	38-13
	Order of Classifier Matching	38-13
	Dynamic Application Recognition for Voice and Video	38-14
	Processing Points	38-15
	Ingress QoS	38-16
	Egress QoS	38-17
	Tunnel QoS	38-17
	Software QoS Stages	38-18
	Packet Flow	38-18
	Classification: Identifying and Sorting Traffic	38-20
	Bandwidth Class	38-20
	Premarking: Labelling Packets Before Metering	38-20
	Metering: Bandwidth Conformance	38-21
	Packet Queuing	38-24
	RED Curves	38-24
	Dequeuing	38-26
	Queue Scheduling	38-29
	Re-Marking	38-31
	Virtual Bandwidth	38-31
	Configuring a Software QoS Hierarchy	38-32
	The Total Software QoS Solution	38-32
	Default Traffic Class	38-35
	Configuring QoS Stages	38-36
	Premarking	38-36
	Metering	38-37
	RED	38-40
	Re-Marking	38-41
	Queue Scheduling	38-43

Configuring DAR for Voice and Video Traffic	38-46
Configuring Software QoS on Specific Interfaces	38-48
PPP and PPPoE	38-48
Frame Relay	38-51
The Switch Instance	38-52
Configuring Software QoS on Tunnels	38-54
VPN	38-54
6 to 4	38-55
Generic Router Encapsulation (GRE)	38-56
Interaction with Other Modules	38-57
Network Address Translation (NAT)	38-57
Resource Reservation Protocol (RSVP)	38-58
Priority Filters	38-58
Policy Filters	38-58
Bandwidth Limiting on Ethernet Interfaces	38-58
Counters	38-58
Debugging	38-59
Configuration Examples	38-61
1: Guaranteeing VoIP Traffic	38-62
2: Guaranteeing VoIP Traffic using DAR	38-65
3: Guaranteeing VoIP Traffic While Maintaining File Server Traffic	38-68
4: Guaranteeing VoIP Traffic over a VPN Tunnel	38-71
5: VoIP, Critical Database, and File Server Traffic	38-76
6: Multiple Applications over Frame Relay	38-79
Command Reference	38-84
add sqos interface dar	38-84
add sqos policy trafficclass	38-85
add sqos trafficclass classifier	38-86
add sqos trafficclass dar	38-87
add sqos trafficclass subclass	38-88
create sqos dar	38-89
create sqos dscpmap	38-91
create sqos meter	38-92
create sqos policy	38-95
create sqos red	38-98
create sqos trafficclass	38-100
delete sqos interface dar	38-105
delete sqos policy trafficclass	38-106
delete sqos trafficclass classifier	38-107
delete sqos trafficclass dar	38-108
delete sqos trafficclass subclass	38-109
destroy sqos dar	38-110
destroy sqos dscpmap	38-110
destroy sqos meter	38-111
destroy sqos policy	38-111
destroy sqos red	38-112
destroy sqos trafficclass	38-112
disable sqos	38-113
disable sqos debug	38-113
enable sqos	38-114
enable sqos debug	38-114
purge sqos	38-115
reset sqos counters	38-116
set sqos dar	38-118
set sqos dscpmap	38-120
set sqos interface	38-122
set sqos meter	38-124
set sqos policy	38-127
set sqos red	38-130

set sqos trafficclass	38-132
show sqos	38-136
show sqos counters	38-137
show sqos dar	38-144
show sqos dscpmap	38-146
show sqos interface	38-148
show sqos meter	38-150
show sqos policy	38-152
show sqos red	38-156
show sqos trafficclass	38-159

CHAPTER 39 Resource Reservation Protocol (RSVP)

Introduction	39-2
Resource Reservation Protocol (RSVP)	39-2
RSVP on the Router	39-5
RSVP Proxy Agent	39-7
Command Reference	39-9
create rsvp proxy	39-9
destroy rsvp proxy	39-12
disable rsvp	39-12
disable rsvp debug	39-13
disable rsvp interface	39-14
disable rsvp proxy	39-15
enable rsvp	39-15
enable rsvp debug	39-16
enable rsvp interface	39-17
enable rsvp proxy	39-18
reset rsvp proxy	39-19
set rsvp interface	39-20
set rsvp proxy	39-21
show rsvp	39-23
show rsvp counter	39-24
show rsvp interface	39-27
show rsvp path	39-28
show rsvp proxy	39-29
show rsvp proxy counter	39-31
show rsvp resv	39-32

CHAPTER 40 User Authentication

Introduction	40-3
Privilege Levels	40-3
User Level	40-3
Manager Level	40-4
Security Officer Level	40-5
Remote Security Officer Level	40-6
Operating Modes	40-7
User Authentication Facility	40-8
User Authentication Database	40-10
Adding Entries to the User Authentication Database	40-10
Modifying Entries in the User Authentication Database	40-11
Choosing Passwords	40-12
Asynchronous Port Security	40-12
Telnetting from the Router	40-13
Counters	40-14
Semipermanent Manager Port	40-14
RADIUS	40-15
TACACS	40-18
TACACS+	40-18

Token Card Authentication	40-22
Token Card Authentication on the Router	40-22
Using Token Card with TACACS+	40-23
Using Token Card with RADIUS or TACACS	40-24
Debug Support for RADIUS, TACACS and TACACS+	40-26
S/Key and OTP One-Time Password Systems	40-26
Initialising the S/Key or OTP System on the Authentication Server	40-27
Configuring S/Key and OTP on the Router	40-28
Command Reference	40-30
add radius server	40-30
add tacacs server	40-31
add tacplus server	40-32
add user	40-33
add user rso	40-36
delete radius server	40-37
delete tacacs server	40-38
delete tacplus server	40-38
delete user	40-39
delete user rso	40-40
disable radius debug	40-41
disable system security_mode	40-41
disable tacacs debug	40-42
disable tacplus	40-42
disable tacplus debug	40-42
disable user	40-43
disable user rso	40-43
enable	40-44
enable radius debug	40-45
enable system security_mode	40-46
enable tacacs debug	40-47
enable tacplus	40-47
enable tacplus debug	40-48
enable user	40-48
enable user rso	40-49
login	40-50
logoff	40-51
purge user	40-51
reset user	40-52
set manager asyn	40-53
set password	40-54
set radius	40-55
set skey	40-56
set tacplus key	40-56
set tacplus server	40-57
set tacplus telnet	40-58
set user	40-59
show manager asyn	40-62
show radius	40-63
show radius debug	40-64
show skey	40-65
show tacacs debug	40-67
show tacacs server	40-68
show tacplus	40-69
show tacplus key	40-69
show tacplus server	40-70
show tacplus telnet	40-71
show tacplus user	40-72
show user	40-73
show user rso	40-78

CHAPTER 41 Compression and Encryption Services

Introduction	41-2
Data Compression	41-2
Data Encryption	41-5
Symmetrical Encryption	41-5
Asymmetrical (Public Key) Encryption	41-7
Network Encryption	41-7
Authentication	41-8
Key Exchange Algorithms	41-9
Hardware Support	41-10
PCI Accelerator Cards (PACs)	41-10
Hardware Control and Monitoring	41-11
ENCO Services	41-11
Compression	41-12
Encryption	41-13
Authentication	41-13
Diffie-Hellman Key Exchange Algorithm	41-13
Key Creation and Storage	41-14
Access Control	41-16
User Modules	41-17
IP Payload Encryption and Virtual Private Networks	41-17
Secure Shell	41-17
PPP	41-17
Frame Relay	41-18
X.25 Link Compression	41-18
Command Reference	41-19
create enco key	41-20
destroy enco key	41-22
disable enco compstatistics	41-23
disable enco debugging	41-23
enable enco compstatistics	41-23
enable enco debugging	41-24
reset enco counters	41-25
set enco dhpadding	41-26
set enco dhpriority	41-26
set enco key	41-27
set enco sw	41-28
show enco	41-29
show enco channel	41-32
show enco counters	41-38
show enco debug	41-56
show enco key	41-57

CHAPTER 42 Port Authentication

Introduction	42-2
802.1x Port Based Network Access Control	42-2
The 802.1x Implementation	42-2
Port Authentication Control	42-6
The Authentication Server	42-8
The Authentication Process	42-9
802.1x Guest VLAN	42-10
MAC-Based Authentication	42-11
The MAC-Based Authentication Implementation	42-11
The MAC-Based Authentication Process	42-11
Dynamic VLAN Assignment	42-12
Port Authentication on the Router	42-13
Enable Port Authentication on the Router	42-13
Enable Port Authentication on a Port	42-14
Reauthenticate Supplicants	42-16

Setting Global 802.1x Username and Password	42-16
Debug Port Authentication	42-17
Multi-Supplicant Configuration	42-17
Configuration Examples	42-19
Port as Authenticator	42-19
Port as Supplicant	42-20
Command Reference	42-21
activate portauth port reauthenticate	42-21
disable portauth	42-22
disable portauth debug	42-23
disable portauth port	42-24
enable portauth	42-25
enable portauth debug	42-26
enable portauth port	42-27
purge portauth port	42-33
reset portauth port	42-34
reset portauth port multimib	42-35
set portauth port	42-36
set portauth port supplicantmac	42-42
set portauth username	42-45
show portauth	42-47
show portauth counter	42-49
show portauth port	42-52
show portauth port multisupplicant	42-59
show portauth timer	42-64

CHAPTER 43 **Secure Shell**

Introduction	43-2
Secure Shell on the Router	43-2
Configuring Secure Shell	43-4
Configuration Examples	43-6
Command Reference	43-10
add ssh user	43-10
delete ssh session	43-12
delete ssh user	43-12
disable ssh debug	43-13
disable ssh server	43-13
disable ssh user	43-14
enable ssh debug	43-14
enable ssh server	43-15
enable ssh user	43-16
set ssh client	43-17
set ssh server	43-18
set ssh user	43-20
show ssh	43-21
show ssh counter	43-24
show ssh session	43-31
show ssh user	43-34
ssh	43-36

CHAPTER 44 **Secure Sockets Layer (SSL)**

Introduction	44-2
SSL Operations	44-2
Phases	44-3
SSL on the Router	44-5
SSL and the Graphical User Interface	44-5
SSL and Load Balancer	44-6
Configuration Example	44-7

Command Reference	44-9
disable ssl debug	44-9
enable ssl debug	44-9
set ssl	44-10
show ssl	44-11
show ssl counters	44-13
show ssl sessions	44-21
 CHAPTER 45 Firewall	
Introduction	45-4
Firewall Technologies	45-4
Policies	45-6
Rules	45-7
Using Limit Rules to Limit Sessions	45-11
Access Lists	45-13
List Files	45-13
RADIUS Servers	45-14
Dynamic Interfaces	45-16
Dynamic Interface Templates	45-16
Configuring Dynamic Interfaces	45-17
Disabling the TCP Setup Proxy	45-18
Firewall UDP Session Timeouts	45-18
Multicast Packet Handling	45-19
Enhanced Packet Fragment Handling	45-19
Enabling the Secure Shell Server	45-20
Network Address Translation (NAT)	45-20
Enhanced NAT	45-23
Network Address and Port Translation (NAPT)	45-24
Enhanced Network Address and Port Translation (ENAPT)	45-25
Standard NAT	45-27
Other Advanced NAT Types	45-28
NAT on Ethernet Interfaces	45-29
FTP Session Handling	45-30
PPTP Pass Through	45-31
Universal Plug and Play (UPnP)	45-32
SMTP Proxy	45-33
Interaction Between the SMTP Proxy and Firewall Rules	45-33
Protecting the Email System	45-33
Email Relaying	45-34
HTTP Proxy	45-34
Firewall HTTP Proxies and Firewall Policies	45-34
HTTP Filters	45-34
Logging	45-35
SIP Application Layer Gateway: VoIP Phone Calls	45-35
Using Automatic Client Management Mode	45-37
Using Manual Client Management Mode	45-39
Displaying and Debugging the SIP ALG	45-41
Attacks Recognised by the Firewall	45-41
Monitoring Firewall Activity	45-44
Notifications	45-44
Debugging	45-45
Event Triggers	45-45
Logging	45-46
Session Monitoring	45-49
Accounting	45-52
Configuration Examples	45-52
Minimum Configuration for a Small Office	45-52
Firewall with an ISP-Assigned Internet Address	45-53
Firewall with a Single Global Internet Address	45-53

Allowing Access to a WWW Server	45-54
Firewall with TCP Setup Proxy Disabled for File Sharing	45-55
Configuring a Firewall to Allow VoIP Phone Calls	45-55
Troubleshooting	45-58
Traffic Flow and Network Address Translation (NAT)	45-58
Traffic Allowed or Denied by Firewall	45-58
Traffic Logging and Firewall Alert Messages	45-60
SIP ALG and VoIP Phone Calls	45-61
Command Reference	45-62
add firewall monitor	45-63
add firewall policy apprule	45-65
add firewall policy dynamic	45-67
add firewall policy httpfilter	45-68
add firewall policy interface	45-71
add firewall policy limitrule	45-73
add firewall policy list	45-75
add firewall policy nat	45-76
add firewall policy proxy	45-79
add firewall policy rule	45-81
add firewall policy spamsources	45-95
add firewall policy udpporttimeout	45-96
create firewall policy	45-97
create firewall policy dynamic	45-98
delete firewall monitor	45-98
delete firewall policy apprule	45-99
delete firewall policy dynamic	45-100
delete firewall policy httpfilter	45-101
delete firewall policy interface	45-102
delete firewall policy limitrule	45-103
delete firewall policy list	45-104
delete firewall policy nat	45-105
delete firewall policy proxy	45-107
delete firewall policy rule	45-108
delete firewall policy spamsources	45-109
delete firewall policy udpporttimeout	45-110
delete firewall session	45-110
destroy firewall policy	45-111
destroy firewall policy dynamic	45-111
disable firewall	45-112
disable firewall monitor	45-112
disable firewall notify	45-113
disable firewall policy	45-114
disable firewall policy debug	45-116
disable firewall policy httpcookies	45-118
disable firewall policy identproxy	45-119
disable firewall policy smtprelay	45-119
disable firewall policy tcpsetupproxy	45-120
disable firewall sessionreport	45-121
disable firewall sipalg	45-121
enable firewall	45-122
enable firewall monitor	45-122
enable firewall notify	45-123
enable firewall policy	45-124
enable firewall policy debug	45-126
enable firewall policy httpcookies	45-128
enable firewall policy identproxy	45-128
enable firewall policy smtprelay	45-129
enable firewall policy tcpsetupproxy	45-130
enable firewall sessionreport	45-131

enable firewall sipalg	45-131
reset firewall policy maccache	45-132
reset firewall sipalg autoclients	45-133
reset firewall sipalg counter	45-133
set firewall maxfragment	45-134
set firewall monitor	45-135
set firewall policy	45-137
set firewall policy attack	45-139
set firewall policy limitrule	45-141
set firewall policy rule	45-143
set firewall policy smtpdomain	45-148
set firewall policy udpporttimeout	45-149
set firewall sipalg	45-150
show firewall	45-152
show firewall accounting	45-155
show firewall arp	45-157
show firewall event	45-159
show firewall monitor	45-162
show firewall policy	45-163
show firewall policy attack	45-181
show firewall policy dynamic	45-182
show firewall policy limitrule	45-183
show firewall policy list	45-185
show firewall policy maccache	45-186
show firewall policy user	45-187
show firewall policy udpporttimeout	45-188
show firewall session	45-189
show firewall sipalg	45-194
show firewall sipalg autoclients	45-198
show firewall sipalg counter	45-201

CHAPTER 46 **UPnP**

Introduction	46-2
Overview of UPnP	46-2
UPnP Architecture	46-3
UPnP Networking Phases	46-4
UPnP and the Firewall	46-5
UPnP on the router	46-6
Additional security configuration	46-7
Configuration Example	46-8
Command Reference	46-11
disable upnp	46-11
disable upnp action	46-12
disable upnp l4port	46-13
enable upnp	46-13
enable upnp action	46-14
enable upnp l4port	46-15
show upnp	46-16
show upnp counter	46-17
show upnp interface	46-19
show upnp interface subscriptions	46-22

CHAPTER 47 **IP Security (IPsec)**

Introduction	47-3
IP Security (IPsec)	47-3
Security Protocols and Modes	47-4
Compression Protocol	47-4
Security Associations (SA)	47-5
ISAKMP/IKE	47-6
ISAKMP	47-6
IKE	47-9
IPsec on the Router	47-11
Security Policy Database (SPD)	47-12
SA Bundles	47-15
Security through Key Management	47-16
Dynamic IP Addresses	47-17
IPsec Support for IPv6	47-18
IPsec over UDP	47-19
Pre-IPsec Security Associations	47-20
ISAKMP/IKE on the Router	47-20
ISAKMP Policies	47-21
ISAKMP Exchanges	47-23
ISAKMP Security Associations (SA)	47-24
ISAKMP Heartbeats	47-25
Responding to IPsec Packets from an Unknown Tunnel	47-26
IPsec NAT-Traversal	47-27
Basic NAT-T Operations	47-27
NAT-T on the Router	47-28
Pre-IPsec Security Associations	47-30
Configuration Examples	47-31
Setting Security	47-32
VPN-only with details about ISAKMP/IKE key management	47-33
VPN with NAT-Traversal	47-37
Troubleshooting IPsec	47-44
IPsec	47-44
ISAKMP	47-45
Command Reference	47-47
activate ipsec convertoldsa	47-47
add sa member	47-48
create ipsec bundlespecification	47-49
create ipsec policy	47-51
create ipsec saspecification	47-59
create isakmp policy	47-62
create sa	47-70
delete sa member	47-71
destroy ipsec bundlespecification	47-71
destroy ipsec policy	47-72
destroy ipsec saspecification	47-73
destroy isakmp policy	47-73
destroy sa	47-74
disable ipsec	47-74
disable ipsec oldsa	47-75
disable ipsec policy debug	47-76
disable isakmp	47-78
disable isakmp debug	47-79
disable sa debug	47-80
enable ipsec	47-80
enable ipsec oldsa	47-81
enable ipsec policy debug	47-82
enable isakmp	47-84
enable isakmp debug	47-86

enable sa debug	47-87
purge ipsec	47-87
reset ipsec counter	47-88
reset ipsec policy	47-89
reset ipsec policy counter	47-89
reset ipsec sa counter	47-90
reset isakmp counters	47-91
reset isakmp policy	47-92
set ipsec bundlespecification	47-93
set ipsec policy	47-94
set ipsec saspecification	47-103
set ipsec udpport	47-105
set isakmp policy	47-106
set sa	47-114
show ipsec	47-115
show ipsec bundlespecification	47-116
show ipsec counter	47-119
show ipsec policy	47-134
show ipsec policy counter	47-138
show ipsec policy sabundle	47-141
show ipsec sa	47-143
show ipsec sa counter	47-148
show ipsec saspecification	47-151
show isakmp	47-153
show isakmp counters	47-155
show isakmp exchange	47-185
show isakmp policy	47-192
show isakmp sa	47-197
show sa	47-202
show sa counter	47-205
show sa user	47-211

CHAPTER 48 **Public Key Infrastructure (PKI)**

Introduction	48-2
Overview of PKI	48-2
Public Keys	48-2
Certificates	48-3
Elements of a Public Key Infrastructure	48-5
Certificate Validation	48-6
Certificate Revocation Lists (CRLs)	48-6
PKI on the Router	48-7
Certificate Retrieval and Storage	48-7
Certificate Validation	48-8
Certificate Revocation Lists	48-9
Requesting a Certificate	48-9
Global PKI Parameters	48-10
Configuration Examples	48-11
Manual Enrollment	48-11
Automatic Enrollment with CMP	48-13
Command Reference	48-15
add pki certificate	48-15
add pki crl	48-17
add pki ldaprepository	48-18
create pki certificate	48-19
create pki enrollmentrequest	48-20
create pki keyupdaterequest	48-21
delete pki certificate	48-22
delete pki crl	48-22

delete pki ldaprepository	48-23
destroy pki enrollmentrequest	48-23
destroy pki keyupdaterequest	48-24
disable pki debug	48-24
enable pki debug	48-25
purge pki	48-26
set pki	48-27
set pki certificate	48-28
set pki crl	48-29
set pki ldaprepository	48-30
set system distinguishedname	48-31
show pki	48-32
show pki certificate	48-39
show pki crl	48-42
show pki enrollmentrequest	48-45
show pki keyupdaterequest	48-47
show pki ldaprepository	48-49

CHAPTER 49 **Link Compression and Encryption**

Introduction	49-2
Overview	49-2
Link Compression	49-3
PPP	49-3
Frame Relay	49-4
X.25	49-4
Link Encryption	49-5
Star Key Management	49-5
PPP	49-9
Frame Relay	49-10
Command Reference	49-11
create star	49-12
destroy star	49-13
disable star debugging	49-14
enable star debugging	49-14
enable star mkttransfer	49-15
set star	49-16
show star	49-18
show star counter	49-20
show star mkttransfer log	49-25
show star netkey	49-26

CHAPTER 50 **Server Load Balancing**

Introduction	50-3
Overview	50-3
Server Load Balancer on the Router	50-5
TCP Virtual Balancer	50-5
Route-Based Virtual Balancer	50-6
HTTP Virtual Balancer	50-7
SSL Load Balancer	50-8
Load Balancer and Firewall	50-9
Redundancy	50-10
Healthchecks	50-12
Triggers	50-14
Configuration Example	50-18
Command Reference	50-21
add loadbalancer resource	50-21
add loadbalancer respool	50-23
add loadbalancer virtualbalancer	50-24

add loadbalancer virtualbalancer httperrorcode	50-27
delete loadbalancer resource	50-28
delete loadbalancer respool	50-29
delete loadbalancer virtualbalancer	50-30
delete loadbalancer virtualbalancer httperrorcode	50-31
disable loadbalancer	50-31
disable loadbalancer debug	50-32
disable loadbalancer healthpings	50-32
disable loadbalancer redundancy	50-33
disable loadbalancer resource	50-34
disable loadbalancer virtualbalancer	50-35
enable loadbalancer	50-36
enable loadbalancer debug	50-36
enable loadbalancer healthpings	50-37
enable loadbalancer redundancy	50-38
enable loadbalancer resource	50-39
enable loadbalancer virtualbalancer	50-39
reset loadbalancer	50-40
set loadbalancer	50-41
set loadbalancer redundancy	50-42
set loadbalancer resource	50-44
set loadbalancer respool	50-45
set loadbalancer virtualbalancer	50-46
show loadbalancer	50-48
show loadbalancer affinity	50-50
show loadbalancer connections	50-52
show loadbalancer redundancy	50-53
show loadbalancer resource	50-56
show loadbalancer respool	50-58
show loadbalancer virtualbalancer	50-60

CHAPTER 51 **WAN Load Balancing**

Introduction	51-2
WAN Load Balancer Operating Principles	51-2
Load Distribution Methods	51-3
Round Robin Distribution	51-3
Weighted Lottery Distribution	51-3
Weighted Least Connect Distribution	51-4
Weighted Fast Response Distribution	51-5
Assigning Weights	51-7
Healthchecks	51-8
Operation with Other Software Features	51-9
Operation with Firewall	51-9
Operation with IP NAT	51-10
Operation with Policy Based Routing	51-11
Operation with Priority Based Routing	51-11
Operation with UPnP NAT Traversal	51-11
Configuring WAN Load Balancing	51-11
How to configure the WAN Load Balancer	51-12
Configuration Example	51-14
Command Reference	51-17
add wanlb healthcheck	51-17
add wanlb resource	51-18
delete wanlb healthcheck	51-19
delete wanlb resource	51-20
disable wanlb	51-20
disable wanlb debug	51-21
disable wanlb healthcheck	51-22
disable wanlb resource	51-23

enable wanlb	51-24
enable wanlb debug	51-25
enable wanlb healthcheck	51-26
enable wanlb resource	51-27
reset wanlb resource	51-28
reset wanlb resource counter	51-29
set wanlb	51-30
set wanlb abd	51-31
set wanlb healthcheck	51-33
set wanlb resource	51-34
show wanlb	51-35
show wanlb debug	51-37
show wanlb healthcheck	51-38
show wanlb resource	51-39
show wanlb sessions	51-46

CHAPTER 52 Virtual Router Redundancy Protocol (VRRP)

Introduction	52-2
Virtual Router Redundancy Protocol	52-2
Interface Monitoring	52-3
Port Monitoring	52-4
VRRP on the Router	52-5
Adopting the VRRP IP Address	52-7
Triggers	52-9
Configuration Example	52-10
Master with Backup Router	52-10
Authenticated Virtual Router with No Preferred Master	52-11
Command Reference	52-12
add vrrp	52-12
add vrrp monitoredinterface	52-13
create vrrp	52-14
delete vrrp	52-17
delete vrrp monitoredinterface	52-18
destroy vrrp	52-19
disable vrrp	52-19
disable vrrp debug	52-20
enable vrrp	52-20
enable vrrp debug	52-21
set vrrp	52-22
show vrrp	52-25

CHAPTER 53 Ping Polling of Device Reachability

Introduction	53-2
Configuring Ping Polling	53-2
Triggers	53-4
Logging	53-6
Interaction with Other Protocols	53-6
Ping and Traceroute	53-6
Firewalls	53-6
Configuration Example	53-7
Command Reference	53-9
add ping poll	53-9
delete ping poll	53-11
disable ping poll	53-12
disable ping poll debug	53-12
enable ping poll	53-13
enable ping poll debug	53-13
reset ping poll	53-14
set ping poll	53-15
show ping poll	53-17

CHAPTER 54 **Simple Network Management Protocol (SNMP)**

Introduction	54-3
Network Management Framework	54-3
Structure of Management Information	54-5
Names	54-6
Instances	54-6
Syntax	54-7
Access	54-7
Status	54-8
Description	54-8
The SNMP Protocol	54-8
SNMP Versions	54-9
SNMP Messages	54-9
Polling versus Event Notification	54-10
Message Format for SNMPv1 and SNMPv2c	54-10
SNMP Communities (Version v1 and v2c)	54-11
SNMPv3 Entities	54-12
SNMPv3 Message Protocol Format	54-13
SNMPv1 and SNMPv2c on the Router	54-15
SNMP MIB Views for SNMPv1 and SNMPv2c	54-15
SNMP Communities	54-16
Configuration Example (SNMPv1 and v2)	54-20
SNMPv3 on the Router	54-21
SNMP MIB Views for SNMPv3	54-21
SNMP Defined MIB Names	54-22
SNMP Groups	54-22
SNMP Users	54-23
SNMP Target Addresses	54-23
SNMP Target Params	54-23
Configuration Example (SNMPv3)	54-24
Command Reference	54-25
add snmp community	54-25
add snmp group	54-27
add snmp targetaddr	54-28
add snmp targetparams	54-29
add snmp user	54-30
add snmp view	54-32
create snmp community	54-33
delete snmp community	54-35
delete snmp group	54-36
delete snmp targetaddr	54-36
delete snmp targetparams	54-37
delete snmp user	54-37
delete snmp view	54-38
destroy snmp community	54-39
disable snmp	54-39
disable snmp authenticate_trap	54-39
disable snmp community	54-40
enable snmp	54-40
enable snmp authenticate_trap	54-41
enable snmp community	54-41
purge snmp	54-42
set snmp community	54-42
set snmp engineid	54-43
set snmp group	54-44
set snmp local	54-45
set snmp targetaddr	54-46
set snmp targetparams	54-47
set snmp user	54-48

show snmp	54-49
show snmp community	54-52
show snmp group	54-53
show snmp targetaddr	54-54
show snmp targetparams	54-55
show snmp user	54-56
show snmp view	54-57

CHAPTER 55 **Link Layer Discovery Protocol (LLDP)**

Introduction	55-3
LLDP Overview	55-3
Type Length Values	55-4
Transmission and Reception	55-5
Storing LLDP Information	55-7
Configuring LLDP	55-8
LLDP Triggers	55-10
CDP Overview	55-11
CDP Advertisements	55-11
CDP Neighbours	55-12
Receiving and Checking Advertisements	55-12
Storing CDP Data	55-12
Configuring CDP	55-13
CDP Triggers	55-13
Command Reference	55-15
disable lldp cdp	55-15
disable lldp cdp debug	55-16
disable lldp cdp interface	55-17
disable lldp cdp ppptemplate	55-17
disable lldp managementaddress	55-18
disable lldp notifications	55-19
disable lldp port	55-20
disable lldp portdescription	55-21
disable lldp systemcapabilities	55-22
disable lldp systemdescription	55-23
disable lldp systemname	55-24
enable lldp cdp	55-25
enable lldp cdp debug	55-26
enable lldp cdp interface	55-27
enable lldp cdp ppptemplate	55-27
enable lldp managementaddress	55-28
enable lldp notifications	55-29
enable lldp port	55-30
enable lldp portdescription	55-31
enable lldp systemcapabilities	55-32
enable lldp systemdescription	55-33
enable lldp systemname	55-34
purge lldp	55-35
reset lldp	55-35
reset lldp cdp counters	55-35
reset lldp cdp table	55-36
set lldp managementaddress	55-36
set lldp notification interval	55-37
set lldp reinitdelay	55-37
set lldp txdelay	55-38
set lldp txhold	55-39
set lldp txinterval	55-39
show lldp	55-40
show lldp cdp	55-46

	show lldp cdp counters	55-47
	show lldp cdp entry	55-48
	show lldp cdp interface	55-50
	show lldp cdp neighbour	55-51
	show lldp counters	55-54
	show lldp memory	55-57
	show lldp neighbour	55-58
CHAPTER 56	Network Time Protocol (NTP)	
	Introduction	56-2
	Overview	56-2
	NTP on the Router	56-4
	Configuration Example	56-4
	Troubleshooting	56-7
	Command Reference	56-8
	add ntp peer	56-8
	delete ntp peer	56-8
	disable ntp	56-9
	enable ntp	56-9
	purge ntp	56-9
	reset ntp	56-10
	set ntp utcoffset	56-10
	show ntp	56-11
CHAPTER 57	Scripting	
	Introduction	57-2
	Activating a Script at Login	57-2
	Creating Scripts	57-2
	Using Script Commands	57-3
	Using the Built-In Text Editor	57-3
	Loading from a TFTP Server	57-3
	Loading from an Asynchronous Port	57-4
	Using Scripts	57-4
	Script Parameters	57-4
	Script Control Structures	57-5
	Command Reference	57-7
	activate script	57-7
	add script	57-8
	deactivate script	57-9
	delete script	57-10
	if..then..else..endif	57-11
	set script	57-12
	show script	57-14
	wait	57-15
CHAPTER 58	Trigger Facility	
	Introduction	58-2
	Defining Triggers	58-3
	Triggers for Hardware Features	58-4
	Power Supply Units (PSUs)	58-4
	Configuration Example	58-5
	Command Reference	58-7
	activate trigger	58-7
	add trigger	58-8
	create trigger	58-9
	delete trigger	58-16
	destroy trigger	58-16

disable trigger	58-17
enable trigger	58-18
purge trigger	58-18
set trigger	58-19
show trigger	58-25

CHAPTER 59 **Logging Facility**

Introduction	59-2
Format of Log Messages	59-3
Secure Router Log Protocol (SRLP)	59-4
Net Manage Message Protocol	59-4
Processing Log Messages	59-4
Output Definitions and Message Filters	59-4
Destinations	59-6
Configuring Output Definitions	59-8
Configuring Message Filters	59-9
Configuration Example	59-10
Command Reference	59-13
add log output	59-14
add log receive	59-17
create log output	59-19
delete log output	59-23
delete log receive	59-23
destroy log output	59-24
disable log	59-24
disable log generation	59-24
disable log output	59-25
disable log reception	59-25
enable log	59-26
enable log generation	59-26
enable log output	59-27
enable log reception	59-27
flush log output	59-28
purge log	59-28
set log output	59-29
set log receive	59-35
set log utcoffset	59-36
show log	59-37
show log counter	59-43
show log output	59-45
show log queue	59-50
show log receive	59-51
show log status	59-53

CHAPTER 60 **Terminal Server**

Introduction	60-2
TTY Devices	60-2
Multiple Sessions	60-5
Accessing Telnet Hosts and Other Services	60-6
Telnet	60-6
Remote Management	60-7
Services	60-7
Reverse Telnet	60-8
Client Command Limitations	60-9
Configuration Examples	60-10
Telnet Service	60-10
Locally Defined Service	60-10
Permanent Assignment	60-11
Remote Use of Asynchronous Services	60-12
Troubleshooting	60-14

Command Reference	60-15
connect	60-16
create service	60-17
destroy service	60-18
disable rtelnet	60-18
disable rtelnet debug	60-19
disable telnet server	60-19
disconnect	60-20
enable rtelnet	60-20
enable rtelnet debug	60-21
enable telnet server	60-22
reconnect	60-22
set service	60-23
set rtelnet	60-24
set telnet	60-25
set tty	60-26
show service	60-28
show sessions	60-29
show telnet	60-30
show tty	60-31
telnet	60-35
 CHAPTER 61 Line Printer Daemon (LPD)	
Introduction	61-2
Line Printer Daemon (LPD)	61-2
LPD on the Router	61-2
Configuring LPD	61-3
Printer Operation	61-6
Troubleshooting	61-7
Command Reference	61-9
create lpd	61-10
destroy lpd	61-11
disable lpd	61-11
enable lpd	61-12
reset lpd	61-12
set lpd	61-13
show lpd	61-14
 CHAPTER 62 Stream Printing	
Introduction	62-2
Overview of Stream Printing	62-2
Configuring Stream Printing	62-3
Command Reference	62-5
add stream	62-5
delete stream	62-6
reset stream	62-6
set stream	62-7
show stream	62-8
 CHAPTER 63 Permanent Assignments	
Introduction	63-2
Overview of Permanent Assignments	63-2
Configuring a Permanent Assignment	63-3
Command Reference	63-5
add perm	63-5
delete perm	63-6
reset perm	63-6
set perm	63-7
show perm	63-8

CHAPTER 64 Test Facility

Introduction	64-2
Ethernet Port Tests	64-4
Asynchronous Port Tests	64-5
Synchronous Interface Tests	64-6
Basic Rate ISDN Interface Tests	64-7
Primary Rate ISDN Interface Tests	64-9
PAC Card Tests	64-9
Command Reference	64-11
disable test interface	64-11
enable test interface	64-12
reset test interface	64-13
show test	64-14

APPENDIX A Messages

Introduction	A-3
Message Descriptions	A-4
smmm001–smmm255: Global Messages	A-4
s002256–s002999: Frame Relay	A-14
s003256–s003999: Point-to-Point Protocol	A-17
s004256–s004999: AppleTalk	A-21
s005256–s005999: Internet Protocol (IP)	A-24
s006256–s006999: Novell IPX	A-38
s007256–s007999: SYN Driver	A-42
s008256–s008999: DECnet	A-42
s013256–s013999: X.25 Layer 3 (DCE)	A-43
s014256–s014999: Q.931	A-45
s017256–s017999: LAPB	A-46
s018256–s018999: TEST Module	A-47
s019256–s019999: LAPD	A-49
s020256–s020999: Synchronous Tunnelling (STT)	A-53
s021256–s021999: Stream Printing	A-53
s022256–s022999: TCP	A-54
s023256–s023999: Ethernet Driver	A-54
s024256–s024999: Permanent Assignments	A-55
s026256–s026999: LPD Server	A-56
s027256–s027999: Bridging	A-57
s030256–s030999: X.25 Layer 3 (DTE)	A-62
s031256–s031999: FLASH Driver	A-63
s033256–s033999: TELNET	A-65
s034256–s034999: System	A-65
s035256–s035999: Command Processor	A-68
s036256–s036999: TTY	A-68
s037256–s037999: ISDN Call Control	A-71
s038256–s038999: MIOX	A-74
s039256–s039999: BOOTP	A-76
s040256–s040999: Network Time Protocol (NTP)	A-77
s041256–s041999: BRI Driver	A-78
s042256–s042999: PRI Driver	A-79
s043256–s043999: PORT Driver	A-81
s045256–s045999: User Authentication Facility	A-84
s046256–s046999: Asynchronous Call Control	A-88
s048256–s048999: LOADER	A-92
s049256–s049999: INSTALL	A-96
s050256–s050999: Open Shortest Path First (OSPF)	A-99
s051256–s051999: RADIUS	A-103
s052256–s052999: Generic Routing Encapsulation (GRE)	A-104
s053256–s053999: Trigger Facility	A-105

s054256–s054999: Scripting	A-107
s055256–s055999: Time Division Multiplexing (TDM)	A-108
s056256–s056999: File Subsystem	A-110
s057256–s057999: Logging Facility	A-113
s058256–s058999: PING	A-116
s059256–s059999: Simple Network Management Protocol (SNMP)	A-118
s060256–s060999: SCC Driver	A-121
s062256–s062999: Security Associations	A-121
s066256–s066999: Internet Protocol version 6 (IPv6)	A-122
s067256–s067999: Layer 2 Tunnelling Protocol (L2TP)	A-126
s070256–s070999: Dynamic Host Configuration Protocol (DHCP)	A-127
s073256–s073999: Encryption	A-129
s074256–s074999: Star Key Management	A-131
s075256–s075999: Secure Shell	A-132
s076256–s076999: Resource Reservation Protocol (RSVP)	A-134
s077256–s077999: Firewall	A-134
s079256–s079999: Transaction Packet Assembler Disassembler (TPAD)	A-140
s081256–s081999: IP Security (IPsec)	A-141
s082256–s082999: ISAKMP/IKE	A-146
s083256–s083999: Finger	A-147
s084256–s084999: HTTP	A-148
s087256–s087999: Layer 3 Switching	A-148
s088256–s088999: Virtual Router Redundancy Protocol (VRRP)	A-163
s089256–s089999: VLANs	A-164
s092256–s092999: Spanning Tree Protocol (STP)	A-176
s093256–s093999: GUI	A-178
s094256–s094999: Open Systems Interconnection (OSI)	A-180
s095256–s095999: Public Key Infrastructure (PKI)	A-182
s096256–s096999: Lightweight Directory Access Protocol (LDAP)	A-183
s097256–s097999: Protocol Independent Multicast (PIM)	A-187
s100256–s100999: Generic Classifier	A-190
s103256–s103999: Border Gateway Protocol version 4 (BGP-4)	A-192
s104256–s104999: Load Balancer	A-198
s106256–s106999: Compact Flash	A-202
s110256–s110999: Voice over IP (VoIP)	A-205
s112256–s112999: S/Key	A-208
s117256–s117999: Dynamic Host Configuration Protocol v6 (DHCP6)	A-208
s118256–s118999: Port Authentication	A-210
s123256–s123999: Software Quality of Service	A-212
s124256–s124999: Multiple Spanning Tree Protocol (MSTP)	A-217
s130256–s130999: WAN Load Balancing	A-217
s132256–s132999: Link Layer Discovery Protocol	A-219

APPENDIX B Reference Tables

Module Identifiers and Names	B-2
Flash File System Message Codes	B-7
ISDN Q.931 Call Clearance Cause Codes	B-9
Log Message Types and Subtypes	B-11

APPENDIX C **SNMP MIBs**

Introduction	C-3
Allied Telesis Enterprise MIB	C-4
Products Subtree	C-5
AT Router Subtree	C-9
Objects Group	C-9
traps Group	C-16
sysinfo Group	C-16
arInterfaces Group	C-16
Modules Group	C-18
MIB-II MIB	C-29
Implementation	C-30
Interfaces Group MIB	C-31
Implementation	C-32
IP Forwarding Table MIB	C-33
Implementation	C-33
Ethernet-like Interface Types MIB	C-34
Implementation	C-34
Medium Attachment Unit (MAU) MIB	C-35
Implementation	C-36
Bridge MIB	C-37
Implementation	C-38
Port Access Control MIB	C-39
Implementation	C-40
RMON MIB	C-41
Implementation	C-42
Frame Relay DTE MIB	C-43
Implementation	C-44
DS1, E1, DS2 and E2 Interface Types MIB	C-45
Implementation	C-46
Host Resources MIB	C-47
Implementation	C-48
SNMP v3 MIBs	C-50
Implementation	C-50
Border Gateway Protocol v4 (BGP-4) MIB	C-51
Implementation	C-52
Link Layer Discovery Protocol (LLDP) MIB	C-53
Implementation	C-53
State and Topology Change Traps	C-54

Glossary**Index**