

AT-8600 Series Switch

AlliedWare™ Operating System

Software Reference for Version 2.9.1

DoS Attack Prevention Edition



AT-8624T/2M
AT-8624PoE
AT-8648T/2SP

AlliedWare OS Software Reference for Software Version 2.9.1, DoS Attack Prevention Edition.

Document Number C613-03127-00 REV B.

© 2005-2008 Allied Telesis, Inc. All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

All company names, logos, and product designs that are trademarks or registered trademarks are the property of their respective owners.

Contents

About this Software Reference

Introduction	xxxv
Structure of this Software Reference	xxxv
Intended Audience	xxxviii
Conventions	xxxviii
Command Descriptions	xl
Where To Find More Information	xli
Obtaining Copies of Internet Protocols and Standards	xl ii
Publicly Accessible Documents	xl ii
Allied Telesis Offices and Locations	xl ii
Reader's Comments	xl iii

Command Summary

CHAPTER 1 Getting Started

Establishing a Management Session with the Switch	1-2
Assigning an IP Address	1-2
About Setting Routes	1-2
Checking Connections with PING	1-3
Changing a Password	1-3
Using Command Line Help	1-3
Using GUI Help	1-4
Setting System Parameters	1-4
Saving Configurations Entered with the CLI	1-4
Saving Configurations Entered with the GUI	1-5
Troubleshooting Traffic Flow	1-5
Software Upgrades	1-6
SNMP and MIBs	1-6
To Avoid Problems	1-7
For More Information	1-8

CHAPTER 2 Using the Command Line Interface (CLI)

Introduction	2-2
Parts of a Command	2-2
Entering a Command	2-3
Shortcuts	2-3
Command Sets	2-5
What is Valid Syntax?	2-6
What Commands does a Feature Support?	2-8
Editing Commands	2-9

Recalling Commands	2-9
Command Reference	2-11
add alias	2-11
delete alias	2-13
help	2-13
set command assignmentoperator	2-14
set help	2-15
show alias	2-15
show command history	2-16

CHAPTER 3 **Using the Graphical User Interface (GUI)**

Introduction	3-2
What is the GUI?	3-2
Accessing the Switch via the GUI	3-3
Browser and PC Setup	3-3
Establishing a Connection to the Switch	3-4
Secure Access	3-9
System Status	3-10
Using the GUI: Navigation and Features	3-11
The Configuration Menu	3-11
Using Configuration Pages	3-12
The Management Menu	3-15
The Monitoring Menu	3-15
The Diagnostics Menu	3-15
Combining GUI and CLI Configuration	3-16
Troubleshooting	3-16
Enabling and Disabling the GUI	3-16
Deleting Temporary Files	3-16
Accessing the Switch via the GUI	3-17
Command Reference	3-19
disable gui	3-19
enable gui	3-20
reset gui	3-20
show gui	3-21

CHAPTER 4 **Configuring and Monitoring the System**

Introduction	4-3
System Identification	4-3
Time and Date	4-4
Timezone and UTC Offset	4-5
Monitoring Switch Operations	4-6
Monitoring the Power Supply	4-10
Emailing Alerts from the Switch	4-10
Configuration Examples	4-11
Command Reference	4-13
activate cpu extended	4-13
clear summertime	4-14
clear timezone	4-15
delete mail	4-15
disable cpu extended	4-16
disable debug active	4-16
disable mail debug	4-17
disable summertime	4-17
dump	4-18
enable cpu extended	4-20
enable summertime	4-20
enable mail debug	4-21
mail	4-22

modify	4-24
reset cpu utilisation	4-25
reset mail	4-25
set mail	4-26
set summertime	4-27
set system contact	4-29
set system location	4-30
set system name	4-31
set time	4-32
set timezone	4-33
show buffer	4-34
show cpu	4-38
show debug	4-40
show debug active	4-42
show exception	4-45
show mail	4-46
show startup	4-47
show summertime	4-48
show system	4-49
show system environmental	4-52
show system serialnumber	4-53
show system startup	4-53
show time	4-54
show timezone	4-55

CHAPTER 5 **Managing Configuration Files and Software Versions**

Managing Configuration Files	5-3
Loading Files onto the Switch	5-4
Loading from a Trivial File Transfer Protocol (TFTP) Server	5-4
Loading from a Web Server	5-5
Loading from a Lightweight Directory Access Protocol (LDAP) Server	5-7
Loading from a Remote Device using Secure Copy	5-8
Additional Loader Commands	5-9
Uploading Files from the Switch	5-9
Using HTTP	5-9
Using TFTP and ZMODEM	5-11
Using Secure Copy	5-12
Software Upgrades	5-13
Upgrade Overview	5-13
Install Process	5-14
Filenames	5-15
Licencing	5-15
Patches	5-16
Example: Upgrading to new software	5-17
Example: Upgrading to a new patch file	5-18
Upgrading the GUI	5-19
Command Reference	5-22
create config	5-22
delete install	5-23
disable feature	5-24
disable http debug	5-25
disable http server	5-25
disable ldap debug	5-26
disable release	5-26
enable feature	5-27
enable http debug	5-28
enable http server	5-28
enable ldap debug	5-29

enable release	5-30
load	5-31
purge ldap	5-36
reset http server	5-36
reset loader	5-36
restart	5-37
set config	5-38
set http server	5-39
set install	5-40
set loader	5-42
show config	5-46
show config dynamic	5-48
show feature	5-52
show http client	5-54
show http debug	5-55
show http server	5-56
show http server session	5-57
show install	5-58
show ldap	5-59
show ldap request	5-60
show loader	5-62
show patch	5-64
show release	5-65
upload	5-66

CHAPTER 6 **Managing the File System**

Introduction	6-2
File Naming Conventions	6-2
Long Filenames in Releases	6-3
Working with Files	6-4
Built-In Editor	6-5
Using Wildcards	6-5
Sending Output to a Text File	6-5
Flash Memory	6-6
The Flash File System (FFS)	6-7
If You Clear Flash Memory Completely	6-8
Command Reference	6-9
activate flash compaction	6-9
add file	6-10
clear flash totally	6-11
copy	6-12
create file	6-13
delete file	6-14
edit	6-15
purge file translationtable	6-17
rename	6-18
reset file permanentredirect	6-19
show ffile	6-20
show file	6-22
show file permanentredirect	6-25
show flash	6-26
show flash physical	6-28

CHAPTER 7 Overview of Switching

Introduction	7-2
Switch Ports	7-2
Enabling and Disabling Switch Ports	7-2
Autonegotiation of Port Speed and Duplex Mode	7-3
Port Trunking	7-3
Packet Storm Protection	7-3
Port Mirroring	7-3
Port Security	7-3
Virtual Local Area Networks (VLANs)	7-4
Creating VLANs	7-4
Summary of VLAN tagging rules	7-6
VLAN Interaction with STPs and Trunk Groups	7-6
Generic VLAN Registration Protocol (GVRP)	7-6
Quality of Service	7-6
Spanning Tree Protocol (STP)	7-8
Spanning Tree and Rapid Spanning Tree Port States	7-8
Multiple Spanning Tree Protocol (MSTP)	7-8
IP Switching	7-9
Routing Information Protocol (RIP)	7-9
IGMP Snooping	7-10
Triggers	7-10

CHAPTER 8 Switching

Introduction	8-4
Switch Ports	8-5
Enabling and Disabling Switch Ports	8-5
Speed and Duplex Mode	8-7
Switch Instances on 48-Port Switches	8-9
Port Trunking	8-10
Link Aggregation Control Protocol (LACP)	8-11
Packet Storm Protection	8-12
Port Mirroring	8-12
Port Security	8-13
Virtual Local Area Networks (VLANs)	8-14
Dynamic VLAN Assignment	8-15
802.1x Guest VLAN	8-16
VLAN Tagging	8-16
VLAN Membership of Untagged Packets	8-19
Creating VLANs	8-21
Summary of VLAN Tagging Rules	8-22
VLAN Interaction with Trunk Groups	8-22
Static and Dynamic VLANs	8-22
Protected VLANs	8-23
Private VLANs	8-23
VLAN Relaying	8-25
Configuring VLAN Relaying	8-27
The Layer 2 Switching Process	8-28
The Ingress Rules	8-28
The Learning Process	8-29
The Forwarding Process	8-30
The Egress Rules	8-30
Quality of Service	8-31
Layer 2 Filtering	8-32
Securing a Single VLAN through Switch Filters	8-32
Hardware Packet Filters	8-34
Classifier-Based Packet Filters	8-34
Ordering Filter Entries	8-35
Configuring Filters	8-36
Filter Modes in 48-Port Switches	8-37

Layer 3 Based Packet Filters	8-38
Layer 3 Filter Matches	8-38
Layer 3 Filter Entries	8-39
Access Control Lists (ACLs)	8-39
Triggers	8-40
Configuration Examples	8-41
One Switch to Extend a Local LAN	8-41
VLAN with Untagged Ports	8-42
VLAN with Tagged Ports	8-43
Meshed Network with VLAN Tagged Ports	8-45
Command Reference	8-49
activate switch port	8-49
add lacp port	8-50
add switch filter	8-52
add switch hwfilter classifier	8-54
add switch l3filter entry	8-56
add switch l3filter match	8-59
add switch trunk	8-62
add vlan port	8-63
add vlanrelay	8-65
create switch trunk	8-66
create vlan	8-68
create vlanrelay	8-69
delete lacp port	8-70
delete switch filter	8-70
delete switch hwfilter classifier	8-71
delete switch l3filter	8-71
delete switch l3filter entry	8-72
delete switch trunk	8-73
delete vlan port	8-74
delete vlanrelay	8-75
destroy switch trunk	8-76
destroy vlan	8-76
destroy vlanrelay	8-77
disable lacp	8-77
disable lacp debug	8-78
disable switch ageingtimer	8-78
disable switch debug	8-79
disable switch filter vlansecure	8-80
disable switch hwfilter	8-80
disable switch l3filter	8-81
disable switch learning	8-81
disable switch mirror	8-82
disable switch port	8-83
disable vlan debug	8-84
disable vlanrelay	8-84
disable vlanrelay debug	8-85
enable lacp	8-85
enable lacp debug	8-86
enable switch ageingtimer	8-86
enable switch bist	8-87
enable switch debug	8-88
enable switch filter vlansecure	8-89
enable switch hwfilter	8-89
enable switch l3filter	8-90
enable switch learning	8-90
enable switch mirror	8-90
enable switch port	8-91
enable vlan debug	8-92

enable vlanrelay	8-93
enable vlanrelay debug	8-93
purge lacp	8-94
reset lacp port counter	8-94
reset switch	8-94
reset switch port	8-95
set lacp port	8-96
set lacp priority	8-97
set switch ageingtimer	8-97
set switch hwfilter classifier	8-98
set switch hwfilter mode	8-100
set switch l3ageingtimer	8-101
set switch l3filter entry	8-102
set switch l3filter match	8-105
set switch mirror	8-107
set switch port	8-108
set switch qos	8-113
set switch trunk	8-114
set vlan port	8-115
set vlan virtactive	8-116
show lacp	8-117
show lacp port	8-118
show lacp port counter	8-120
show lacp trunk	8-121
show switch	8-122
show switch counter	8-124
show switch debug	8-126
show switch fdb	8-127
show switch filter	8-129
show switch hwfilter	8-131
show switch l3filter	8-133
show switch mstp	8-135
show switch port	8-137
show switch port counter	8-141
show switch port intrusion	8-144
show switch qos	8-145
show switch stp	8-146
show switch trunk	8-148
show vlan	8-149
show vlan debug	8-151
show vlanrelay	8-152

CHAPTER 9 **Spanning Trees**

Introduction	9-3
Overview	9-3
Multiple Spanning Trees and STP Interaction with VLANs	9-3
Spanning Tree Operation	9-4
The Forwarding Process	9-5
Electing a Root Bridge and Designated Bridge	9-6
Spanning Tree Modes	9-6
Rapid Mode Spanning Tree Types	9-7
Spanning Tree and Rapid Spanning Tree Port States	9-7
Configuring STP	9-8
Simple Meshed Network Example	9-12
Multiple Spanning Tree Protocol (MSTP)	9-13
Multiple Spanning Tree Regions	9-13
Bridge Protocol Data Units (BPDUs)	9-14
Compatibility with Previous Spanning Tree Protocols	9-15

Configuring MSTP	9-16
Common and Internal Spanning Tree (CIST)	9-22
The Relationship between Spanning Trees and Trunks	9-26
Command Reference	9-27
activate mstp migrationcheck port	9-27
add mstp msti vlan	9-28
add stp vlan	9-29
create mstp msti	9-30
create stp	9-32
delete mstp msti vlan	9-33
delete stp vlan	9-34
destroy mstp msti	9-35
destroy stp	9-35
disable mstp	9-36
disable mstp cist port	9-36
disable mstp debug	9-37
disable mstp msti port	9-38
disable mstp port	9-39
disable stp	9-40
disable stp debug	9-41
disable stp port	9-43
disable switch stpforward	9-44
enable mstp	9-44
enable mstp cist port	9-45
enable mstp debug	9-46
enable mstp msti port	9-48
enable mstp port	9-49
enable stp	9-50
enable stp debug	9-51
enable stp port	9-53
enable switch stpforward	9-54
purge mstp	9-54
purge stp	9-55
reset mstp counter port	9-55
reset stp	9-56
set mstp	9-57
set mstp cist	9-59
set mstp cist port	9-60
set mstp msti	9-62
set mstp msti port	9-63
set stp	9-65
set stp port	9-68
show mstp	9-72
show mstp configid	9-74
show mstp cist	9-75
show mstp cist port	9-77
show mstp counter port	9-79
show mstp debug	9-81
show mstp msti	9-83
show mstp msti port	9-86
show mstp table	9-88
show stp	9-89
show stp counter	9-93
show stp debug	9-95
show stp port	9-96
show stp port rstpstate	9-99

CHAPTER 10 Generic Attribute Registration Protocol (GARP)

Introduction	10-2
GARP Operations	10-2
Overview of Generic VLAN Registration Protocol (GVRP)	10-5
Configuring GARP	10-6
Command Reference	10-8
disable garp	10-9
disable garp debug	10-10
disable garp gip	10-11
enable garp	10-12
enable garp debug	10-13
enable garp gip	10-15
reset garp	10-16
set garp port	10-17
set garp timer	10-19
show garp	10-21
show garp counter	10-23
show garp db	10-26
show garp debug	10-27
show garp gip	10-28
show garp machine	10-29

CHAPTER 11 Power over Ethernet (PoE)

Introduction	11-2
Power Capacity	11-3
Port Prioritisation	11-4
PoE Device Classes	11-5
PoE Threshold	11-5
Upgrading PoE Firmware	11-6
Command Reference	11-7
disable poe debug	11-7
disable poe port	11-8
enable poe debug	11-8
enable poe port	11-9
set poe detect	11-9
set poe firmware	11-10
set poe port	11-11
set poe threshold	11-12
show poe	11-13
show poe version	11-16

CHAPTER 12 Interfaces

Introduction	12-2
Naming Interfaces	12-3
Ethernet	12-3
Encapsulations	12-4
Asynchronous Interfaces	12-6
Configuration	12-7
Session Timeout	12-9
Connecting a Modem to the Asynchronous Port	12-10
MIB Counters	12-10
Autobauding	12-11
Making Asynchronous Ports Respond More Quickly	12-12
Testing Serial Data Circuits	12-12
Displaying Interfaces	12-13
Interface Link Traps	12-13
Managing Interfaces with SNMP	12-14

Command Reference	12-15
connect asyn	12-15
disable asyn	12-15
disable interface linktrap	12-16
enable asyn	12-17
enable interface linktrap	12-18
purge asyn	12-19
reset asyn	12-19
reset asyn counters	12-20
reset asyn history	12-21
reset interface counters	12-21
set asyn	12-22
set interface traplimit	12-27
show asyn	12-28
show asyn counters	12-33
show asyn history	12-35
show interface	12-36
show interface counters	12-39
 CHAPTER 13 Internet Protocol (IP)	
Introduction	13-5
IP Packets	13-5
Addressing	13-7
Subnets	13-8
Assigning an IP Address	13-9
Multihoming	13-10
Local Interfaces	13-10
Address Resolution Protocol (ARP)	13-12
Static ARP Entries	13-12
Adding Static ARP Entries with Multicast MAC Addresses	13-13
Timing Out ARP Entries	13-14
Deleting ARP Entries	13-15
Proxy ARP	13-16
Waiting for a Response to an ARP Request	13-17
MAC Address Logging	13-17
DHCP Client	13-17
ICMP	13-18
ICMP Router Discovery Advertisements	13-19
Routing	13-21
Types of Routes	13-21
The Routing Table	13-22
Configuring Static Routes	13-22
Caching Routes	13-23
Dynamic Routing Protocols	13-23
Setting Preference of Dynamically-Learned Routes	13-24
Displaying Route Information	13-24
Routing Information Protocol (RIP)	13-25
Open Shortest Path First (OSPF)	13-25
Metrics	13-25
OSPF Auto Cost Calculation	13-25
Policy-Based Routing	13-26
Priority-Based Routing	13-27
Route Templates	13-28
Domain Name System (DNS)	13-29
Usage of Domain Name Servers	13-29
Configuring Domain Name Servers	13-30
DNS Caching	13-32
Named Hosts	13-32

Traffic Filters	13-33
SNMP	13-35
Control and Debug Commands	13-35
Ping and Trace Route	13-36
Ping	13-36
Trace Route	13-37
Finger	13-37
Security Options	13-38
Broadcast Forwarding	13-38
IP Multicasting	13-39
Static Multicast Forwarding	13-39
Remote Address Assignment	13-40
Configuration Example	13-40
Troubleshooting	13-41
No Route Exists to the Remote Switch	13-41
Getting an IP Address from DHCP	13-41
Telnet Fails	13-42
Command Reference	13-43
add ip advertise interface	13-44
add ip arp	13-45
add ip dns	13-46
add ip filter	13-48
add ip helper	13-55
add ip host	13-56
add ip interface	13-57
add ip local	13-61
add ip route	13-62
add ip route template	13-64
delete ip advertise interface	13-65
delete ip arp	13-66
delete ip dns	13-66
delete ip filter	13-67
delete ip helper	13-68
delete ip host	13-69
delete ip interface	13-70
delete ip local	13-71
delete ip route	13-72
delete ip route template	13-73
delete tcp	13-73
disable ip	13-74
disable ip advertise	13-74
disable ip arp agepoll	13-75
disable ip arp log	13-75
disable ip debug	13-75
disable ip dnsrelay	13-76
disable ip echoreply	13-76
disable ip fofilter	13-77
disable ip forwarding	13-78
disable ip helper	13-78
disable ip icmpreply	13-79
disable ip interface	13-80
disable ip macdisparity	13-80
disable ip remoteassign	13-81
disable ip route	13-81
disable ip spoofcheck	13-81
disable ip srcroute	13-82
disable tcp debug	13-82
disable telnet server	13-83
enable ip	13-83

enable ip advertise	13-84
enable ip arp agepoll	13-84
enable ip arp log	13-84
enable ip debug	13-85
enable ip dnsrelay	13-86
enable ip echoreply	13-86
enable ip fofilter	13-87
enable ip forwarding	13-88
enable ip helper	13-88
enable ip icmpreply	13-89
enable ip interface	13-89
enable ip macdisparity	13-90
enable ip remoteassign	13-91
enable ip route	13-91
enable ip spoofcheck	13-92
enable ip srcroute	13-92
enable tcp debug	13-93
enable telnet server	13-93
finger	13-94
ping	13-95
purge ip	13-97
reset ip	13-97
reset ip counter	13-98
reset ip interface	13-98
set ip advertise interface	13-99
set ip arp	13-100
set ip arp refresharp	13-101
set ip arp timeout	13-101
set ip arpwaittimeout	13-102
set ip dns	13-103
set ip dns cache	13-105
set ip dnsrelay	13-106
set ip filter	13-107
set ip host	13-111
set ip interface	13-112
set ip local	13-116
set ip nameserver	13-118
set ip route	13-119
set ip route preference	13-121
set ip route template	13-122
set ip secondarynameserver	13-123
set ping	13-124
set trace	13-126
show ip	13-128
show ip advertise	13-131
show ip arp	13-133
show ip cache	13-134
show ip counter	13-135
show ip debug	13-144
show ip dns	13-145
show ip dns cache	13-147
show ip filter	13-148
show ip helper	13-150
show ip host	13-152
show ip icmpreply	13-153
show ip interface	13-154
show ip route	13-158
show ip route multicast	13-162
show ip route preference	13-163

show ip route template	13-164
show ip udp	13-166
show ping	13-168
show tcp	13-170
show trace	13-175
stop ping	13-177
stop trace	13-177
trace	13-178

CHAPTER 14 **Dynamic Host Configuration Protocol (DHCP)**

Introduction	14-2
Configuring the DHCP Server	14-3
BOOTP Relay Agent	14-4
DHCP Option 82 Relay	14-6
Configuring the DHCP Client	14-6
DHC Files	14-6
Configuration Example	14-7
Troubleshooting	14-8
Command Reference	14-9
add bootp relay	14-10
add dhcp option	14-11
add dhcp policy	14-13
add dhcp range	14-19
create dhcp policy	14-20
create dhcp range	14-21
delete bootp relay	14-22
delete dhcp option	14-23
delete dhcp policy	14-24
delete dhcp range	14-29
destroy dhcp policy	14-29
destroy dhcp range	14-30
disable bootp relay	14-30
disable bootp relay option82	14-31
disable dhcp	14-31
disable dhcp debug	14-32
enable bootp relay	14-32
enable bootp relay option82	14-33
enable dhcp	14-33
enable dhcp debug	14-34
purge bootp relay	14-35
set bootp relay maxhops	14-35
set bootp relay option82	14-36
set bootp relay option82 port	14-37
set dhcp	14-38
set dhcp option	14-39
set dhcp policy	14-40
set dhcp range	14-46
show bootp relay	14-47
show bootp relay port	14-49
show dhcp	14-50
show dhcp client	14-52
show dhcp policy	14-54
show dhcp range	14-56

CHAPTER 15 DHCP Snooping

Introduction	15-2
The Binding Database	15-2
DHCP Filtering	15-4
DHCP Option 82	15-4
DHCP Snooping ARP Security	15-5
Configuration Examples	15-6
Command Reference	15-7
add dhcpsnooping binding	15-7
delete dhcpsnooping binding	15-8
disable dhcpsnooping	15-8
disable dhcpsnooping arpsecurity	15-9
disable dhcpsnooping debug	15-9
disable dhcpsnooping ipfiltering	15-10
disable dhcpsnooping log	15-10
disable dhcpsnooping option82	15-11
disable dhcpsnooping strictunicast	15-11
enable dhcpsnooping	15-12
enable dhcpsnooping arpsecurity	15-12
enable dhcpsnooping debug	15-13
enable dhcpsnooping ipfiltering	15-14
enable dhcpsnooping log	15-14
enable dhcpsnooping option82	15-15
enable dhcpsnooping strictunicast	15-15
set dhcpsnooping arpsecurity	15-16
set dhcpsnooping checkinterval	15-17
set dhcpsnooping port	15-18
show dhcpsnooping	15-20
show dhcpsnooping counter	15-22
show dhcpsnooping database	15-23
show dhcpsnooping filter	15-25
show dhcpsnooping port	15-26

CHAPTER 16 MAC-Forced Forwarding

Introduction	16-2
Overview	16-2
Configuring an Ethernet Access Node	16-4
Monitoring and Troubleshooting	16-6
Debugging	16-7
Logging	16-7
Configuration Examples	16-7
Command Reference	16-8
add macff server	16-8
delete macff server	16-10
disable macff interface	16-11
disable macff debug	16-12
enable macff interface	16-13
enable macff debug	16-14
reset macff counter	16-15
set macff server	16-16
show macff	16-17
show macff database	16-20
show macff interface	16-22
show macff interface counter	16-24

CHAPTER 17 **IP Multicasting**

Introduction	17-3
References	17-3
IP Multicast Routing	17-4
Interoperability between Multicast Routing Protocols	17-5
Protocol Independent Multicast (PIM)	17-5
PIM Dense Mode	17-6
PIM Sparse Mode	17-8
Internet Group Management Protocol (IGMP)	17-16
Configuring IGMP	17-16
Static IGMP	17-17
IGMP Proxy	17-19
IGMP Filtering	17-21
IGMP Throttling	17-23
IGMP Snooping	17-24
Downstream routers	17-25
Fast Leave	17-26
Query Solicitation	17-27
Blocking All-Groups Entries	17-28
Multicast Switching	17-28
Multicast VLAN Registration (MVR)	17-28
Dynamic MVR	17-29
Compatible MVR	17-29
Immediate Leave	17-29
Configuring MVR	17-30
Configuration Examples	17-31
Static IGMP	17-31
Protocol Independent Multicast (PIM)	17-32
Command Reference	17-40
add igmp filter	17-41
add igmpsnooping routeraddress	17-43
add igmpsnooping vlan	17-43
add ip igmp destination	17-44
add ip mvr	17-45
add pim bsrcandidate	17-46
add pim interface	17-47
add pim rpcandidate	17-49
create igmp filter	17-50
create ip igmp destination	17-51
create ip mvr	17-52
delete igmp filter	17-53
delete igmpsnooping routeraddress	17-53
delete igmpsnooping vlan	17-54
delete ip igmp destination	17-55
delete ip mvr	17-56
delete pim bsrcandidate	17-56
delete pim interface	17-57
delete pim rpcandidate	17-58
destroy igmp filter	17-59
destroy ip igmp destination	17-59
destroy ip mvr	17-60
disable igmpsnooping	17-60
disable ip igmp	17-61
disable ip igmp allgroup	17-61
disable ip igmp debug	17-61
disable ip igmp interface	17-62
disable ip mvr	17-63
disable ip mvr debug	17-63
disable pim	17-63

disable pim bsmsecuritycheck	17-64
disable pim debug	17-64
enable igmpsnooping	17-65
enable ip igmp	17-65
enable ip igmp allgroup	17-66
enable ip igmp debug	17-66
enable ip igmp interface	17-67
enable ip mvr	17-67
enable ip mvr debug	17-68
enable pim	17-68
enable pim bsmsecuritycheck	17-69
enable pim debug	17-69
purge pim	17-70
reset pim interface	17-70
set igmp filter	17-71
set igmpsnooping vlan	17-72
set igmpsnooping routermode	17-73
set ip igmp	17-74
set ip igmp interface	17-75
set ip mvr	17-76
set pim	17-77
set pim log	17-78
set pim bsrcandidate	17-79
set pim interface	17-80
set pim rpcandidate	17-82
show igmp filter	17-83
show igmpsnooping	17-85
show igmpsnooping vlan counters	17-88
show igmpsnooping routeraddress	17-90
show ip igmp	17-91
show ip igmp counter	17-94
show ip igmp debug	17-97
show ip mvr	17-98
show ip mvr counter	17-99
show pim	17-100
show pim bsrcandidate	17-101
show pim config	17-102
show pim counters	17-103
show pim debug	17-107
show pim interface	17-108
show pim neighbour	17-110
show pim route	17-111
show pim rpcandidate	17-117
show pim rpset	17-118
show pim staterefresh	17-120
show pim timer	17-121

CHAPTER 18 **Routing Information Protocol (RIP)**

Introduction	18-2
Configuring RIP	18-3
Redistributing Routes into RIP	18-4
Statically-Configured Routes	18-4
Configuration Example	18-4
Command Reference	18-6
add ip rip interface	18-6
add ip trusted	18-8
delete ip rip interface	18-9
delete ip trusted	18-9

set ip rip interface	18-10
set ip riptimer	18-13
show ip rip	18-14
show ip rip counter	18-15
show ip riptimer	18-17
show ip trusted	18-18

CHAPTER 19 Open Shortest Path First (OSPF)

Introduction	19-3
OSPF Features	19-3
Adjacency and Designated Routers	19-5
Link State Advertisements	19-5
OSPF Packet Types	19-6
OSPF States	19-7
Automatic Cost Calculation	19-8
Routing with OSPF	19-9
Network Types	19-9
Passive Interfaces	19-11
Authenticating OSPF	19-12
Password Authentication	19-12
Cryptographic Authentication	19-12
Exchanging Information Between OSPF and RIP	19-13
Redistributing External Routes	19-14
Summarising Routes for Redistribution	19-15
Configuration Examples	19-16
Basic OSPF Network	19-16
OSPF Network with Virtual Links	19-18
Command Reference	19-21
add ospf area	19-21
add ospf host	19-23
add ospf interface	19-24
add ospf md5key	19-27
add ospf neighbour	19-28
add ospf range	19-29
add ospf redistribute	19-30
add ospf stub	19-31
add ospf summaryaddress	19-32
delete ospf area	19-33
delete ospf host	19-33
delete ospf interface	19-34
delete ospf md5key	19-35
delete ospf neighbour	19-36
delete ospf range	19-36
delete ospf redistribute	19-37
delete ospf stub	19-38
delete ospf summaryaddress	19-38
disable ospf	19-39
disable ospf debug	19-39
disable ospf interface	19-40
disable ospf log	19-40
enable ospf	19-41
enable ospf debug	19-42
enable ospf interface	19-44
enable ospf log	19-45
purge ospf	19-48
reset ospf	19-48
reset ospf counter	19-49
reset ospf interface	19-49

reset ospf spf	19-50
set ospf	19-51
set ospf area	19-54
set ospf host	19-56
set ospf interface	19-57
set ospf neighbour	19-61
set ospf range	19-62
set ospf redistribute	19-63
set ospf stub	19-64
set ospf summaryaddress	19-65
show ospf	19-66
show ospf area	19-68
show ospf debug	19-70
show ospf host	19-71
show ospf interface	19-73
show ospf lsa	19-77
show ospf md5key	19-82
show ospf neighbour	19-83
show ospf range	19-84
show ospf redistribute	19-86
show ospf route	19-87
show ospf stub	19-89
show ospf summaryaddress	19-90

CHAPTER 20 **Filtering IP Routes**

Introduction	20-2
Types of Filters	20-3
Prefix Lists	20-3
IP Route Filters	20-3
Creating Filters	20-4
Creating Prefix Lists	20-4
Creating IP Route Filters	20-4
Applying Filters	20-5
Applying Filters when Writing to the RIB	20-5
Applying Filters when Redistributing from the RIB	20-6
Applying Filters before Advertising Routes	20-7
Filters for Route Sources	20-8
Open Shortest Path First (OSPF)	20-8
Routing Information Protocol (RIP)	20-10
Interface Routes	20-11
Statically-Configured Routes	20-11
Command Reference	20-12
add ip prefixlist	20-12
add ip route filter	20-14
delete ip prefixlist	20-17
delete ip route filter	20-17
set ip prefixlist	20-18
set ip route filter	20-19
show ip prefixlist	20-21
show ip route filter	20-22

CHAPTER 21 **Generic Packet Classifier**

Introduction	21-2
Configuration of Classifiers	21-2
Command Reference	21-4
create classifier	21-4
destroy classifier	21-11
set classifier	21-12
show classifier	21-16

CHAPTER 22 **Quality of Service (QoS)**

Introduction	22-3
Quality of Service (QoS)	22-3
Configuring QoS	22-4
Alternative Methods of Configuring QoS Functionality	22-6
Classifiers	22-6
Flow Groups	22-7
Traffic Classes	22-7
Policies	22-8
QoS Policy Configuration Rules	22-8
Packet Processing	22-9
Bandwidth Allocation	22-9
Packet Prioritisation	22-10
Class of Service (CoS) Queue Scheduling	22-11
Replacing Priorities	22-12
DiffServ Domains	22-13
Examples of QoS Applications	22-15
Voice Applications	22-15
Video Applications	22-16
Critical Databases	22-16
Command Reference	22-18
add qos flowgroup	22-18
add qos policy	22-19
add qos trafficclass	22-20
create qos flowgroup	22-21
create qos policy	22-22
create qos trafficclass	22-23
delete qos flowgroup	22-25
delete qos policy	22-26
delete qos trafficclass	22-27
destroy qos flowgroup	22-28
destroy qos policy	22-28
destroy qos trafficclass	22-29
disable qos debug	22-29
enable qos debug	22-30
purge qos	22-30
set qos flowgroup	22-31
set qos hwpriority	22-32
set qos hwqueue	22-33
set qos policy	22-34
set qos port	22-35
set qos trafficclass	22-36
show qos flowgroup	22-38
show qos hwpriority	22-39
show qos hwqueue	22-40
show qos policy	22-41
show qos trafficclass	22-43

CHAPTER 23 User Authentication

Introduction	23-3
Privilege Levels	23-3
User Level	23-3
Manager Level	23-4
Security Officer Level	23-5
Remote Security Officer Level	23-6
Operating Modes	23-6
User Authentication Facility	23-7
User Authentication Database	23-9
Adding Entries to the User Authentication Database	23-10
Modifying Entries in the User Authentication Database	23-10
Passwords	23-11
Asynchronous Port Security	23-14
Telneting from the Switch	23-15
Counters	23-16
Semipermanent Manager Port	23-16
RADIUS	23-16
TACACS	23-19
TACACS+	23-20
Token Card Authentication	23-24
Token Card Authentication on the Switch	23-24
Using Token Card with TACACS+	23-25
Using Token Card with RADIUS or TACACS	23-26
Debug Support for RADIUS, TACACS and TACACS+	23-28
S/Key and OTP One-Time Password Systems	23-28
Initialising the S/Key or OTP System on the Authentication Server	23-29
Configuring S/Key and OTP on the Switch	23-30
Command Reference	23-32
add radius server	23-32
add tacacs server	23-33
add tacplus server	23-34
add user	23-35
add user rso	23-37
delete radius server	23-38
delete tacacs server	23-38
delete tacplus server	23-39
delete user	23-39
delete user rso	23-40
disable radius debug	23-40
disable system security_mode	23-41
disable tacacs debug	23-41
disable tacplus	23-41
disable tacplus debug	23-42
disable user	23-42
disable user rso	23-43
enable	23-43
enable radius debug	23-44
enable system security_mode	23-45
enable tacacs debug	23-46
enable tacplus	23-46
enable tacplus debug	23-47
enable user	23-47
enable user rso	23-48
login	23-49
logoff	23-50
purge user	23-50
reset user	23-51
set manager asyn	23-52

set password	23-53
set radius	23-54
set skey	23-54
set tacplus key	23-55
set tacplus server	23-56
set tacplus telnet	23-57
set user	23-58
show manager asyn	23-61
show radius	23-62
show radius debug	23-64
show skey	23-65
show tacacs debug	23-67
show tacacs server	23-68
show tacplus	23-69
show tacplus key	23-69
show tacplus server	23-70
show tacplus telnet	23-71
show tacplus user	23-72
show user	23-73
show user configuration	23-76
show user rso	23-79

CHAPTER 24 Encryption Services

Introduction	24-2
Data Encryption	24-2
Symmetrical Encryption	24-2
Asymmetrical (Public Key) Encryption	24-3
ENCO Services	24-4
Encryption	24-4
Key Creation and Storage	24-4
Access Control	24-6
Command Reference	24-7
create enco key	24-7
destroy enco key	24-9
disable enco debugging	24-10
enable enco debugging	24-10
reset enco counter	24-11
set enco key	24-12
show enco	24-13
show enco channel	24-14
show enco counters	24-18
show enco debug	24-28
show enco key	24-29

CHAPTER 25 Port Authentication

Introduction	25-2
802.1x Port Based Network Access Control	25-2
The 802.1x Implementation	25-2
Port Authentication Control	25-5
The Authentication Server	25-7
The Authentication Process	25-8
802.1x Guest VLAN	25-9
MAC-Based Authentication	25-10
The MAC-Based Authentication Implementation	25-10
The MAC-Based Authentication Process	25-11
Dynamic VLAN Assignment	25-12
RADIUS Accounting	25-13

Port Authentication on the Switch	25-14
Enable Port Authentication on the Switch	25-14
Enable Port Authentication on a Port	25-14
Reauthenticating Supplicants	25-16
Setting Global 802.1x Username and Password	25-17
Debug Port Authentication	25-17
Multi-Supplicant Configuration	25-17
Configuration Examples	25-19
Port as Authenticator	25-19
Port as Supplicant	25-20
Command Reference	25-22
activate portauth port reauthenticate	25-22
disable portauth	25-23
disable portauth debug	25-24
disable portauth port	25-25
enable portauth	25-26
enable portauth debug	25-27
enable portauth port	25-28
purge portauth port	25-34
reset portauth port	25-35
reset portauth port multimib	25-36
set portauth port	25-37
set portauth port supplicantmac	25-43
set portauth username	25-46
show portauth	25-48
show portauth counter	25-50
show portauth port	25-53
show portauth port multisupplicant	25-60
show portauth timer	25-65

CHAPTER 26 Secure Shell

Introduction	26-2
Secure Shell on the Switch	26-3
Configuring Secure Shell	26-4
Configuration Example	26-7
Command Reference	26-11
add ssh user	26-11
delete ssh session	26-13
delete ssh user	26-13
disable ssh debug	26-14
disable ssh server	26-14
disable ssh user	26-15
enable ssh debug	26-15
enable ssh server	26-16
enable ssh user	26-17
set ssh client	26-18
set ssh server	26-19
set ssh user	26-21
show ssh	26-23
show ssh counter	26-25
show ssh session	26-32
show ssh user	26-35
ssh	26-37

CHAPTER 27 Secure Sockets Layer (SSL)

Introduction	27-2
SSL Operations	27-2
Phases	27-3
SSL on the Switch	27-5
SSL and the Graphical User Interface	27-5
Configuration Example	27-6
Command Reference	27-8
disable ssl debug	27-8
enable ssl debug	27-8
set ssl	27-9
show ssl	27-10
show ssl counters	27-12
show ssl sessions	27-20

CHAPTER 28 Denial of Service (DoS) Attack Prevention

Introduction	28-2
Overview of Denial of Service Attacks	28-2
IP Options	28-2
LAND Attack	28-3
Ping of Death Attack	28-4
Smurf Attack	28-5
SYN Flood Attack	28-6
Teardrop Attack	28-8
Configuring DoS	28-9
Monitoring and Troubleshooting	28-10
DoS Triggers	28-12
Configuration Example	28-13
Command Reference	28-16
delete dosdefense port	28-16
disable dosdefense	28-17
disable dosdefense debug	28-18
disable dosdefense port	28-19
enable dosdefense	28-20
enable dosdefense debug	28-21
enable dosdefense port	28-22
purge dosdefense	28-24
reset dosdefense counters	28-24
set dosdefense gateway	28-25
set dosdefense port	28-26
show dosdefense	28-28
show dosdefense counters	28-30
show dosdefense defense	28-31
show dosdefense port	28-33

CHAPTER 29 Public Key Infrastructure (PKI)

Introduction	29-2
Overview	29-2
Public Keys	29-2
Certificates	29-3
Elements of a Public Key Infrastructure	29-5
Certificate Validation	29-6
Certificate Revocation Lists (CRLs)	29-6
PKI on the Switch	29-7
Certificate Retrieval and Storage	29-7
Certificate Validation	29-8
Certificate Revocation Lists	29-9
Requesting a Certificate	29-9
Global PKI Parameters	29-10

Configuration Examples	29-11
Manual Enrollment	29-11
Automatic Enrollment with CMP	29-13
Command Reference	29-15
add pki certificate	29-15
add pki crl	29-17
add pki ldaprepository	29-18
create pki certificate	29-19
create pki enrollmentrequest	29-20
create pki keyupdaterequest	29-21
delete pki certificate	29-22
delete pki crl	29-22
delete pki ldaprepository	29-23
destroy pki enrollmentrequest	29-23
destroy pki keyupdaterequest	29-24
disable pki debug	29-24
enable pki debug	29-25
purge pki	29-26
set pki	29-27
set pki certificate	29-28
set pki crl	29-29
set pki ldaprepository	29-30
set system distinguishedname	29-31
show pki	29-32
show pki certificate	29-39
show pki crl	29-42
show pki enrollmentrequest	29-45
show pki keyupdaterequest	29-47
show pki ldaprepository	29-49

CHAPTER 30 **Virtual Router Redundancy Protocol (VRRP)**

Introduction	30-2
Overview	30-2
Interface Monitoring	30-3
Port Monitoring	30-4
VRRP on the Switch	30-4
Adopting the VRRP IP Address	30-6
Triggers	30-8
Configuration Example	30-9
Master with Backup Switch	30-9
Authenticated Virtual Router with No Preferred Master	30-9
Command Reference	30-11
add vrrp	30-11
add vrrp monitoredinterface	30-12
create vrrp	30-13
delete vrrp	30-16
delete vrrp monitoredinterface	30-17
destroy vrrp	30-17
disable vrrp	30-18
disable vrrp debug	30-18
enable vrrp	30-19
enable vrrp debug	30-19
set vrrp	30-20
show vrrp	30-23

CHAPTER 31 Ping Polling of Device Reachability

Introduction	31-2
Configuring Ping Polling	31-2
Triggers	31-4
Logging	31-6
Interaction with Other Protocols	31-6
Command Reference	31-7
add ping poll	31-7
delete ping poll	31-10
disable ping poll	31-10
disable ping poll debug	31-11
enable ping poll	31-11
enable ping poll debug	31-12
reset ping poll	31-12
set ping poll	31-13
show ping poll	31-15

CHAPTER 32 Simple Network Management Protocol (SNMP)

Introduction	32-3
Network Management Framework	32-3
Structure of Management Information	32-5
Names	32-6
Instances	32-6
Syntax	32-7
Access	32-7
Status	32-8
Description	32-8
The SNMP Protocol	32-8
SNMP Versions	32-9
SNMP Messages	32-9
Polling versus Event Notification	32-9
Message Format for SNMPv1 and SNMPv2c	32-10
SNMP Communities (Version v1 and v2c)	32-11
SNMPv3 Entities	32-12
SNMPv3 Message Protocol Format	32-13
SNMPv1 and SNMPv2c on the Switch	32-15
SNMP MIB Views for SNMPv1 and SNMPv2c	32-15
SNMP Communities	32-16
Configuration Example (SNMPv1 and v2)	32-19
SNMPv3 on the Switch	32-20
SNMP MIB Views for SNMPv3	32-21
SNMP Defined MIB Names	32-21
SNMP Groups	32-22
SNMP Users	32-22
SNMP Target Addresses	32-22
SNMP Target Params	32-22
Configuration Example (SNMPv3)	32-23
Command Reference	32-24
add snmp community	32-24
add snmp group	32-26
add snmp targetaddr	32-27
add snmp targetparams	32-28
add snmp user	32-29
add snmp view	32-31
create snmp community	32-32
delete snmp community	32-34
delete snmp group	32-35
delete snmp targetaddr	32-35
delete snmp targetparams	32-36
delete snmp user	32-36

delete snmp view	32-37
destroy snmp community	32-38
disable snmp	32-38
disable snmp authenticate_trap	32-39
disable snmp community	32-39
disable snmp community trap	32-40
enable snmp	32-40
enable snmp authenticate_trap	32-41
enable snmp community	32-41
enable snmp community trap	32-42
purge snmp	32-42
set snmp asnbrpadding	32-43
set snmp community	32-44
set snmp engineid	32-45
set snmp group	32-46
set snmp local	32-47
set snmp targetaddr	32-48
set snmp targetparams	32-49
set snmp trapdelay	32-50
set snmp user	32-51
show snmp	32-52
show snmp community	32-56
show snmp group	32-58
show snmp targetaddr	32-59
show snmp targetparams	32-60
show snmp user	32-61
show snmp view	32-62

CHAPTER 33 **Link Layer Discovery Protocol (LLDP)**

Introduction	33-3
LLDP Overview	33-3
Type Length Values	33-4
Transmission and Reception	33-5
Storing LLDP Information	33-6
Configuring LLDP	33-8
LLDP Triggers	33-9
CDP Overview	33-10
CDP Advertisements	33-10
CDP Neighbours	33-11
Receiving and Checking Advertisements	33-11
Storing CDP Data	33-11
Configuring CDP	33-12
CDP Triggers	33-12
Command Reference	33-14
disable lldp cdp	33-14
disable lldp cdp debug	33-15
disable lldp cdp interface	33-16
disable lldp cdp ppptemplate	33-16
disable lldp managementaddress	33-17
disable lldp notifications	33-18
disable lldp port	33-19
disable lldp portdescription	33-20
disable lldp systemcapabilities	33-21
disable lldp systemdescription	33-22
disable lldp systemname	33-23
enable lldp cdp	33-24
enable lldp cdp debug	33-25
enable lldp cdp interface	33-26
enable lldp cdp ppptemplate	33-26
enable lldp managementaddress	33-27

enable lldp notifications	33-28
enable lldp port	33-29
enable lldp portdescription	33-30
enable lldp systemcapabilities	33-31
enable lldp systemdescription	33-32
enable lldp systemname	33-33
purge lldp	33-34
reset lldp	33-34
reset lldp cdp counters	33-34
reset lldp cdp table	33-35
set lldp managementaddress	33-35
set lldp notification interval	33-36
set lldp reinitdelay	33-36
set lldp txdelay	33-37
set lldp txhold	33-38
set lldp txinterval	33-38
show lldp	33-39
show lldp cdp	33-45
show lldp cdp counters	33-46
show lldp cdp entry	33-47
show lldp cdp interface	33-49
show lldp cdp neighbour	33-50
show lldp counters	33-53
show lldp memory	33-56
show lldp neighbour	33-57

CHAPTER 34 **Network Time Protocol (NTP)**

Introduction	34-2
Overview	34-2
NTP on the Switch	34-4
Configuration Example	34-4
Troubleshooting	34-7
Command Reference	34-8
add ntp peer	34-8
delete ntp peer	34-8
disable ntp	34-9
enable ntp	34-9
purge ntp	34-9
reset ntp	34-10
set ntp utcoffset	34-10
show ntp	34-11

CHAPTER 35 **Management Stacking**

Introduction	35-2
What is Stacking?	35-2
How Stacking Works	35-4
Configuring a Stack	35-6
Configuration Example	35-14
Command Reference	35-16
Host-Directed Commands (HDC)	35-16
add stack interface	35-17
delete stack interface	35-17
disable stack	35-18
disable stack debug	35-19
enable stack	35-19
enable stack debug	35-20
set stack authentication	35-21
set stack stackid	35-22
set system hostid	35-23
show stack	35-24

CHAPTER 36 Scripting

Introduction	36-2
Activating a Script at Login	36-2
Creating Scripts	36-2
Using Script Commands	36-3
Using the Built-In Text Editor	36-3
Loading from a TFTP Server	36-3
Loading from an Asynchronous Port	36-4
Using Scripts	36-4
Script Parameters	36-4
Script Control Structures	36-5
Command Reference	36-6
activate script	36-6
add script	36-7
deactivate script	36-8
delete script	36-9
if..then..else..endif	36-10
set script	36-11
show script	36-13
wait	36-14

CHAPTER 37 Trigger Facility

Introduction	37-2
Defining Triggers	37-3
Command Reference	37-4
activate trigger	37-4
add trigger	37-5
create trigger	37-6
delete trigger	37-12
destroy trigger	37-12
disable trigger	37-13
enable trigger	37-14
purge trigger	37-14
set trigger	37-15
show trigger	37-19

CHAPTER 38 Logging Facility

Introduction	38-2
Format of Log Messages	38-3
Secure Router Log Protocol (SRLP)	38-4
Net Manage Message Protocol	38-4
Processing Log Messages	38-4
Output Definitions and Message Filters	38-4
Destinations	38-6
Configuring Output Definitions	38-8
Configuring Message Filters	38-8
Command Reference	38-10
add log output	38-10
add log receive	38-14
create log output	38-16
delete log output	38-20
delete log receive	38-20
destroy log output	38-21
disable log	38-21
disable log generation	38-21
disable log output	38-22
disable log reception	38-22
enable log	38-23

enable log generation	38-23
enable log output	38-24
enable log reception	38-24
flush log output	38-25
purge log	38-25
set log output	38-26
set log receive	38-32
set log utcoffset	38-33
show log	38-34
show log counter	38-40
show log output	38-42
show log queue	38-46
show log receive	38-47
show log status	38-49

CHAPTER 39 **Terminal Server**

Introduction	39-2
TTY Devices	39-2
Multiple Sessions	39-5
Accessing Telnet Hosts and Other Services	39-6
Telnet	39-6
Remote Management	39-7
Services	39-7
Client Command Limitations	39-8
Configuration Examples	39-8
Telnet Service	39-8
Locally Defined Service	39-9
Remote Use of Asynchronous Services	39-10
Troubleshooting	39-11
Command Reference	39-12
connect	39-12
create service	39-14
destroy service	39-15
disable telnet server	39-15
disconnect	39-16
enable telnet server	39-16
reconnect	39-17
set service	39-18
set telnet	39-19
set tty	39-21
show service	39-23
show sessions	39-24
show telnet	39-25
show tty	39-26
telnet	39-30

CHAPTER 40 **Test Facility**

Introduction	40-2
Ethernet Port Tests	40-3
Asynchronous Port Tests	40-5
Command Reference	40-6
disable test interface	40-6
enable test interface	40-7
reset test interface	40-8
show test	40-9

APPENDIX A **Messages**

Introduction	A-3
Message Descriptions	A-4
smmm001–smmm255: Global Messages	A-4
s005256–s005999: Internet Protocol (IP)	A-14
s018256–s018999: TEST Module	A-27
s022256–s022999: TCP	A-30
s023256–s023999: Ethernet Driver	A-30
s031256–s031999: FLASH Driver	A-31
s033256–s033999: TELNET	A-32
s034256–s034999: System	A-32
s035256–s035999: Command Processor	A-36
s036256–s036999: TTY	A-36
s039256–s039999: BOOTP	A-39
s040256–s040999: Network Time Protocol (NTP)	A-40
s043256–s043999: PORT Driver	A-41
s045256–s045999: User Authentication Facility	A-44
s048256–s048999: LOADER	A-48
s049256–s049999: INSTALL	A-52
s050256–s050999: Open Shortest Path First (OSPF)	A-55
s051256–s051999: RADIUS	A-59
s053256–s053999: Trigger Facility	A-60
s054256–s054999: Scripting	A-62
s056256–s056999: File Subsystem	A-63
s057256–s057999: Logging Facility	A-66
s058256–s058999: PING	A-69
s059256–s059999: Simple Network Management Protocol (SNMP)	A-71
s062256–s062999: Security Associations	A-74
s070256–s070999: Dynamic Host Configuration Protocol (DHCP)	A-75
s073256–s073999: Encryption	A-78
s074256–s074999: Star Key Management	A-80
s075256–s075999: Secure Shell	A-81
s083256–s083999: Finger	A-82
s084256–s084999: HTTP	A-83
s087256–s087999: Layer 3 Switching	A-83
s088256–s088999: Virtual Router Redundancy Protocol (VRRP)	A-98
s089256–s089999: VLANs	A-100
s091256–s091999: GARP	A-112
s092256–s092999: Spanning Tree Protocol (STP)	A-114
s093256–s093999: GUI	A-117
s095256–s095999: Public Key Infrastructure (PKI)	A-119
s096256–s096999: Lightweight Directory Access Protocol (LDAP)	A-120
s097256–s097999: Protocol Independent Multicast (PIM)	A-124
s099256–s099999: Quality of Service (QoS)	A-127
s100256–s100999: Generic Classifier	A-131
s112256–s112999: S/Key	A-132
s118256–s118999: Port Authentication	A-133
s120256–s120999: Management Stacking	A-135
s124256–s124999: Multiple Spanning Tree Protocol (MSTP)	A-136
s129256–s129999: Power over Ethernet	A-138
s132256–s132999: Link Layer Discovery Protocol	A-139
s137256–s137999: DHCP Snooping	A-140
s141256–s141999: MAC-Forced Forwarding (MACFF)	A-141
s143256–s143999: Denial of Service (DoS) Attack Prevention	A-143

APPENDIX B **Reference Tables**

Module Identifiers and Names	B-2
Flash File System Message Codes	B-7
Log Message Types and Subtypes	B-9

APPENDIX C **SNMP MIBs**

Introduction	C-3
Allied Telesis Enterprise MIB	C-4
Products Subtree	C-5
AT Router Subtree	C-9
Objects Group	C-9
traps Group	C-16
sysinfo Group	C-17
arInterfaces Group	C-17
Modules Group	C-18
MIB-II MIB	C-28
Implementation	C-29
Interfaces Group MIB	C-30
Implementation	C-31
IP Forwarding Table MIB	C-32
Implementation	C-32
Ethernet-like Interface Types MIB	C-33
Implementation	C-33
Medium Attachment Unit (MAU) MIB	C-34
Implementation	C-35
Bridge MIB	C-36
Implementation	C-37
Virtual Bridge (VLAN) MIB	C-38
Implementation	C-38
Link Aggregation MIB	C-40
Implementation	C-41
Port Access Control MIB	C-42
Implementation	C-43
RMON MIB	C-44
Implementation	C-45
Host Resources MIB	C-46
Implementation	C-47
SNMP v3 MIBs	C-49
Implementation	C-49
Link Layer Discovery Protocol (LLDP) MIB	C-50
Implementation	C-50
State and Topology Change Traps	C-51

Glossary**Index**

