

Chapter 39

Terminal Server

Introduction	39-2
TTY Devices	39-2
Multiple Sessions	39-5
Accessing Telnet Hosts and Other Services	39-6
Telnet	39-6
Remote Management	39-7
Services	39-7
Client Command Limitations	39-8
Configuration Examples	39-8
Telnet Service	39-8
Locally Defined Service	39-9
Remote Use of Asynchronous Services	39-10
Troubleshooting	39-11
Command Reference	39-12
connect	39-12
create service	39-14
destroy service	39-15
disable telnet server	39-15
disconnect	39-16
enable telnet server	39-16
reconnect	39-17
set service	39-18
set telnet	39-19
set tty	39-21
show service	39-23
show sessions	39-24
show telnet	39-25
show tty	39-26
telnet	39-30

Introduction

This chapter describes the terminal server facilities provided by the switch, how to configure virtual terminals, define services and create host nickname tables.

See [Chapter 12, Interfaces](#) for details of how to configure and manage the asynchronous ports on the switch.

Some of the commands described in this chapter are available as both Manager (or Security Officer) privilege level and User privilege level commands. Normally, commands that require only User privilege have a restricted syntax. For example, if the **set asyn** command is issued from a port with User privileges, it can only alter characteristics of the port from which the command was entered. Displays produced by some commands are different for different privilege levels. Differences are described in the individual command descriptions.

For information about entering, editing, and recalling commands within a Telnet session, see [Chapter 2, Using the Command Line Interface \(CLI\)](#).

TTY Devices

A *TTY device* is a software device that forms a link between a terminal device (a terminal connected to an asynchronous port or a Telnet connection), and the switch's command processor or the interactive and Telnet services provided by the switch. TTY devices support Telnet connections to the switch and multiple terminal sessions from a single asynchronous port or Telnet connection. The acronym TTY is derived from the UNIX operating system where TTY is an abbreviation for TeleTYpe, the terminal I/O handling software layer in UNIX. TTY devices are also called *virtual terminals*.

Asynchronous ports

Each asynchronous port has associated with it a dedicated TTY device that provides access to the switch's command prompt, and interactive and Telnet services ([Figure 39-1 on page 39-4](#)). When a terminal session is initiated from the port to an interactive service (using the [connect command on page 39-12](#)), a dynamic connection is established between the dedicated TTY for the port and the dedicated TTY for one of the asynchronous ports assigned to the service. When a terminal session is initiated to a Telnet service (using the [connect command on page 39-12](#) or the [telnet command on page 39-30](#)), a dynamic TTY device is created for the Telnet service and linked to the dedicated TTY device.

Some configuration parameters of a terminal connection to an asynchronous port such as the baud rate apply only to the physical port; whereas other parameters such as the prompt apply to the dedicated TTY device. Parameters in the [set asyn command on page 12-22 of Chapter 12, Interfaces](#) can be used to set the configuration of both the physical port and the dedicated TTY device ([Table 39-1 on page 39-3](#)).

Table 39-1: Configuration parameters for TTY devices

Parameter	Meaning
history	Sets the number of commands saved for command line recall.
page	Sets the number of lines of output displayed on the terminal before the switch pauses and waits for the user to press a key to continue.
prompt	Sets the switch prompt to a string, the default prompt, or disables the prompt.
type	Sets the type of the terminal to VT100 or DUMB. Dumb terminals are used for printing or for terminals that do not support VT100 escape sequences.
idletimeout	Specifies a period of time, in seconds, for the TTY device's idle timer. If the specified time period lapses since the last time a TTY device received data from the remote client, the connection is terminated; this applies from the moment that the Telnet session becomes established.


The physical characteristics of the asynchronous port affect the operation of the port as a network interface, as well as a terminal port. However, characteristics of the dedicated TTY device affect only terminal connections and have no effect when the port is used as a network interface.

When the [set asyn command on page 12-22 of Chapter 12, Interfaces](#) is executed from a terminal attached to an asynchronous port, it displays the configuration of the asynchronous port, followed by the configuration of the dedicated TTY device. To view the configuration of a dedicated TTY device, use the [show tty command on page 39-26](#).

Telnet connections

A Telnet connection (created when a user Telnets to the switch) also has an associated dedicated TTY device ([Figure 39-1](#)). The TTY device is temporary, however, and exists while the Telnet connection is active. When a terminal session is initiated from the Telnet session to an interactive service (using the [connect command on page 39-12](#)), a dynamic connection is established between the dedicated TTY device for the Telnet connection and the dedicated TTY for one of the asynchronous ports assigned to the service.

Figure 39-1: TTY devices provide an interface between terminals and Telnet connections, the switch's command processor, and interactive and Telnet services provided by the switch

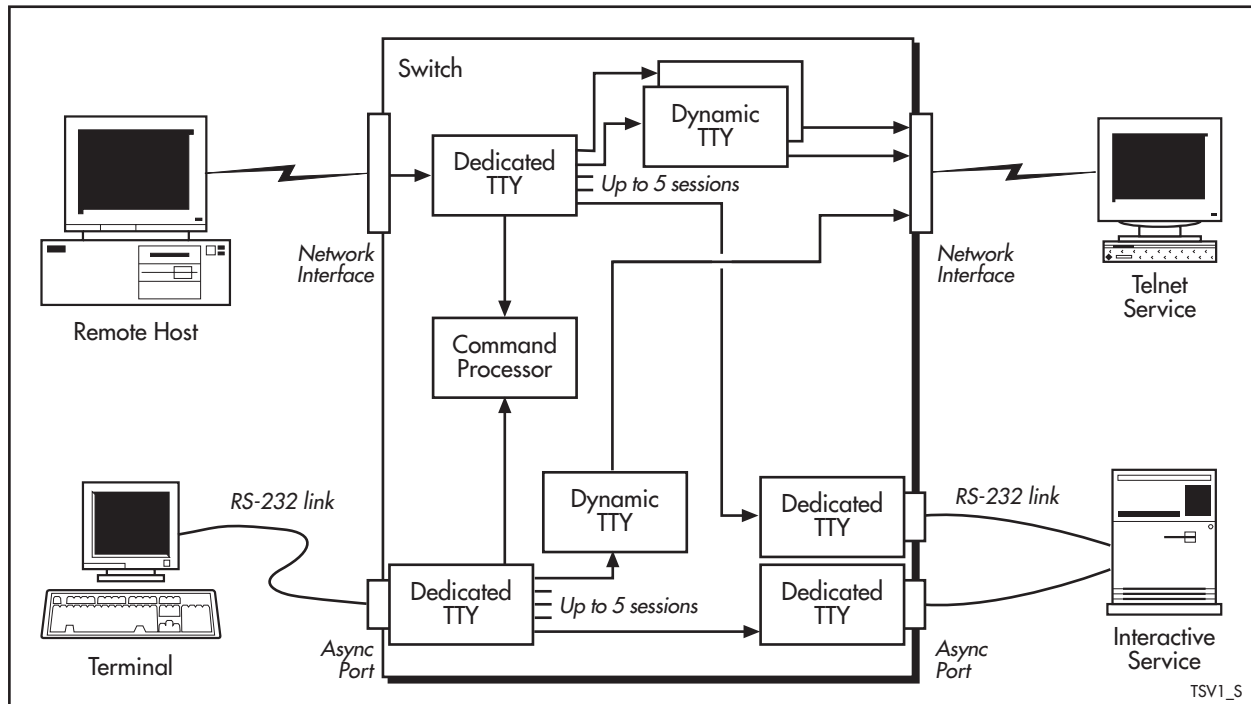

The **set asyn** command on page 12-22 of Chapter 12, *Interfaces* can be used to set the configuration of a dedicated TTY device (Table 39-1 on page 39-3). Physical port characteristics cannot be set because, by nature, a Telnet connection is not associated with an asynchronous port. When the **set asyn** command is executed from a Telnet connection, it displays the configuration of the dedicated TTY device, and is equivalent to the **show tty** command on page 39-26.

Displaying TTY configuration

From either a terminal attached to an asynchronous port or a Telnet connection, use the following command to display the configuration of any TTY device, including both dedicated and dynamically created TTY devices.

```
show tty[=tty-number]
```

To display a one-line summary for a specific TTY device, use the command:

```
show tty[=tty-number] summary
```

If **all** is specified as the TTY device, a list of all existing dedicated and dynamic TTY devices is displayed.

Setting TTY defaults

To set the default configuration for dynamically created TTY devices dedicated to Telnet connections, use the command:

```
set tty [history=0..99] [page=4..99] [prompt={prompt|default|
off}] [type={dumb|vt100}] [idletimeout={10..4294967294|
off|0}]
```

The default configuration for TTY devices dedicated to the asynchronous ports is set with the **set asyn** command on page 12-22 of Chapter 12, *Interfaces*. All defaults are retained through switch reboots.

Multiple Sessions

Once a terminal or Telnet connection has been made to the switch, it is possible to Telnet to another host or to connect to a service defined on the switch. The connection between the TTY device for the terminal port or Telnet connection and the TTY device for the service is called a *session*. It is possible to have up to five sessions open at one time, but only one session may be active at any one time. Input from the terminal or Telnet connection is sent to the active session and output from the active session is sent to the terminal or Telnet connection. Inactive sessions do not receive any input. Output from an inactive session is buffered until the session becomes the active session. To create a session, use the command:

```
connect service
telnet hostaddr
```

where *service* may be an interactive service on this switch or a Telnet service, and *hostaddr* may be a host name defined in host address table, the IP address of a host in dotted decimal notation or a domain name to be resolved by a *Domain Name Server* (DNS).

Once the session is created, input from the terminal is sent to the host or service and output from the host or service is sent to the terminal. To return to the switch prompt a special character must be typed; this character is known as the *attention character*. For an asynchronous port, this character is a [Break] by default, but may be changed to [Ctrl+P] by using the following command if the method of connection from the terminal to the port prevents the transmission of a [Break].

```
set asyn attention=^P
```

See the [set asyn command on page 12-22 of Chapter 12, Interfaces](#) for more information. For a Telnet connection the attention character is always [Ctrl+P]. The attention character for a Telnet session cannot be a [Break] because it is not possible to transmit such a character over the network, since [Break] is a line state rather than a true character.

When a session is active, pressing the attention character suspends the session and returns the user to the switch prompt. Another session can be created by entering another [connect](#) or [telnet](#) command. Up to five concurrent sessions may be established. While a session is suspended it remains connected until it is terminated by the user or the remote host (in the case of a Telnet session).

A number of switch commands are provided to manage sessions. To display the currently established sessions, use the command:

```
show session
```

To reconnect to a session, use the command:

```
reconnect session-number
```

To terminate a session, use the command:

```
disconnect session-number
```

An alternative method of reconnecting to a session is to press [Ctrl+X] to display the name of the first available session and a reconnect command for the session next to the prompt. To reconnect to this session press [Enter] or [Return]. Pressing [Ctrl+X] repeatedly displays each available session in turn. Press [Enter] or [Return] when the desired session is displayed.

Accessing Telnet Hosts and Other Services

Asynchronous ports on the switch are often used to access Telnet hosts or interactive services available on the network by using the [telnet command on page 39-30](#) and the [connect command on page 39-12](#).

Telnet

To access a Telnet host, use the command:

```
telnet ipadd
```

where *ipadd* is an IPv4 address in dotted decimal form, or a full domain name. For example, a host with the domain name `zaphod.beeblebrox.com` and IP address `172.16.1.5` can be accessed with either of the commands:

```
telnet zaphod.beeblebrox.com  
telnet 172.16.1.5
```

If a domain name is specified, the switch sends a request to a name server to translate the domain name to an IP address. If the translation is successful, the switch attempts to make a connection to the host specified by the IP address.

A name server must be defined with the [set ip nameserver command on page 13-118 of Chapter 13, Internet Protocol \(IP\)](#). The domain name lookup may take several seconds, during which time the normal switch prompt reappears. When the lookup is complete, a message is displayed indicating whether the lookup was successful.

To assign a short nickname to popular Telnet hosts, use the command:

```
set ip host=nickname ipaddress=ipadd
```

To see the current list of nicknames, use the command:

```
show ip host
```

The Telnet host can now be accessed with the command:

```
telnet nickname
```

For example, if the Telnet host `zaphod.beeblebrox.com` is assigned the nickname `zaphod`, then it can be accessed with the command:

```
telnet zaphod
```

Using nicknames solves two problems: it reduces the time delay associated with domain name lookups, and it saves users having to remember IP addresses or long domain names.

See the [set ip host command on page 13-111 of Chapter 13, Internet Protocol \(IP\)](#) and the [show ip host command on page 13-152 of Chapter 13, Internet Protocol \(IP\)](#) for more information about configuring host names.

Remote Management

Managing remote switches is as easy as managing the local switch to which the terminal is connected. From a terminal, or PC running terminal emulation software, connected to any port (with either User or Manager privilege), use the command:

```
telnet ipadd
```

to Telnet to the remote switch, specifying the remote switch's IP address. If the connection is successful a login prompt from the remote switch is displayed. Login using a login name that has been defined with Manager privilege (such as the default Manager login name), and enter the password.

To return to the local switch, terminate the connection by using the command:

```
logout
```

Services

An *interactive service* is a connection to another port on the switch. For instance, a service could be used to attach a dialup modem to a remote or local port, or to allow host port connections to hosts that do not support TCP/IP directly. In this case, the host asynchronous ports are directly attached (using a crossed cable normally) to the asynchronous ports on the switch.

A *Telnet service* is a service that is not associated with a particular port on the switch. It is provided so that users can access both local and remote hosts by using the [connect command on page 39-12](#).

To create and delete services, use the commands:

```
create service=service-name description="description"
    type={interactive|telbin|telnet} [ipaddress=ipadd]
    [visible={on|off}]

destroy service=service-name
```

To modify an existing service, use the command:

```
set service=service-name [description="description"]
    [ipaddress=ipadd] [visible={on|off}]
```

To assign asynchronous ports to the service, use the command:

```
set asyn=asyn-number service=service-name
```

See the [set asyn command on page 12-22 of Chapter 12, Interfaces](#) for more information.

To connect to a service, use the command:

```
connect service-name
```

To display a list of the currently available services, use the command:

```
show service[=service-name] [type={telnet|interactive|
    telbin}]
```

On a port with User privileges, the display lists the service names, descriptions and whether the service is a Telnet service or an interactive service. On a port with Manager privileges, the display includes additional information such as the type of service (e.g. Telnet), the IP address of the service (for Telnet services) and whether the service is visible to users.

Client Command Limitations

A client connected to a switch with reverse Telnet can send it commands. These commands are executed from the client machine (typically a PC), and are **not** executed at the CLI of the Allied Telesis device. The following client commands deviate from RFC 2217, *Special Com Port Control Commands*. See the RFC for details about client commands.

Supported options for the *set control* client command are:

- request flow control
- set flow control
- set break
- set DTR state
- set RTS state
- request inbound flow control

The *set linestate mask* and *set modemstate mask* client commands are accepted and processed, but notifications of com port and modem line change are not implemented.

The *purge data* client command is accepted but not actioned.

Configuration Examples

This section describes how to configure the following asynchronous services on the switch:

- [Telnet Service](#)
- [Locally Defined Service](#)
- [Remote Use of Asynchronous Services](#)

Telnet Service

To set up a Telnet service, the switch must be running TCP/IP. It is not necessary for the switch to be acting as a router; it could be configured as a server. For this reason, there is no assumption about a remote router.

1. Configure the IP routing module.

To configure the IP routing module from scratch, first purge the module to remove any old configuration information. Enable the IP routing module and configure the default interface for IP:

```
purge ip
enable ip
add ip interface=vlan1 ip=172.16.8.33 mask=255.255.255.0
```

2. Define the Telnet service.

Define an asynchronous service called "test" of type *telnet* and specify the IP address of the service (the host to which Telnet sessions should connect):

```
create service=test type=telnet ipaddress=172.16.8.2
description="Telnet test"
```


A user connected to the switch with either a terminal or using reverse Telnet could access the host with IP address 172.16.8.2 by simply typing:

```
c test
```

The [connect command on page 39-12](#) has been abbreviated to 'c'. This command, like all others, is not case sensitive. Neither is the service name 'test'. Manager level access is required to define the service but not to use it.

Locally Defined Service

A locally defined service could be used to gain access to devices like dialup modems or hosts that have only asynchronous ports. In either case, the process consists of connecting a port on the switch to the device in question and then gaining a connection to that port based on a text string entered at the terminal. The process is made more powerful by the fact that a bank of ports can be accessed with a single name. As users connect to these ports, the next free port is selected.

As with the previous example of a Telnet service, locally defined services do not need to have any switch modules defined. This example uses ports 2, 3 and 4 to access a host called NCR2, and port 5 to access a modem called *modem*.

1. Define the services.

Create two services, one to access the NCR2 host and one to access the dialup modem:

```
create service=ncr2 type=inter desc="ncr mainframe host"
create service=modem type=inter desc="Dial out modem"
```

2. Configure the asynchronous port.

Configure the asynchronous ports that is connected to the host and modem. For the ports connecting to the host, set up the port characteristics to match the host. Assume that the modem is configured for 2400 bps, 7 data bits and no parity.

```
set asyn=1 speed=2400 data=7
```

3. Assign the ports to each service.

Two ports are connected to the host service, so that up to two users can access the host via the service at any one time. Only one port is connected to the modem.

```
set asyn=2 service=ncr2
set asyn=3 service=ncr2
set asyn=1 service=modem
```

The services can be tested by attempting to connect to each service:

```
connect ncr2
connect modem
```

Remote Use of Asynchronous Services

The switch's asynchronous ports may be accessed remotely by modem for a variety of purposes. See [Chapter 12, Interfaces](#) for a detailed description of the configuration of the asynchronous ports. Where asynchronous ports are accessible by modem, security is paramount. See ["User Authentication Facility" on page 23-7 of Chapter 23, User Authentication](#) for a description of the security features available on the switch to support remote access via the asynchronous ports.

This example describes how to connect a modem to an asynchronous port and configure the switch for dial-in access to asynchronous services. It is assumed that the IP module has been set up correctly as this is required when Telnet services or TACACS authentication are to be used. It is also assumed that, when necessary, interactive and/or Telnet services have been set up on the switch. See the previous examples for details.

1. Attach a modem to an asynchronous port.

Port 1 is to be used for dial-up access. Connect the modem to port 1 on the switch. See the Hardware Reference for a description of the cables and connectors required to connect a modem to an asynchronous port.

Refer to the documentation for the modem and configure the modem for the correct baud rate. Configure the port to have the desired baud rate for the modem, connect the modem to the port and then connect to the port using the [connect command on page 39-12](#). You can then issue commands to the modem via this connection. The modem should also be configured to automatically answer calls and to disconnect a call when the Data Terminal Ready (DTR) modem control signal is negated.

2. Configure the asynchronous port.

Reset the port to its factory default settings:

```
purge asyn=1
```

Configure the port for dial-in access, setting hardware flow control, baud rate and the **cdcontrol** option:

```
set asyn=1 flow=hardware speed=speed cdcontrol=connect
```

3. Configure user authentication.

Switch users may be authenticated by reference to the switch's User Authentication Database or to an independent TACACS authentication server.

To configure the User Authentication Database, add the login names for the users to the User Authentication Database. For example:

```
add user=bill password=initial description="Bill's Modem"
```

This command defines a login name of "bill" with an initial password of "initial". Once this login name has been defined the user (Bill) should log in and change the password to something that only the user knows. The login name may be a maximum of 64 characters long, may contain letters and numbers, and is not case sensitive. The password may be a maximum of 32 characters, may contain any printing character, and is case sensitive. The description may be up to 23 characters long and must be in quotes if it contains embedded spaces. By default, passwords must be at least 6 characters long but this limit may be altered. Enter the command:

```
show user configuration
```

to see the parameters that may be changed and their current settings.

Alternatively, users may be authenticated by sending the login name and password to a TACACS server. The server returns a response indicating whether to accept or reject the login. A TACACS server is defined using the command:

```
add tacacs server=202.34.35.24
```

specifying the IP address of the TACACS server. If a login name entered by a user is not found in the User Authentication Database a query is automatically sent to the TACACS server (if one is defined). Multiple TACACS servers may be defined to provide backup if one server is not operational.

4. Configure a default service.

The **defaultservice** parameter configures a port to automatically connect to a service when a call is received.

Define Telnet or interactive service as required. If the desired service is an interactive service then the service must be assigned to one or more switch ports with the command:

```
set asyn=2 service=ncr2
```

See *Locally Defined Service* above for more information on defining services. Do not specify the **defaultservice** with this command.

Specify the default service for the dial-in port(s) with the command:

```
set asyn=1 service=ncr2 defaultservice=yes
```

The **defaultservice** parameter changes the effect of assigning a service to a port. If the **defaultservice** parameter is omitted or set to “no” then the port is assigned to the service for use in connections *from* the switch. The service must be an interactive service. If the **defaultservice** parameter is set to “yes” then an automatic connection is made to that service when a call comes into the switch. For a port that is directly connected to a terminal or PC, rather than to a modem, the automatic connection is made as soon as any character is typed at the port.

Troubleshooting

No response after connection to service

1. Check that the service port is correctly cabled. See the Hardware Reference.
2. Check that the service port is correctly configured. Type

```
show asyn=5
```

to check the setting on the MODEM service port.
3. Contact your authorised distributor or reseller for assistance.

Connection attempt fails

If the connection attempt fails with the message:

```
No free host ports
```

1. Check that ports have been assigned to the service.
2. Check that all assigned ports are already in use.
3. Contact your authorised distributor or reseller for assistance.

Command Reference

This section describes the commands available on the switch to configure and use the terminal server functions on the switch.

When a user executes the [connect command on page 39-12](#) or the [telnet command on page 39-30](#) to access a service on the network, the port where the user's terminal is connected is said to be *assigned*. Most of the commands for configuring an asynchronous terminal port described in this section do not work when the port is assigned. An error message to that affect is displayed if an attempt is made to change the characteristics of a port that is currently assigned.

The shortest valid command is denoted by capital letters in the Syntax section. See ["Conventions" on page xxxviii of About this Software Reference](#) in the front of this manual for details of the conventions used to describe command syntax. See [Appendix A, Messages](#) for a complete list of messages and their meanings.

connect

Syntax Connect *service-name*

Connect ASYn=0

where:

- *service-name* is the name of a service 1 to 15 characters long, with no embedded spaces. The first character must be alphabetic (A–Z). The name is not case sensitive.

Description This command connects the terminal to a named Telnet or interactive host service, or to an asynchronous port on the switch.

A user who has logged in to a port is permitted to connect to a Telnet service. If the user has not logged in (i.e. the port is not in SECURE mode) then the user is not permitted to connect to a Telnet service. If the user has connected to the switch using Telnet and has logged in, then the user can connect to a Telnet service if the TELNET attribute is set to **yes** in the user's entry in the User Authentication Database. See ["User Authentication Facility" on page 23-7 of Chapter 23, User Authentication](#) for more information on these security features.

If the command is successful, then a different sequence of messages is displayed depending on whether the service is a Telnet service ([Figure 39-2](#)) or a host port ([Figure 39-3](#)). The messages is followed by the host login prompt. When the user logs off from the host session, the assignment automatically breaks and the switch prompt reappears.

Figure 39-2: Example output from the **connect** command for a successful connection to a Telnet service

```
CMD> c sun
```

```
Info (105320): Attempting Telnet connection to SUN, Please wait ...
```

Figure 39-3: Example output from the **connect** command for a successful connection to a host port service

```
CMD> c tst
Info (136266): Local port ( Telnet 1 ) assigned to service ( tst ).
```

Example To connect to the service ACCOUNTS on the local switch, use the command:

```
c accounts
```

To connect to the switch's asynchronous port 0, use the command:

```
c asy=0
```

Related Commands

- [create service](#)
- [disconnect](#)
- [reconnect](#)
- [show service](#)
- [show sessions](#)
- [telnet](#)

create service

Syntax `CREate SERVICE=service-name DEScription="description"
Type={Interactive|TELBin|Telnet} [IPaddress=ipadd]
[VISible={ON|OFF}]`

where:

- *service-name* is the name of a service 1 to 15 characters long, with no embedded spaces. The first character must be alphabetic (A–Z). The string is not case sensitive.
- *description* is a short description of the service from 1 to 39 characters long and in double quotes. It may include embedded spaces.
- *ipadd* is an IPv4 address in dotted decimal notation, or a valid IPv6 address.

Description This command creates a new service. The **service** parameter specifies the name of the service. This name specifies the service in the [connect command on page 39-12](#).

The **description** parameter specifies a user-defined description for the service.

The **type** parameter specifies the type of service. If **type** is set to **interactive** the service is available to users for logging on to a host computer that does not support TCP/IP, or other devices with asynchronous ports such as dialup modems and data loggers. If **type** is set to **telbin** the service is to be available to users for logging on to 8-bit binary Telnet services such as UUCP. If **type** is set to **telnet** the service is to be available to users for logging on to a Telnet host.

The **ipaddress** parameter specifies the IP address, in dotted decimal notation, of the Telnet host for a TELNET service.

The **visible** parameter specifies whether the service is visible to users. If **visible** is **on**, the service appears in the service list displayed when the [show service command on page 39-23](#) is issued at a port with User privileges, and users can connect to the service from a port with User privileges. If **visible** is **off**, the service is not listed in the service list displayed when the **show service** command is issued at a port with User privileges, and users cannot connect to the service from a port with User privileges. The default is **on**.

Examples To create a service for users to access a host computer, use the command:

```
cre ser=admin desc="Accounts and purchasing" ty=i vis=on
```

Related Commands [destroy service](#)
[set service](#)
[show service](#)

destroy service

Syntax DESTroy SERvice=*service-name*

where *service-name* is the name of a service 1 to 15 characters long with no embedded spaces. The first character must be alphabetic (A–Z). The string is not case sensitive.

Description This command deletes a service. The **service** parameter specifies the name of the service. The service must already exist.

Examples To destroy the service named, use the command:

```
dest ser=admin
```

Related Commands [create service](#)
[set service](#)
[show service](#)

disable telnet server

Syntax DISable TELnet SErver

Description This command blocks telnet access to the switch. Telnet access is enabled by default. For security reasons, it may be desirable to disable telnet access to the switch.

Example To disable telnet access to the switch, use the command:

```
dis tel se
```

Related Commands [enable telnet server](#)
[set telnet](#)
[show telnet](#)
[telnet](#)

disconnect

Syntax `Disconnect session-number`

where *session-number* is the number from 1 to 5 for a currently established terminal session

Description This command terminates the specified terminal session. If the session is a connection to a host port then the assignment is broken. If the session is a Telnet connection the connection is broken. The session number must be the number of a currently available terminal session.

This command should not normally be required. Users should execute the standard logoff procedure for the host service. Logging off from the host disconnects the session and returns the user to the switch prompt. The **disconnect** command should be used if logging off from the host fails to disconnect the session.

Examples To terminate session 2, use the command:

```
d 2
```

Related Commands [connect](#)
[reconnect](#)
[show service](#)
[show sessions](#)
[telnet](#)

enable telnet server

Syntax `ENAbLe TELnet SErver`

Description This command enables the Telnet server to be accessed remotely. The Telnet server is enabled by default.

Related Commands [disable telnet server](#)
[set telnet](#)
[show telnet](#)
[telnet](#)

reconnect

Syntax Reconnect *session-number*

where *session-number* is the number from 1 to 5 for a currently established terminal session

Description This command reconnects the user's terminal to the specified terminal session. All subsequent output from the terminal is sent to the specified session and all output from the session is sent to the terminal. The session number must be the number of a currently established terminal session.

Examples To reconnect to session 2, use the command:

```
r 2
```

Related Commands [connect](#)
[disconnect](#)
[show sessions](#)
[telnet](#)

set service

Syntax SET Service=*service-name* [DESCRiption="*description*"]
[IPaddress=*ipadd*] [VISible={ON|OFF}]

where:

- *service-name* is the name of a service 1 to 15 characters long with no embedded spaces. The first character must be alphabetic (A–Z). The string is not case sensitive.
- *description* is a short description of the service from 1 to 39 characters long and in double quotes. It may include embedded spaces.
- *ipadd* is an IPv4 address in dotted decimal form, or a valid IPv6 address.

Description This command modifies the characteristics of an existing service. The **service** parameter specifies the name of the service. The service must already exist.

The **description** parameter specifies a user-defined description for the service.

The **ipaddress** parameter specifies the IP address, in dotted decimal notation, of the Telnet host for a TELNET service.

The **visible** parameter specifies whether the service is visible to users. If **visible** is set to **on**, the service appears in the service list displayed when the [show service command on page 39-23](#) is issued at a port with User privileges, and users can connect to the service from a port with User privileges. If **visible** is set to **off**, the service is not listed in the service list displayed when the **show service** command is issued at a port with User privileges, and users cannot connect to the service from a port with User privileges. The default is **on**.

Examples To make the service named "DataLogger" invisible to users without Manager privileges, use the command:

```
set ser=DataLogger vis=off
```

Related Commands [create service](#)
[destroy service](#)
[show service](#)

set telnet

Syntax SET TELnet [TerMtype=*termstring*] [INsertnull={ON|OFF}]
[LISTenport=*port*] [IDLEtimeout=0..4294967295]
[MAXSessions=0..30] [LOGINSYSstemname={ON|OFF}]

where:

- *termstring* is a string 1 to 31 characters long. If the string contains spaces, it must be in double quotes.
- *port* is a number from 1 to 65535.

Description This command sets global parameters for Telnet sessions.

The **termtype** parameter specifies a terminal identification string that is passed to a remote Telnet server during connection. The terminal identification string is usually used by the remote Telnet server to set the terminal attributes for the Telnet session. The default is the string “unknown”.

The **insertnull** parameter specifies whether or not a NULL character is inserted after each CR sent to the remote host. Use **on** to insert NULL characters or **off** to omit NULL characters. The default is **off**.

The **listenport** parameter sets the TCP port which the Telnet server listens on for connections. The default is 23.

Important If the TCP listen port is changed from the default of 23, care must be taken to ensure that IP filtering configurations are matched accordingly.

The **idletimeout** parameter specifies the time period, in seconds, for the Telnet server’s idle timer. If a Telnet session does not receive data from the remote client in this time period, the Telnet server terminates the session. This applies from the moment the Telnet session is established, regardless of whether the user has logged in or not. If 0 is specified, the idle timer is disabled and sessions must be explicitly terminated. The default is 0.

If the Telnet server’s idle timer is modified while Telnet sessions are established, the idle timers for those sessions are restarted and use the new time period. Any idle time accumulated by those sessions prior to the **set telnet** command is lost.

The **maxsessions** parameter specifies the maximum number of concurrent Telnet sessions allowed. Once this limit is reached, subsequent session requests are rejected. The session limit cannot be set below the number of currently established Telnet sessions. The default is 30.

The **loginsystemname** parameter specifies whether or not the system name appears in the login prompt for Telnet client sessions. Use **on** to include the system name in the login prompt, or **off** to omit the system name from the login prompt. The default is **on**.

Important The login prompt (and system name) is displayed before a user logs in. This identifies the local system to the Telnet client. For enhanced security, we recommend setting **loginsystemname** to **off**.

Examples To set the terminal identification string to vt100, and omit the system name from the login prompt, use the command:

```
set tel te=vt100 loginsys=off
```

Related Commands [disable telnet server](#)
[enable telnet server](#)
[show telnet](#)
[telnet](#)

set tty

Syntax SET Tty [History=0..99] [PAGE=4..99] [PROMPT={*string-15*|DEFAULT|OFF}] [TYPE={Dumb|Vt100}] [IDLEtimeout={10..4294967294|OFF|0}]

where *string-15* is a string 1 to 15 characters long. If the string contains spaces, it must be in double quotes. The string is not case sensitive.

Description This command sets the default values for TTY devices created for Telnet connections. Multiple options may be specified in the same command.

To change the settings for a Telnet connection immediately, use the [set asyn command on page 12-22 of Chapter 12, Interfaces](#).

The **history** parameter sets the number of commands saved in the command history for future recall. The minimum number is 0 and the maximum is 99. Setting the history length to zero for a port does not clear all the commands from the history. The command history is cleared with the [reset asyn history command on page 12-21 of Chapter 12, Interfaces](#). The default history length for asynchronous ports and Telnet connections is 30.

The **page** parameter sets the number of lines of command output displayed on the terminal screen before the switch pauses and waits for the user to press a key to continue. This number may range from 4 to 99. The default is 22 for both asynchronous ports and Telnet connections. If **page** is set to **off**, paging is disabled.

The **prompt** parameter sets the prompt for the port to either the default string, such as:

```
CMD>
```

or a user-specified string, or disables the prompt. It is often convenient to disable the prompt if the port is being used as a manager port or for debugging network problems, as it reduces the clutter on the terminal screen. This option has effect when the port is not assigned. When the port is assigned, the host controls prompting.

The **type** parameter specifies the type of terminal attached to the port. If **type** is set to **vt100**, the switch expects the terminal to support standard VT100 escape sequences and uses them. If **type** is set to **dumb**, the switch does not use VT100 escape sequences. The **dumb** option is required for Telnet clients that do not support VT100 escape sequences. The default is **vt100** for both asynchronous ports and Telnet connections.

The **idletimeout** parameter specifies a period of time, in seconds, for the TTY device's idle timer. If the specified time period lapses since the last time a TTY device received data from the remote client, the connection is terminated; this applies from the moment that the Telnet session becomes established. If 0 or **off** is specified, the idle timer remains off, and the session must be explicitly terminated. The default is 0.

If the **idletimeout** period is modified when there are already established Telnet sessions, the idle timers for those sessions are reset so that they use the new timeout value. Any idle time accumulated by those sessions prior to the issuing of the set command is lost.

Examples To set PAGE mode off for all subsequent Telnet connections, use the command:

```
set tt pag=of
```

Related Commands [set asyn](#) in [Chapter 12, Interfaces](#)
[show tty](#)

show service

Syntax `SHoW SERvice[=service-name] [TYpe={Telnet|Interactive|TELBin}]`

where *service-name* is the name of a service 1 to 15 characters long with no embedded spaces. The first character must be alphabetic (A–Z). The string is not case sensitive.

Description This command displays a list of services defined on the switch (Figure 39-4, Figure 39-5, Table 39-2). If a service type is not specified all services are displayed. If a service name is specified, the specified service is displayed. If a service type (**telnet**, **interactive** or **telbin**) is specified, services for the specified type are displayed.

The display varies depending on whether the command is entered from a port with User or Manager privileges. Summary information is displayed on a port with User privileges.

Figure 39-4: Example output from the **show service** command for a port with Manager privileges

Service name	Type	Visible	IP address
SUN	Telnet	ON	192.168.35.17
Engineering			
ADMIN	Interactive	ON	-
Administration and Support Services			

Figure 39-5: Example output from the **show service** command for a port with User privileges

Service name	Type	Description
SUN	Telnet	Engineering
ADMIN	Interactive	Administration and Support Services

Table 39-2: Parameters in output of the **show service** command

Parameter	Meaning
Service name	Name of the service.
Type	Whether the service is Interactive, Telnet, or Telbin.
Visible	Whether the service is visible and available to a user with User privileges.
IP address	IP address for a Telnet service.
Description	Description of the service. For a Manager port, the description is on the line following the name of the service.

Examples To display all services, use the command:

```
sh ser
```

Related Commands [connect](#)
[create service](#)
[destroy service](#)
[disconnect](#)
[set asyn](#)
[set service](#)

show sessions

Syntax SHow SEssions

Description This command displays the status of the sessions available for a port or Telnet login ([Figure 39-6](#)). The status is one of the following:

- Name of an interactive service
- Name of a Telnet service
- IP address for Telnet connection
- Host name for Telnet connection
- Nickname for Telnet connection
- “not connected” if the session is not in use

Figure 39-6: Example output from the **show sessions** command

```
Session information for Telnet 1

session 1 connected to tst
session 2 connected to SUN
session 3 connected to 192.168.35.17
session 4 connected to host.company.com
session 5 not connected
```

Examples To display the status of the current terminal sessions, use the command:

```
sh ses
```

Related Commands [connect](#)
[disconnect](#)
[reconnect](#)

show telnet

Syntax SHow TELnet

Description This command displays information about the current Telnet settings (Figure 39-7, Table 39-3).

Figure 39-7: Example output from the **show telnet** command

```
TELNET Module Configuration
-----
Telnet Server ..... Enabled
Telnet Server Listen Port ..... 23
Telnet Terminal Type ..... UNKNOWN
Telnet Insert Nulls ..... Off
Telnet Com Port Control ..... Disabled
Telnet Current Sessions ..... 1
Telnet Session Limit ..... 12
Telnet Idle Timeout ..... 180
Telnet System Name at Login..... off
-----
```

Table 39-3: Parameters in output of the **show telnet** command

Parameter	Meaning
Telnet Server	Whether the Telnet server is enabled.
Telnet Server Listen Port	TCP port number that the Telnet server is listening on. Can be any number from 1 to 65535 that is not already in use.
Telnet Terminal Type	Terminal type identification string that is passed to a remote Telnet server upon connection. The default is UNKNOWN.
Telnet Insert Nulls	Whether a NULL character is inserted after each CR that is sent to remote hosts.
Telnet Com Port Control	Whether reverse Telnet is enabled. Reverse Telnet is only available when two or more asynchronous ports are installed on the switch.
Telnet Current Sessions	Number of Telnet sessions currently established.
Telnet Session Limit	Maximum number of concurrent Telnet sessions allowed.
Telnet Idle Timeout	Maximum period of time in seconds without data being received from a given remote Telnet client before the corresponding session is terminated.
Telnet System Name at Login	Whether the system name appears in the login prompt for Telnet client sessions.

Related Commands

- [disable telnet server](#)
- [enable telnet server](#)
- [set telnet](#)
- [telnet](#)

show tty

Syntax `SHoW TTY[=tty-number|All] [{Summary|Default}]`

where *tty-number* is the number of a TTY device

Description This command displays information about one or all of the TTY devices defined on the switch at the time the command is issued. There is a TTY device dedicated to each port and it is always present. Other TTY devices are created and destroyed as they are required for Telnet logins and multiple sessions.

If a TTY number is specified, then information for this TTY is displayed. If a TTY number is not specified, then information for the TTY where the command is issued is displayed. If **all** is specified, then information for all the TTYs on the switch is displayed.

If no other parameters are specified then full configuration information for the specified TTY is displayed (Figure 39-8, Table 39-4 on page 39-27). The **summary** parameter generates an abbreviated one-line display for each TTY specified (Figure 39-9 on page 39-28, Table 39-5 on page 39-28). The **default** parameter displays the default values assigned to TTY devices created for Telnet connections (Figure 39-10 on page 39-28, Table 39-6 on page 39-28). A TTY number may not be specified with the **default** parameter.

If the command is issued from a connection with User privileges, the TTY number cannot be specified and the information displayed is for the TTY from which the command was issued.

Figure 39-8: Example output from the **show tty** command

```
TTY information
Instance ..... 30
Login name ..... manager
Description ..... Telnet 1
Secure ..... yes
Connections to ..... 21
Current connection ..... 0
In flow state ..... on
Out flow state ..... on
Attached module ..... Telnet
Attached module instance .. 1
Type ..... VT100
Service ..... none
Prompt ..... default
Echo ..... yes
Attention ..... char
Manager ..... yes
Edit mode ..... insert
History length ..... 30
Page mode/length ..... 22
Idle Timeout (seconds)..... 300
```

Table 39-4: Parameters in output of the **show tty** command

Parameter	Meaning
Instance	Instance number for the TTY device.
Login name	Login name of the user logged in to this port, if any.
Description	Name assigned to the port.
Secure	Whether the port is secure.
Connections to	A list of TTY devices (if any) to which this port TTY is linked for the purpose of providing multiple sessions.
Current connection	Instance number of the TTY that this port TTY is currently connected to, or "none" if there is no active connection.
In flow state	Whether the input flow control for the TTY device is on.
Out flow state	Whether the output flow control for the TTY device is on.
Attached module	Name of the module that owns the TTY. The default is TSER (terminal server).
Attached module instance	Instance of the module that owns the TTY.
Type	Whether the terminal type for the TTY is dumb or VT100.
Service	Name of the service to which this TTY belongs, if any.
Prompt	Prompt for this TTY: default off login password confirm encapsulation user-defined string
Echo	Whether the TTY echoes characters are received.
Attention	Attention character for this TTY: none break char
Manager	Whether the TTY has Manager privileges.
Edit mode	Edit mode for the TTY question mark (?) insert overstrike
History length	Maximum number of commands that is held in the command history for this TTY.
Page mode/length	Number of lines of command output the switch displays before pausing and waiting for the user to press a key, or "off" if page mode is disabled for this TTY.
Idle timeout	Maximum period of time in seconds without data being received from a given remote client before the corresponding session is terminated.

Figure 39-9: Example output from the **show tty=all summary** command

TTY	Description	User name	Module	Inst	Mgr	Connections	Timeout
016	Port 0	support	TSER	000	yes		off
017	tst	test	TSER	001	no	018	300
018	Telnet 1	manager	TELN	001	yes	017, 019	
019	SUN	admin	TELN	002	no	018	

Table 39-5: Parameters in output of the **show tty=all summary** command

Parameter	Meaning
TTY	Instance number of the TTY
Description	Name of the port, or service associated with that port, for a TTY dedicated to a port. For a Telnet login TTY the description is "Telnet" followed by the Telnet instance number. For a multiple session connection to a service it is the name of the service. For a multiple session Telnet it is the IP number or name of the host.
User name	Login name of the user logged in to the TTY, if any.
Module	Name of the module that is connected to the TTY.
Inst	Instance number of the module that is connected to the TTY.
Mgr	Whether the TTY has manager privileges.
Connections	List of the other TTY instance numbers with which this TTY has connections to support multiple sessions.
Timeout	Maximum period of time in seconds without data being received from a given remote client before the corresponding session is terminated.

Figure 39-10: Example output from the **show tty default** command

TTY Default Settings
History length.....20
Page length.....22
Prompt.....default
Type.....VT100
Idle Timeout (seconds)....off

Table 39-6: Parameters in output of the **show tty default** command

Parameter	Meaning
History length	Default maximum number of commands that is held in the command history for a TTY.
Page mode/length	Default number of lines of command output the switch displays before pausing and waiting for the user to press a key, or "off" if page mode is disabled for a TTY.

Table 39-6: Parameters in output of the **show tty default** command (Continued)

Parameter	Meaning
Prompt	Default prompt for a TTY: default off login password confirm encapsulation user-defined string
Type	Whether the default terminal type for a TTY is dumb or VT100.
Idle Timeout	Maximum period of time in seconds without data being received from a given remote client before the corresponding session is terminated.

Examples To display the TTY configuration for a Telnet connection, use the command:

```
sh tt
```

To display a summary of all the TTY information for a switch, use the command:

```
sh tt=a s
```

Related Commands [set asyn](#) in Chapter 12, Interfaces
[set tty](#)

telnet

Syntax TELnet {*ipadd*|*host*}

where:

- *ipadd* is an IP address in dotted decimal notation.
- *host* is a full domain name of a host, a host nickname created with the [add ip host command on page 13-56 of Chapter 13, Internet Protocol \(IP\)](#), or a host name in the same domain.

Description This command attempts to open a Telnet connection to a Telnet host at the specified IP address or with the specified name. If the command is successful, the message in [Figure 39-11](#) is followed by the host prompt. When the user logs off from the host, the connection terminates and the switch prompt reappears. The Telnet session can also be terminated by pressing [Ctrl+D].

If the *sysName* MIB object is set to the switch's fully qualified domain name (e.g. switch.company.com) by using the [set system name command on page 4-31 of Chapter 4, Configuring and Monitoring the System](#), and a name server has been defined by using the [set ip nameserver command on page 13-118 of Chapter 13, Internet Protocol \(IP\)](#), then the command:

```
tel mainhost
```

attempts a Telnet connection to the host "mainhost.company.com", provided "mainhost" is not an IP nickname (IP nicknames take precedence).

Figure 39-11: Example output from the **telnet** command

```
TELNET. Attempting to connect to 192.168.35.17, please wait...
```

If a domain name is specified, the switch sends a request to a name server to translate the domain name into an IP address. This may take several seconds during which time the normal switch prompt reappears. When the name server responds (or fails to respond), a message is displayed indicating that the lookup was unsuccessful, or that it was successful and an attempt is being made to connect to a host at the specified IP address.

A user is permitted to issue the **telnet** command only if the user has the TELNET attribute set to **yes** in the user database. See [Chapter 23, User Authentication](#) for further information on these security features.

If a user telnets to the switch but does not login within one minute, the switch automatically times out the session and terminates the Telnet connection.

Examples To connect to Telnet host zaphod.beeblebrox.com use the command:

```
tel zaphod.beeblebrox.com
```

Related Commands

- [connect](#)
- [disable telnet server](#)
- [disconnect](#)
- [enable telnet server](#)
- [reconnect](#)
- [set ip nameserver](#)
- [set system name](#)
- [set telnet](#)
- [show telnet](#)