

Rapier Series Switch **AlliedWare™ Operating System** **Software Reference for Version 2.9.1**



Rapier 16fi
Rapier 24i
Rapier 48i
Rapier 48w

AlliedWare OS Software Reference for Software Version 2.9.1
Document Number C613-03126-00 REV A.

© 2006 Allied Telesis, Inc. All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

All company names, logos, and product designs that are trademarks or registered trademarks are the property of their respective owners.

Contents

About this Software Reference

| | |
|--|--------|
| Introduction | lxi |
| Structure of this Software Reference | lxi |
| Intended Audience | lxvi |
| Conventions | lxvi |
| Command Descriptions | lxviii |
| Where To Find More Information | lxix |
| Obtaining Copies of Internet Protocols and Standards | lxx |
| Publicly Accessible Documents | lxx |
| Allied Telesis Offices and Locations | lxx |
| Reader's Comments | lxxi |

Command Summary

CHAPTER 1 Getting Started

| | |
|---|------|
| Establishing a Management Session with the Switch | 1-2 |
| Assigning an IP Address | 1-3 |
| About Setting Routes | 1-4 |
| Checking Connections with PING | 1-5 |
| Changing a Password | 1-6 |
| Using Command Line Help | 1-7 |
| Using GUI Help | 1-8 |
| Special Feature Licences | 1-9 |
| Setting System Parameters | 1-10 |
| Saving Configurations Entered with the CLI | 1-11 |
| Saving Configurations Entered with the GUI | 1-12 |
| Troubleshooting Traffic Flow | 1-13 |
| Software Upgrades | 1-14 |
| SNMP and MIBs | 1-15 |
| To Avoid Problems | 1-16 |
| For More Information | 1-17 |

CHAPTER 2 Using the Command Line Interface (CLI)

| | |
|---|-----|
| Introduction | 2-2 |
| Parts of a Command | 2-3 |
| Entering a Command | 2-4 |
| Shortcuts | 2-4 |
| Command Sets | 2-6 |
| What is Valid Syntax? | 2-7 |
| What Commands does a Feature Support? | 2-9 |

| | |
|--------------------------------------|------|
| Editing Commands | 2-10 |
| Recalling Commands | 2-10 |
| Command Reference | 2-11 |
| add alias | 2-12 |
| delete alias | 2-13 |
| help | 2-13 |
| set command assignmentoperator | 2-14 |
| set help | 2-15 |
| show alias | 2-15 |
| show command history | 2-16 |

CHAPTER 3 **Using the Graphical User Interface (GUI)**

| | |
|---|------|
| Introduction | 3-2 |
| What is the GUI? | 3-2 |
| Accessing the Switch via the GUI | 3-3 |
| Browser and PC Setup | 3-3 |
| Establishing a Connection to the Switch | 3-5 |
| Secure Access | 3-10 |
| System Status | 3-10 |
| Using the GUI: Navigation and Features | 3-11 |
| The Configuration Menu | 3-11 |
| Using Configuration Pages | 3-12 |
| The Management Menu | 3-15 |
| The Monitoring Menu | 3-16 |
| The Diagnostics Menu | 3-16 |
| Combining GUI and CLI Configuration | 3-16 |
| Troubleshooting | 3-17 |
| Enabling and Disabling the GUI | 3-17 |
| Deleting Temporary Files | 3-17 |
| Accessing the Switch via the GUI | 3-18 |
| Command Reference | 3-20 |
| disable gui | 3-20 |
| enable gui | 3-20 |
| reset gui | 3-21 |
| show gui | 3-22 |

CHAPTER 4 **Configuring and Monitoring the System**

| | |
|---------------------------------------|------|
| Introduction | 4-3 |
| System Identification | 4-3 |
| Time and Date | 4-4 |
| Timezone and UTC Offset | 4-5 |
| Monitoring Switch Operations | 4-6 |
| Monitoring the Power Supply | 4-10 |
| Emailing Alerts from the Switch | 4-10 |
| Configuration Examples | 4-11 |
| Command Reference | 4-13 |
| activate cpu extended | 4-13 |
| activate findme | 4-14 |
| clear summertime | 4-15 |
| clear timezone | 4-16 |
| deactivate findme | 4-16 |
| delete mail | 4-17 |
| disable cpu extended | 4-17 |
| disable debug active | 4-18 |
| disable mail debug | 4-18 |
| disable summertime | 4-19 |
| dump | 4-20 |
| enable cpu extended | 4-22 |

| | |
|---------------------------------|------|
| enable summertime | 4-22 |
| enable mail debug | 4-23 |
| mail | 4-24 |
| modify | 4-26 |
| reset cpu utilisation | 4-27 |
| reset mail | 4-27 |
| set mail | 4-28 |
| set summertime | 4-29 |
| set system contact | 4-31 |
| set system location | 4-32 |
| set system name | 4-33 |
| set system rpsmonitor | 4-34 |
| set time | 4-35 |
| set timezone | 4-36 |
| show buffer | 4-37 |
| show cpu | 4-41 |
| show debug | 4-43 |
| show debug active | 4-45 |
| show exception | 4-50 |
| show mail | 4-51 |
| show startup | 4-52 |
| show summertime | 4-53 |
| show system | 4-54 |
| show system environmental | 4-57 |
| show system serialnumber | 4-58 |
| show system startup | 4-58 |
| show time | 4-59 |
| show timezone | 4-60 |

CHAPTER 5 **Managing Configuration Files and Software Versions**

| | |
|--|------|
| Managing Configuration Files | 5-3 |
| Loading Files onto the Switch | 5-4 |
| Loading from a Trivial File Transfer Protocol (TFTP) Server | 5-4 |
| Loading from a Web Server | 5-5 |
| Loading from a Lightweight Directory Access Protocol (LDAP) Server | 5-6 |
| Loading from a Remote Device using Secure Copy | 5-7 |
| Additional Loader Commands | 5-8 |
| Uploading Files from the Switch | 5-8 |
| Using HTTP | 5-9 |
| Using TFTP and ZMODEM | 5-11 |
| Using Secure Copy | 5-11 |
| Software Upgrades | 5-13 |
| Upgrade Overview | 5-13 |
| Install Process | 5-14 |
| Filenames | 5-15 |
| Licencing | 5-15 |
| Patches | 5-17 |
| Example: Upgrading to new software | 5-17 |
| Example: Upgrading to a new patch file | 5-19 |
| Upgrading the GUI | 5-20 |
| Command Reference | 5-22 |
| create config | 5-22 |
| delete install | 5-23 |
| disable feature | 5-24 |
| disable http debug | 5-25 |
| disable http server | 5-25 |
| disable ldap debug | 5-26 |
| disable release | 5-26 |

| | |
|--------------------------------|------|
| enable feature | 5-27 |
| enable http debug | 5-28 |
| enable http server | 5-28 |
| enable ldap debug | 5-29 |
| enable release | 5-30 |
| load | 5-31 |
| purge ldap | 5-36 |
| reset http server | 5-36 |
| reset loader | 5-36 |
| restart | 5-37 |
| set config | 5-38 |
| set http server | 5-39 |
| set install | 5-40 |
| set loader | 5-42 |
| show config | 5-46 |
| show feature | 5-48 |
| show http client | 5-50 |
| show http debug | 5-51 |
| show http server | 5-52 |
| show http server session | 5-53 |
| show install | 5-54 |
| show ldap | 5-55 |
| show ldap request | 5-56 |
| show loader | 5-58 |
| show patch | 5-60 |
| show release | 5-61 |
| upload | 5-62 |

CHAPTER 6 **Managing the File System**

| | |
|--|------|
| Introduction | 6-2 |
| File Naming Conventions | 6-2 |
| Long Filenames in Releases | 6-3 |
| Working with Files | 6-4 |
| Built-In Editor | 6-5 |
| Using Wildcards | 6-5 |
| Flash Memory | 6-5 |
| The Flash File System (FFS) | 6-6 |
| If You Clear Flash Memory Completely | 6-7 |
| Non-Volatile Storage (NVS) | 6-8 |
| Command Reference | 6-9 |
| activate flash compaction | 6-9 |
| add file | 6-10 |
| clear flash totally | 6-11 |
| clear nvs totally | 6-11 |
| copy | 6-12 |
| create file | 6-13 |
| delete file | 6-14 |
| delete nvs | 6-15 |
| dump nvs | 6-16 |
| edit | 6-17 |
| modify nvs | 6-20 |
| purge file translationtable | 6-21 |
| rename | 6-22 |
| reset file permanentredirect | 6-23 |
| show ffile | 6-24 |
| show file | 6-26 |
| show file permanentredirect | 6-29 |
| show flash | 6-30 |

| | |
|---------------------------|------|
| show flash physical | 6-32 |
| show nvs | 6-33 |
| show nvs free | 6-34 |

CHAPTER 7 Overview of Layer 2 Switching

| | |
|---|-----|
| Introduction | 7-2 |
| Switch Ports | 7-2 |
| Enabling and Disabling Switch Ports | 7-2 |
| Autonegotiation of Port Speed and Duplex Mode | 7-3 |
| Port Trunking | 7-3 |
| Link Access Control Protocol (LACP) | 7-3 |
| Packet Storm Protection | 7-3 |
| Port Mirroring | 7-3 |
| Port Security | 7-4 |
| Virtual Local Area Networks (VLANs) | 7-4 |
| Creating VLANs | 7-5 |
| Summary of VLAN tagging rules | 7-6 |
| VLAN Interaction with STPs and Trunk Groups | 7-6 |
| Generic VLAN Registration Protocol (GVRP) | 7-6 |
| Quality of Service | 7-7 |
| Spanning Tree Protocol (STP) | 7-8 |
| Spanning Tree and Rapid Spanning Tree Port States | 7-8 |
| Multiple Spanning Tree Protocol (MSTP) | 7-9 |
| IGMP Snooping | 7-9 |
| Triggers | 7-9 |

CHAPTER 8 Switching

| | |
|--|------|
| Introduction | 8-4 |
| Switch Ports | 8-5 |
| Enabling and Disabling Switch Ports | 8-5 |
| Speed and Duplex Mode | 8-7 |
| Switch Instances on 48-Port Switches | 8-9 |
| Port Trunking | 8-10 |
| Link Aggregation Control Protocol (LACP) | 8-11 |
| Packet Storm Protection | 8-12 |
| Port Mirroring | 8-12 |
| Port Security | 8-13 |
| Port Security | 8-13 |
| Virtual Local Area Networks (VLANs) | 8-14 |
| Dynamic VLAN Assignment | 8-14 |
| 802.1x Guest VLAN | 8-16 |
| VLAN Tagging | 8-16 |
| VLAN Membership of Untagged Packets | 8-19 |
| Creating VLANs | 8-20 |
| Summary of VLAN Tagging Rules | 8-22 |
| VLAN Interaction with Trunk Groups | 8-22 |
| Static and Dynamic VLANs | 8-22 |
| Protected VLANs | 8-23 |
| Private VLANs | 8-23 |
| VLAN Relaying | 8-25 |
| Configuring VLAN Relaying | 8-27 |
| The Layer 2 Switching Process | 8-28 |
| The Ingress Rules | 8-28 |
| The Learning Process | 8-29 |
| The Forwarding Process | 8-30 |
| The Egress Rules | 8-30 |
| Quality of Service | 8-31 |

| | |
|---|------|
| Layer 2 Filtering | 8-31 |
| Securing a Single VLAN through Switch Filters | 8-32 |
| Hardware Packet Filters | 8-33 |
| Classifier-Based Packet Filters | 8-34 |
| Ordering Filter Entries | 8-35 |
| Configuring Filters | 8-36 |
| Filter Modes in 48-Port Switches | 8-36 |
| Layer 3 Based Packet Filters | 8-38 |
| Layer 3 Filter Matches | 8-38 |
| Layer 3 Filter Entries | 8-38 |
| Access Control Lists (ACLs) | 8-39 |
| Triggers | 8-40 |
| Configuration Examples | 8-41 |
| One Switch to Extend a Local LAN | 8-41 |
| VLAN with Untagged Ports | 8-41 |
| VLAN with Tagged Ports | 8-43 |
| Meshed Network with VLAN Tagged Ports | 8-44 |
| Command Reference | 8-48 |
| activate switch port | 8-49 |
| add lacp port | 8-50 |
| add switch filter | 8-52 |
| add switch hwfilter classifier | 8-54 |
| add switch l3filter entry | 8-56 |
| add switch l3filter match | 8-59 |
| add switch trunk | 8-62 |
| add vlan port | 8-63 |
| add vlanrelay | 8-65 |
| create switch trunk | 8-66 |
| create vlan | 8-68 |
| create vlanrelay | 8-69 |
| delete lacp port | 8-70 |
| delete switch filter | 8-71 |
| delete switch hwfilter classifier | 8-71 |
| delete switch l3filter | 8-72 |
| delete switch l3filter entry | 8-72 |
| delete switch trunk | 8-73 |
| delete vlan port | 8-74 |
| delete vlanrelay | 8-75 |
| destroy switch trunk | 8-76 |
| destroy vlan | 8-77 |
| destroy vlanrelay | 8-77 |
| disable lacp | 8-78 |
| disable lacp debug | 8-78 |
| disable switch ageingtimer | 8-78 |
| disable switch debug | 8-79 |
| disable switch filter vlansecure | 8-80 |
| disable switch hwfilter | 8-80 |
| disable switch l3filter | 8-81 |
| disable switch learning | 8-81 |
| disable switch mirror | 8-82 |
| disable switch port | 8-82 |
| disable vlan debug | 8-83 |
| disable vlanrelay | 8-84 |
| disable vlanrelay debug | 8-84 |
| enable lacp | 8-85 |
| enable lacp debug | 8-85 |
| enable switch ageingtimer | 8-86 |
| enable switch bist | 8-87 |
| enable switch debug | 8-88 |

| | |
|---------------------------------------|-------|
| enable switch filter vlansecure | 8-89 |
| enable switch hwfilter | 8-89 |
| enable switch l3filter | 8-90 |
| enable switch learning | 8-90 |
| enable switch mirror | 8-90 |
| enable switch port | 8-91 |
| enable vlan debug | 8-92 |
| enable vlanrelay | 8-93 |
| enable vlanrelay debug | 8-93 |
| purge lacp | 8-94 |
| reset lacp port counter | 8-94 |
| reset switch | 8-94 |
| reset switch port | 8-95 |
| set lacp port | 8-96 |
| set lacp priority | 8-97 |
| set switch ageingtimer | 8-97 |
| set switch hwfilter classifier | 8-98 |
| set switch hwfilter mode | 8-101 |
| set switch l3ageingtimer | 8-102 |
| set switch l3filter entry | 8-103 |
| set switch l3filter match | 8-106 |
| set switch mirror | 8-108 |
| set switch port | 8-109 |
| set switch qos | 8-114 |
| set switch trunk | 8-116 |
| set vlan port | 8-117 |
| show lacp | 8-118 |
| show lacp port | 8-119 |
| show lacp port counter | 8-121 |
| show lacp trunk | 8-122 |
| show switch | 8-123 |
| show switch counter | 8-125 |
| show switch debug | 8-127 |
| show switch fdb | 8-128 |
| show switch filter | 8-130 |
| show switch hwfilter | 8-132 |
| show switch l3filter | 8-134 |
| show switch port | 8-136 |
| show switch port counter | 8-139 |
| show switch port intrusion | 8-143 |
| show switch qos | 8-144 |
| show switch trunk | 8-145 |
| show vlan | 8-146 |
| show vlan debug | 8-148 |
| show vlanrelay | 8-149 |

CHAPTER 9 Spanning Trees

| | |
|--|------|
| Introduction | 9-3 |
| Spanning Tree Protocol (STP) | 9-3 |
| Multiple Spanning Trees and STP Interaction with VLANs | 9-3 |
| Spanning Tree Operation | 9-4 |
| The Forwarding Process | 9-5 |
| Electing a Root Bridge and Designated Bridge | 9-6 |
| Spanning Tree Modes | 9-6 |
| Rapid Mode Spanning Tree Types | 9-7 |
| Spanning Tree and Rapid Spanning Tree Port States | 9-7 |
| Configuring STP | 9-8 |
| Simple Meshed Network Example | 9-12 |

| | |
|---|------|
| Multiple Spanning Tree Protocol (MSTP) | 9-13 |
| Multiple Spanning Tree Regions | 9-13 |
| Bridge Protocol Data Units (BPDUs) | 9-14 |
| Compatibility with Previous Spanning Tree Protocols | 9-15 |
| Configuring MSTP | 9-17 |
| Common and Internal Spanning Tree (CIST) | 9-23 |
| The Relationship between Spanning Trees and Trunks | 9-27 |
| Command Reference | 9-28 |
| activate mstp migrationcheck port | 9-28 |
| add mstp msti vlan | 9-29 |
| add stp vlan | 9-30 |
| create mstp msti | 9-31 |
| create stp | 9-33 |
| delete mstp msti vlan | 9-34 |
| delete stp vlan | 9-35 |
| destroy mstp msti | 9-36 |
| destroy stp | 9-37 |
| disable mstp | 9-38 |
| disable mstp cist port | 9-38 |
| disable mstp debug | 9-39 |
| disable mstp msti port | 9-40 |
| disable mstp port | 9-41 |
| disable stp | 9-42 |
| disable stp debug | 9-43 |
| disable stp port | 9-45 |
| disable switch stpforward | 9-46 |
| enable mstp | 9-46 |
| enable mstp cist port | 9-47 |
| enable mstp debug | 9-48 |
| enable mstp msti port | 9-50 |
| enable mstp port | 9-51 |
| enable stp | 9-52 |
| enable stp debug | 9-53 |
| enable stp port | 9-55 |
| enable switch stpforward | 9-56 |
| purge mstp | 9-57 |
| purge stp | 9-57 |
| reset mstp counter port | 9-58 |
| reset stp | 9-58 |
| set mstp | 9-59 |
| set mstp cist | 9-61 |
| set mstp cist port | 9-62 |
| set mstp msti | 9-64 |
| set mstp msti port | 9-65 |
| set stp | 9-67 |
| set stp port | 9-70 |
| show mstp | 9-74 |
| show mstp cist | 9-77 |
| show mstp cist port | 9-79 |
| show mstp counter port | 9-81 |
| show mstp debug | 9-82 |
| show mstp msti | 9-83 |
| show mstp msti port | 9-85 |
| show stp | 9-87 |
| show stp counter | 9-91 |
| show stp debug | 9-93 |
| show stp port | 9-94 |

CHAPTER 10 Generic Attribute Registration Protocol (GARP)

| | |
|---|-------|
| Introduction | 10-2 |
| GARP Operations | 10-2 |
| Overview of Generic VLAN Registration Protocol (GVRP) | 10-5 |
| Configuring GARP | 10-6 |
| Command Reference | 10-8 |
| disable garp | 10-8 |
| disable garp debug | 10-10 |
| disable garp gip | 10-11 |
| enable garp | 10-12 |
| enable garp debug | 10-13 |
| enable garp gip | 10-15 |
| reset garp | 10-16 |
| set garp port | 10-17 |
| set garp timer | 10-19 |
| show garp | 10-21 |
| show garp counter | 10-23 |
| show garp db | 10-26 |
| show garp debug | 10-27 |
| show garp gip | 10-28 |
| show garp machine | 10-29 |

CHAPTER 11 Interfaces

| | |
|--|-------|
| Introduction | 11-3 |
| Naming Interfaces | 11-4 |
| Simple Interface Names | 11-4 |
| Fully Qualified Interface Names | 11-5 |
| Ethernet | 11-6 |
| Encapsulations | 11-7 |
| Synchronous Interfaces | 11-9 |
| Encapsulations | 11-10 |
| Modem Control Signals | 11-10 |
| Configuration | 11-11 |
| DS3 Interfaces | 11-13 |
| C-bit Parity Mode | 11-14 |
| Loopbacks | 11-16 |
| DS3 Module Specific Triggers | 11-17 |
| Interface Triggers | 11-18 |
| DS3 Configuration | 11-19 |
| Asynchronous Interfaces | 11-21 |
| Encapsulations | 11-21 |
| Configuration | 11-22 |
| Session Timeout | 11-25 |
| Connecting a Modem to the Asynchronous Port | 11-25 |
| MIB Counters | 11-26 |
| Autobauding | 11-27 |
| Making Asynchronous Ports Respond More Quickly | 11-27 |
| Testing Serial Data Circuits | 11-28 |
| Displaying Interfaces | 11-28 |
| Interface Link Traps | 11-29 |
| Managing Interfaces with SNMP | 11-29 |
| Command Reference | 11-31 |
| connect asyn | 11-31 |
| disable asyn | 11-32 |
| disable ds3 debug | 11-32 |
| disable ds3 test | 11-33 |
| disable ds3 trap | 11-33 |
| disable interface linktrap | 11-34 |

| | |
|---------------------------------|-------|
| disable syn | 11-35 |
| disable syn debug | 11-35 |
| enable asyn | 11-36 |
| enable ds3 debug | 11-36 |
| enable ds3 test | 11-37 |
| enable ds3 trap | 11-39 |
| enable interface linktrap | 11-40 |
| enable syn | 11-41 |
| enable syn debug | 11-41 |
| purge asyn | 11-42 |
| reset asyn | 11-42 |
| reset asyn counter | 11-43 |
| reset asyn history | 11-44 |
| reset ds3 | 11-44 |
| reset ds3 counters | 11-45 |
| reset interface counters | 11-46 |
| reset syn | 11-46 |
| reset syn counters | 11-47 |
| set asyn | 11-48 |
| set ds3 | 11-53 |
| set interface mtu | 11-55 |
| set interface traplimit | 11-57 |
| set syn | 11-58 |
| show asyn | 11-61 |
| show ds3 cmtce | 11-69 |
| show ds3 configuration | 11-71 |
| show ds3 counters | 11-72 |
| show ds3 debug | 11-80 |
| show ds3 state | 11-81 |
| show ds3 test | 11-85 |
| show ds3 trap | 11-86 |
| show ds3 utilisation | 11-86 |
| show interface | 11-87 |
| show syn | 11-91 |
| show syn counter | 11-93 |

CHAPTER 12 **Integrated Services Digital Network (ISDN)**

| | |
|--|-------|
| Introduction | 12-4 |
| Basic Rate Access | 12-4 |
| Primary Rate Access | 12-7 |
| ISDN on the Switch | 12-13 |
| BRI Physical Layer | 12-15 |
| Configuring and Controlling the Basic Rate Interface | 12-15 |
| Examining the Status of the Basic Rate Interface | 12-17 |
| Monitoring Operation of the Basic Rate Interface | 12-19 |
| PRI Physical Layer | 12-19 |
| Configuring and Controlling the Primary Rate Interface | 12-20 |
| Examining the Status of the Primary Rate Interface | 12-22 |
| Monitoring Operation of the Primary Rate Interface | 12-24 |
| LAPD | 12-25 |
| BRI Versus PRI | 12-25 |
| Operation | 12-25 |
| Packet mode support | 12-26 |
| Fault Finding | 12-26 |
| Default Setup | 12-26 |
| Addressing | 12-27 |
| Frame Control Fields | 12-28 |
| Non-Associated Signalling | 12-28 |

| | |
|--|-------|
| Q.931 | 12-30 |
| Service Profile Identifiers (SPIDs) | 12-32 |
| Profiles That Require SPIDs | 12-32 |
| Definition of SPIDs | 12-32 |
| SPID Initialisation | 12-33 |
| SPID Debugging | 12-33 |
| Automatic ISDN Switch Detection | 12-36 |
| Call Control | 12-37 |
| Call Logging | 12-41 |
| Using a Domain Name Server | 12-42 |
| Slotted Interface Numbering | 12-42 |
| Always On/Dynamic ISDN (AODI) | 12-42 |
| Components of AODI | 12-43 |
| Configuring AODI | 12-44 |
| Data Over Voice | 12-46 |
| Configuration Examples | 12-47 |
| A Basic ISDN Setup | 12-47 |
| Configuring ISDN Dial on Demand | 12-55 |
| Configuring ISDN Bandwidth on Demand | 12-56 |
| Refining the ISDN Setup | 12-57 |
| Command Reference | 12-59 |
| activate isdn call | 12-59 |
| activate q931 aspid | 12-60 |
| activate q931 message | 12-61 |
| add isdn call | 12-62 |
| add isdn cilist | 12-68 |
| add isdn domainname | 12-68 |
| add lapd tei | 12-69 |
| add lapd xspid | 12-69 |
| add lapd xtei | 12-70 |
| deactivate isdn call | 12-71 |
| delete isdn call | 12-71 |
| delete isdn cilist | 12-72 |
| delete isdn domainname | 12-72 |
| delete lapd tei | 12-73 |
| delete lapd xspid | 12-74 |
| delete lapd xtei | 12-75 |
| disable bri ctest | 12-75 |
| disable bri debug | 12-76 |
| disable bri test | 12-76 |
| disable isdn call | 12-77 |
| disable isdn log | 12-77 |
| disable pri ctest | 12-78 |
| disable pri debug | 12-78 |
| disable pri test | 12-79 |
| disable q931 debug | 12-80 |
| enable bri ctest | 12-82 |
| enable bri debug | 12-83 |
| enable bri test | 12-84 |
| enable isdn call | 12-86 |
| enable isdn log | 12-86 |
| enable pri ctest | 12-87 |
| enable pri debug | 12-88 |
| enable pri test | 12-89 |
| enable q931 aspid | 12-90 |
| enable q931 debug | 12-91 |
| reset bri | 12-95 |
| reset bri counter | 12-96 |
| reset pri | 12-96 |

| | |
|------------------------------|--------|
| reset pri counter | 12-97 |
| reset q931 | 12-98 |
| set bri | 12-99 |
| set isdn call | 12-101 |
| set isdn domainname | 12-107 |
| set isdn log | 12-107 |
| set lapd | 12-108 |
| set pri | 12-110 |
| set q931 | 12-114 |
| set system territory | 12-117 |
| show bri configuration | 12-118 |
| show bri counter | 12-120 |
| show bri ctest | 12-127 |
| show bri debug | 12-128 |
| show bri state | 12-129 |
| show bri test | 12-133 |
| show isdn call | 12-136 |
| show isdn clilist | 12-140 |
| show isdn domainname | 12-141 |
| show isdn log | 12-142 |
| show lapd | 12-144 |
| show lapd count | 12-147 |
| show lapd state | 12-148 |
| show pri configuration | 12-149 |
| show pri counter | 12-150 |
| show pri ctest | 12-160 |
| show pri debug | 12-161 |
| show pri state | 12-162 |
| show pri test | 12-168 |
| show q931 | 12-171 |
| show q931 spid | 12-174 |

CHAPTER 13 Time Division Multiplexing (TDM)

| | |
|---|-------|
| Introduction | 13-2 |
| E1/T1 Time Division Multiplexing | 13-3 |
| Static E1/T1 TDM Versus ISDN Calling | 13-4 |
| BRI Time Division Multiplexing | 13-5 |
| Configuration Examples | 13-5 |
| Configuring static E1/T1 TDM on a PRI | 13-5 |
| Configuring TDM on a BRI | 13-7 |
| Command Reference | 13-8 |
| add tdm | 13-8 |
| create tdm | 13-9 |
| delete tdm | 13-10 |
| destroy tdm | 13-11 |
| purge tdm | 13-11 |
| show tdm | 13-12 |

CHAPTER 14 X.25

| | |
|---|-------|
| Introduction | 14-3 |
| LAPB | 14-4 |
| DCE Mode | 14-4 |
| DTE Mode | 14-5 |
| DTE Addresses | 14-7 |
| X.25 DCE Route Mapping | 14-7 |
| Encapsulations | 14-8 |
| Configuring LAPB | 14-9 |
| Configuring an Interface for LAPB | 14-10 |

| | |
|---|-------|
| Configuring LAPB Interface Parameters | 14-10 |
| Configuring X.25 DCE | 14-11 |
| Configure an LAPB Interface | 14-11 |
| Configure the X.25 DCE Interface | 14-11 |
| Configuring DTE Addresses on DCEs | 14-12 |
| Configuring X.25 Route Mapping | 14-13 |
| Configuring X.25 DCE TCP Keepalive parameters | 14-13 |
| Displaying and Debugging X.25 DCE Interfaces | 14-13 |
| Configuring X.25 DTE | 14-14 |
| Configure an LAPB Interface | 14-14 |
| Configure the X.25 DTE Interface | 14-14 |
| Configuring Call Parameter Entries | 14-15 |
| Configuring Permanent Virtual Circuits | 14-15 |
| Hunt Groups | 14-16 |
| Configuration Examples | 14-18 |
| A Basic X.25 Setup | 14-18 |
| An Extended X.25 Setup | 14-24 |
| X.25 over ISDN D Channel | 14-30 |
| X.25 Hunt Groups | 14-31 |
| Command Reference | 14-37 |
| activate miox circuit | 14-37 |
| activate x25c test | 14-38 |
| add miox circuit | 14-39 |
| add x25c dteaddress | 14-41 |
| add x25c huntgroup | 14-42 |
| add x25c route | 14-43 |
| add x25t cpar | 14-44 |
| create lapb | 14-45 |
| create x25c | 14-47 |
| create x25c huntgroup | 14-49 |
| create x25t | 14-50 |
| deactivate miox circuit | 14-52 |
| delete miox circuit | 14-53 |
| delete x25c dteaddress | 14-54 |
| delete x25c huntgroup | 14-55 |
| delete x25c route | 14-56 |
| delete x25t cpar | 14-56 |
| destroy lapb | 14-57 |
| destroy x25c | 14-57 |
| destroy x25c huntgroup | 14-58 |
| destroy x25t | 14-58 |
| disable miox circuit | 14-59 |
| disable x25c debug | 14-59 |
| enable miox circuit | 14-60 |
| enable x25c debug | 14-60 |
| reset lapb | 14-61 |
| reset x25t | 14-61 |
| set lapb | 14-62 |
| set miox | 14-63 |
| set miox circuit | 14-64 |
| set x25c | 14-66 |
| set x25c huntgroup | 14-68 |
| set x25c tcpkeepalive | 14-69 |
| set x25t | 14-70 |
| set x25t cpar | 14-72 |
| show lapb | 14-73 |
| show miox | 14-78 |
| show miox count | 14-79 |
| show miox circuit | 14-81 |

| | |
|------------------------------|--------|
| show x25c | 14-85 |
| show x25c counter | 14-87 |
| show x25c dteaddress | 14-90 |
| show x25c huntgroup | 14-91 |
| show x25c path | 14-93 |
| show x25c route | 14-94 |
| show x25c state | 14-95 |
| show x25c tcpkeepalive | 14-96 |
| show x25t | 14-97 |
| show x25t cpar | 14-102 |

CHAPTER 15 **Frame Relay**

| | |
|--|-------|
| Introduction | 15-3 |
| Encapsulation | 15-4 |
| Data Link Connections | 15-6 |
| The Local Management Interface (LMI) | 15-7 |
| Logical Interfaces | 15-8 |
| Disabling or Resetting a Frame Relay Interface | 15-8 |
| Disabling or Resetting a Frame Relay DLC | 15-9 |
| Slow-Start Mechanism | 15-9 |
| Congestion Detection | 15-10 |
| Detection using CLLM messages | 15-10 |
| Detection using BECN bits | 15-11 |
| Congestion Control Scheme | 15-12 |
| Frame Relay on the Switch | 15-14 |
| Encryption and Compression over Frame Relay | 15-15 |
| Troubleshooting Frame Relay Networks | 15-15 |
| Configuring Frame Relay | 15-16 |
| Configuration Examples | 15-19 |
| Frame Relay without an LMI | 15-19 |
| Frame Relay with an LMI | 15-22 |
| Using Frame Relay Logical Interfaces | 15-24 |
| Command Reference | 15-25 |
| add framerelay dlc | 15-26 |
| add framerelay li | 15-27 |
| create framerelay | 15-28 |
| delete framerelay dlc | 15-31 |
| delete framerelay li | 15-31 |
| destroy framerelay | 15-32 |
| disable framerelay | 15-32 |
| disable framerelay congestioncontrol | 15-33 |
| disable framerelay debug | 15-33 |
| disable framerelay dlc | 15-34 |
| disable framerelay dlc debug | 15-35 |
| disable framerelay li debug | 15-36 |
| disable framerelay slowstart | 15-37 |
| enable framerelay | 15-37 |
| enable framerelay congestioncontrol | 15-38 |
| enable framerelay debug | 15-39 |
| enable framerelay dlc | 15-40 |
| enable framerelay dlc debug | 15-41 |
| enable framerelay li debug | 15-43 |
| enable framerelay slowstart | 15-43 |
| reset framerelay | 15-44 |
| reset framerelay dlc | 15-45 |
| set framerelay | 15-46 |
| set framerelay dlc | 15-49 |
| show framerelay | 15-51 |
| show framerelay dlc | 15-61 |
| show framerelay li | 15-69 |

CHAPTER 16 **Point-to-Point Protocol (PPP)**

| | |
|--|-------|
| Introduction | 16-3 |
| The Point-to-Point Protocol | 16-3 |
| Encapsulation | 16-3 |
| Control Protocols | 16-5 |
| LCP Options | 16-6 |
| Configuring PPP | 16-6 |
| Link Quality Management | 16-8 |
| Multilink PPP | 16-9 |
| Bandwidth Allocation Protocol | 16-9 |
| Dial-On-Demand | 16-10 |
| Link Backup | 16-11 |
| Bandwidth on Demand | 16-12 |
| Always On/Dynamic ISDN (AODI) | 16-13 |
| Synchronous Dialling | 16-14 |
| PPP Over Ethernet | 16-15 |
| PPP over Ethernet Client Mode | 16-16 |
| PPP over Ethernet Access Concentrator Mode | 16-16 |
| Templates | 16-17 |
| PPP Callback | 16-18 |
| Magic Number | 16-20 |
| MSS Clamping | 16-20 |
| Overview | 16-20 |
| Example | 16-21 |
| Authentication Protocols | 16-22 |
| Password Authentication Protocol (PAP) | 16-22 |
| Challenge-Handshake Authentication Protocol (CHAP) | 16-23 |
| Switch configuration | 16-24 |
| Assigning IP Addresses | 16-27 |
| PPP Link Management | 16-28 |
| Configuring PPP Control Protocols | 16-29 |
| Debugging PPP Links | 16-30 |
| Configuration Examples | 16-33 |
| Configuring a PPP link | 16-33 |
| Multilink Aggregation | 16-36 |
| Dial-on-Demand Links | 16-38 |
| Link Quality Monitoring | 16-38 |
| Compression and Encryption | 16-39 |
| Leased Line Backup | 16-40 |
| Bandwidth on Demand | 16-42 |
| Bandwidth on Demand with Leased Line Circuits and ISDN | 16-44 |
| Command Reference | 16-47 |
| activate ppp | 16-47 |
| add ppp | 16-49 |
| add ppp acservice | 16-53 |
| create ppp | 16-55 |
| create ppp template | 16-62 |
| delete ppp | 16-69 |
| delete ppp acservice | 16-70 |
| destroy ppp | 16-71 |
| destroy ppp template | 16-71 |
| disable ppp | 16-72 |
| disable ppp accessconcentrator | 16-72 |
| disable ppp debug | 16-73 |
| disable ppp template debug | 16-74 |
| enable ppp | 16-75 |
| enable ppp accessconcentrator | 16-76 |
| enable ppp debug | 16-77 |
| enable ppp template debug | 16-79 |

| | |
|----------------------------|--------|
| purge ppp | 16-80 |
| reset ppp | 16-81 |
| set ppp | 16-82 |
| set ppp acservice | 16-90 |
| set ppp template | 16-92 |
| show ppp | 16-98 |
| show ppp config | 16-99 |
| show ppp count | 16-105 |
| show ppp debug | 16-118 |
| show ppp idletimer | 16-119 |
| show ppp limits | 16-120 |
| show ppp multilink | 16-121 |
| show ppp nameserver | 16-123 |
| show ppp pppoe | 16-124 |
| show ppp template | 16-126 |
| show ppp txstatus | 16-130 |
| show ppp utilisation | 16-132 |

CHAPTER 17 **Bridging**

| | |
|---|-------|
| Introduction | 17-2 |
| Bridging on the Switch | 17-2 |
| Remote Bridging | 17-3 |
| Virtual Ports and Switch Ports | 17-3 |
| VLAN-to-WAN Bridging | 17-5 |
| Internal Representation of the VLAN-to-WAN Bridge | 17-5 |
| The VLAN-to-WAN Bridging Process | 17-5 |
| WAN-to-WAN Bridging | 17-6 |
| Internal Representation of the WAN-to-WAN Bridge | 17-7 |
| Bridge Learning and Forwarding | 17-7 |
| Configuration Examples | 17-9 |
| VLAN-to-WAN Bridge Configuration | 17-9 |
| Command Reference | 17-11 |
| add bridge filter | 17-11 |
| add bridge port | 17-14 |
| add bridge station | 17-15 |
| add vlan bridge | 17-16 |
| delete bridge filter | 17-17 |
| delete bridge port | 17-17 |
| delete bridge station | 17-18 |
| delete vlan bridge | 17-18 |
| disable bridge | 17-19 |
| disable bridge learning | 17-19 |
| disable bridge tagged | 17-19 |
| enable bridge | 17-20 |
| enable bridge learning | 17-20 |
| enable bridge tagged | 17-20 |
| purge bridge | 17-21 |
| reset bridge | 17-21 |
| set bridge ageingtimer | 17-21 |
| set bridge filter | 17-22 |
| set bridge port | 17-24 |
| show bridge | 17-25 |
| show bridge counter | 17-27 |
| show bridge filter | 17-30 |
| show bridge port | 17-33 |
| show bridge protocol | 17-34 |
| show bridge station | 17-35 |

CHAPTER 18 Synchronous Tunnelling

| | |
|--|------|
| Introduction | 18-2 |
| Synchronous Tunnelling on the Switch | 18-2 |
| Configuration Example | 18-3 |
| Command Reference | 18-4 |
| add stt | 18-5 |
| delete stt | 18-6 |
| reset stt | 18-6 |
| set stt | 18-7 |
| show stt | 18-8 |

CHAPTER 19 Transaction Packet Assembler Disassembler (TPAD)

| | |
|---|-------|
| Introduction | 19-2 |
| The TPAD Protocol | 19-4 |
| TPAD on the Switch | 19-5 |
| TPAD Chip and PIN Authentication | 19-7 |
| The Hayes Standard AT Command Set on the Switch | 19-8 |
| TPAD Fast Disconnect | 19-9 |
| Configuration Examples | 19-10 |
| Configuring X.25 Interfaces | 19-10 |
| Creating TPAD Instances | 19-12 |
| Troubleshooting TPAD | 19-14 |
| Command Reference | 19-17 |
| add tpad | 19-17 |
| create tpad | 19-18 |
| delete tpad | 19-20 |
| destroy tpad | 19-20 |
| disable tpad | 19-21 |
| disable tpad debug | 19-21 |
| enable tpad | 19-22 |
| enable tpad debug | 19-22 |
| reset tpad | 19-23 |
| set tpad | 19-24 |
| show tpad | 19-26 |
| show tpad connections | 19-29 |
| show tpad counter | 19-31 |

CHAPTER 20 Asynchronous Call Control

| | |
|-------------------------------------|-------|
| Introduction | 20-2 |
| Call Definitions | 20-2 |
| Authenticating Incoming Calls | 20-5 |
| RADIUS Authentication | 20-5 |
| RADIUS Accounting | 20-6 |
| Using Modem Scripts | 20-6 |
| Bidirectional Calls | 20-9 |
| Interface with Higher Layers | 20-9 |
| Using a Domain Name Server | 20-10 |
| Configuration Examples | 20-10 |
| Defining an ACC Call | 20-10 |
| Assigning IP Addresses | 20-12 |
| Dial-in IPX | 20-13 |
| Switch-to-Switch PPP | 20-13 |
| Command Reference | 20-16 |
| activate acc call | 20-16 |
| add acc call | 20-17 |
| add acc domainname | 20-20 |
| add acc script | 20-21 |
| deactivate acc call | 20-22 |

| | |
|------------------------------|-------|
| delete acc call | 20-23 |
| delete acc domainname | 20-23 |
| delete acc script | 20-24 |
| disable acc call | 20-24 |
| disable acc call debug | 20-25 |
| enable acc call | 20-25 |
| enable acc call debug | 20-26 |
| purge acc | 20-26 |
| purge acc script | 20-27 |
| set acc call | 20-28 |
| set acc call asyn | 20-31 |
| set acc script | 20-32 |
| show acc | 20-34 |
| show acc call | 20-35 |
| show acc domainname | 20-38 |
| show acc script | 20-39 |

CHAPTER 21 **Layer Two Tunneling Protocol (L2TP)**

| | |
|--|-------|
| Introduction | 21-3 |
| Overview of L2TP | 21-3 |
| Overview of L2TP on the Switch | 21-5 |
| Enabling L2TP on the Switch | 21-6 |
| Accepting Incoming Calls as an LAC | 21-6 |
| Accepting L2TP Sessions as an LNS | 21-7 |
| Creating a Call from an LNS to an LAC | 21-8 |
| Monitoring L2TP Connections | 21-10 |
| Debugging L2TP Connections | 21-10 |
| Reflecting TOS onto L2TP-Tunnelled Packets | 21-11 |
| Configuration Examples | 21-12 |
| Inter-Switch Tunnels | 21-12 |
| Simple Dial-In System | 21-14 |
| Configure L2TP to Tunnel PPPoE Sessions | 21-15 |
| Command Reference | 21-18 |
| activate l2tp call | 21-18 |
| add l2tp call | 21-19 |
| add l2tp ip | 21-22 |
| add l2tp password | 21-24 |
| add l2tp user | 21-25 |
| deactivate l2tp call | 21-28 |
| delete l2tp call | 21-28 |
| delete l2tp ip | 21-29 |
| delete l2tp password | 21-30 |
| delete l2tp user | 21-31 |
| disable l2tp | 21-32 |
| disable l2tp debug | 21-33 |
| disable l2tp server | 21-34 |
| enable l2tp | 21-34 |
| enable l2tp debug | 21-35 |
| enable l2tp server | 21-39 |
| reset l2tp counter | 21-39 |
| set l2tp call | 21-40 |
| set l2tp checksum | 21-43 |
| set l2tp filter | 21-43 |
| set l2tp password | 21-44 |
| set l2tp user | 21-45 |
| show l2tp | 21-48 |
| show l2tp call | 21-50 |
| show l2tp counter | 21-52 |

| | | |
|-------------------|--|-------|
| | show l2tp ip | 21-55 |
| | show l2tp tunnel | 21-56 |
| | show l2tp tunnel call | 21-59 |
| | show l2tp tunnel call counter | 21-63 |
| | show l2tp tunnel counter | 21-65 |
| | show l2tp user | 21-67 |
| CHAPTER 22 | Overview of Layer 3 | |
| | Introduction | 22-2 |
| | Internet Protocol (IP) | 22-3 |
| | OSPF | 22-4 |
| | Routing Information Protocol (RIP) | 22-5 |
| | IP Multicasting | 22-6 |
| | Configuring IGMP | 22-7 |
| | Configuring Multicast Routing | 22-7 |
| | Novell IPX | 22-8 |
| | AppleTalk | 22-10 |
| CHAPTER 23 | Internet Protocol (IP) | |
| | Introduction | 23-5 |
| | IP Packets | 23-5 |
| | Addressing | 23-7 |
| | Subnets | 23-8 |
| | Assigning an IP Address | 23-9 |
| | Multihoming | 23-10 |
| | Local Interfaces | 23-11 |
| | Address Resolution Protocol (ARP) | 23-13 |
| | Static ARP Entries | 23-13 |
| | Adding Static ARP Entries with Multicast MAC Addresses | 23-14 |
| | Timing Out ARP Entries | 23-14 |
| | Deleting ARP Entries | 23-16 |
| | Proxy ARP | 23-17 |
| | MAC Address Logging | 23-18 |
| | Waiting for a Response to an ARP Request | 23-18 |
| | DHCP Client | 23-18 |
| | ICMP | 23-19 |
| | ICMP Router Discovery Advertisements | 23-20 |
| | Routing | 23-22 |
| | Types of Routes | 23-22 |
| | The Routing Table | 23-23 |
| | Configuring Static Routes | 23-23 |
| | Caching Routes | 23-24 |
| | Dynamic Routing Protocols | 23-24 |
| | Setting Preference of Dynamically-Learned Routes | 23-24 |
| | Displaying Route Information | 23-25 |
| | Routing Information Protocol (RIP) | 23-25 |
| | Open Shortest Path First (OSPF) | 23-26 |
| | Border Gateway Protocol (BGP) | 23-26 |
| | Metrics | 23-26 |
| | OSPF Auto Cost Calculation | 23-26 |
| | Policy-Based Routing | 23-26 |
| | Priority-Based Routing | 23-28 |
| | Route Templates | 23-29 |
| | Domain Name System (DNS) | 23-30 |
| | Usage of Domain Name Servers | 23-30 |
| | Configuring Domain Name Servers | 23-31 |
| | DNS Caching | 23-33 |
| | Named Hosts | 23-34 |

| | |
|--|--------|
| Traffic Filters | 23-34 |
| SNMP | 23-36 |
| Control and Debug Commands | 23-37 |
| Ping and Trace Route | 23-38 |
| Ping | 23-38 |
| Trace Route | 23-38 |
| Finger | 23-39 |
| Security Options | 23-41 |
| Security Associations | 23-41 |
| Broadcast Forwarding | 23-42 |
| IP Multicasting | 23-45 |
| Static Multicast Forwarding | 23-46 |
| Remote Address Assignment | 23-46 |
| IP Address Pools | 23-47 |
| Configuration Examples | 23-48 |
| Basic IP Setup over PPP | 23-49 |
| Configuring IP Filters | 23-52 |
| Troubleshooting | 23-57 |
| No Route Exists to the Remote Switch | 23-57 |
| Getting an IP Address from DHCP | 23-58 |
| Telnet Fails | 23-58 |
| Command Reference | 23-59 |
| add ip advertise interface | 23-60 |
| add ip arp | 23-61 |
| add ip dns | 23-63 |
| add ip filter | 23-65 |
| add ip helper | 23-72 |
| add ip host | 23-73 |
| add ip interface | 23-74 |
| add ip local | 23-79 |
| add ip route | 23-80 |
| add ip route template | 23-83 |
| add ip sa | 23-85 |
| create ip pool | 23-86 |
| delete ip advertise interface | 23-86 |
| delete ip arp | 23-87 |
| delete ip dns | 23-87 |
| delete ip filter | 23-88 |
| delete ip helper | 23-89 |
| delete ip host | 23-90 |
| delete ip interface | 23-91 |
| delete ip local | 23-92 |
| delete ip route | 23-93 |
| delete ip route template | 23-94 |
| delete ip sa | 23-95 |
| delete tcp | 23-96 |
| destroy ip pool | 23-96 |
| disable ip | 23-97 |
| disable ip advertise | 23-97 |
| disable ip arp agepoll | 23-97 |
| disable ip arp log | 23-98 |
| disable ip debug | 23-98 |
| disable ip dnsrelay | 23-98 |
| disable ip echoreply | 23-99 |
| disable ip fofilter | 23-100 |
| disable ip forwarding | 23-101 |
| disable ip helper | 23-101 |
| disable ip icmpreply | 23-102 |
| disable ip interface | 23-103 |

| | |
|----------------------------------|--------|
| disable ip macdisparity | 23-104 |
| disable ip remoteassign | 23-104 |
| disable ip route | 23-105 |
| disable ip spoofcheck | 23-105 |
| disable ip srcroute | 23-106 |
| disable tcp debug | 23-107 |
| disable telnet server | 23-107 |
| enable ip | 23-108 |
| enable ip advertise | 23-108 |
| enable ip arp agepoll | 23-109 |
| enable ip arp log | 23-109 |
| enable ip debug | 23-110 |
| enable ip dnsrelay | 23-111 |
| enable ip echoreply | 23-111 |
| enable ip fofilter | 23-112 |
| enable ip forwarding | 23-113 |
| enable ip helper | 23-113 |
| enable ip icmpreply | 23-114 |
| enable ip interface | 23-115 |
| enable ip macdisparity | 23-116 |
| enable ip remoteassign | 23-117 |
| enable ip route | 23-117 |
| enable ip spoofcheck | 23-118 |
| enable ip srcroute | 23-118 |
| enable tcp debug | 23-119 |
| enable telnet server | 23-119 |
| finger | 23-120 |
| ping | 23-121 |
| purge ip | 23-123 |
| reset ip | 23-124 |
| reset ip counter | 23-124 |
| reset ip interface | 23-125 |
| set ip advertise interface | 23-126 |
| set ip arp | 23-127 |
| set ip arp refresharp | 23-128 |
| set ip arp timeout | 23-129 |
| set ip arpwaittimeout | 23-130 |
| set ip dns | 23-131 |
| set ip dns cache | 23-133 |
| set ip dnsrelay | 23-134 |
| set ip filter | 23-135 |
| set ip host | 23-139 |
| set ip interface | 23-140 |
| set ip local | 23-145 |
| set ip nameserver | 23-147 |
| set ip route | 23-148 |
| set ip route preference | 23-150 |
| set ip route template | 23-152 |
| set ip secondarynameserver | 23-153 |
| set ping | 23-154 |
| set trace | 23-157 |
| show ip | 23-159 |
| show ip advertise | 23-163 |
| show ip arp | 23-165 |
| show ip cache | 23-166 |
| show ip counter | 23-167 |
| show ip debug | 23-176 |
| show ip dns | 23-177 |
| show ip dns cache | 23-179 |

| | |
|--------------------------------|--------|
| show ip filter | 23-180 |
| show ip helper | 23-182 |
| show ip host | 23-184 |
| show ip icmpreply | 23-185 |
| show ip interface | 23-186 |
| show ip pool | 23-190 |
| show ip route | 23-192 |
| show ip route multicast | 23-196 |
| show ip route preference | 23-197 |
| show ip route template | 23-198 |
| show ip sa | 23-200 |
| show ip udp | 23-201 |
| show ping | 23-203 |
| show tcp | 23-205 |
| show trace | 23-210 |
| stop ping | 23-211 |
| stop trace | 23-212 |
| trace | 23-213 |

CHAPTER 24 **Dynamic Host Configuration Protocol (DHCP)**

| | |
|-------------------------------------|-------|
| Introduction | 24-2 |
| Configuring the DHCP Server | 24-3 |
| BOOTP Relay Agent | 24-4 |
| DHCP Option 82 Relay | 24-6 |
| Configuring the DHCP Client | 24-6 |
| DHC Files | 24-6 |
| Configuration Example | 24-7 |
| Troubleshooting | 24-8 |
| Command Reference | 24-9 |
| add bootp relay | 24-10 |
| add dhcp option | 24-11 |
| add dhcp policy | 24-13 |
| add dhcp range | 24-19 |
| create dhcp policy | 24-20 |
| create dhcp range | 24-21 |
| delete bootp relay | 24-22 |
| delete dhcp option | 24-23 |
| delete dhcp policy | 24-24 |
| delete dhcp range | 24-28 |
| destroy dhcp policy | 24-29 |
| destroy dhcp range | 24-29 |
| disable bootp relay | 24-30 |
| disable bootp relay option82 | 24-30 |
| disable dhcp | 24-31 |
| disable dhcp debug | 24-32 |
| enable bootp relay | 24-32 |
| enable bootp relay option82 | 24-33 |
| enable dhcp | 24-33 |
| enable dhcp debug | 24-34 |
| purge bootp relay | 24-34 |
| set bootp relay maxhops | 24-35 |
| set bootp relay option82 | 24-36 |
| set bootp relay option82 port | 24-37 |
| set dhcp | 24-38 |
| set dhcp option | 24-39 |
| set dhcp policy | 24-41 |
| set dhcp range | 24-47 |
| show bootp relay | 24-48 |

| | |
|-----------------------------|-------|
| show bootp relay port | 24-50 |
| show dhcp | 24-51 |
| show dhcp client | 24-53 |
| show dhcp policy | 24-55 |
| show dhcp range | 24-57 |

CHAPTER 25 DHCP Snooping

| | |
|--|-------|
| Introduction | 25-2 |
| The Binding Database | 25-2 |
| DHCP Filtering | 25-4 |
| DHCP Option 82 | 25-4 |
| DHCP Snooping ARP Security | 25-5 |
| Configuration Examples | 25-5 |
| Command Reference | 25-6 |
| add dhcpsnooping binding | 25-6 |
| delete dhcpsnooping binding | 25-7 |
| disable dhcpsnooping | 25-7 |
| disable dhcpsnooping arpsecurity | 25-8 |
| disable dhcpsnooping debug | 25-8 |
| disable dhcpsnooping option82 | 25-9 |
| disable dhcpsnooping strictunicast | 25-9 |
| enable dhcpsnooping | 25-10 |
| enable dhcpsnooping arpsecurity | 25-10 |
| enable dhcpsnooping debug | 25-11 |
| enable dhcpsnooping option82 | 25-12 |
| enable dhcpsnooping strictunicast | 25-12 |
| set dhcpsnooping checkinterval | 25-13 |
| set dhcpsnooping port | 25-14 |
| show dhcpsnooping | 25-16 |
| show dhcpsnooping counter | 25-17 |
| show dhcpsnooping database | 25-18 |
| show dhcpsnooping filter | 25-20 |
| show dhcpsnooping port | 25-21 |

CHAPTER 26 MAC-Forced Forwarding

| | |
|---|-------|
| Introduction | 26-2 |
| Overview | 26-2 |
| Configuring an Ethernet Access Node | 26-3 |
| Monitoring and Troubleshooting | 26-6 |
| Debugging | 26-6 |
| Logging | 26-7 |
| Configuration Examples | 26-7 |
| Command Reference | 26-8 |
| add macff server | 26-8 |
| delete macff server | 26-9 |
| disable macff interface | 26-10 |
| disable macff interface debug | 26-11 |
| enable macff interface | 26-12 |
| enable macff interface debug | 26-13 |
| reset macff counter | 26-14 |
| set macff server | 26-15 |
| show macff | 26-16 |
| show macff database | 26-19 |
| show macff interface | 26-21 |
| show macff interface counter | 26-23 |

CHAPTER 27 IP Multicasting

| | |
|--|-------|
| Introduction | 27-4 |
| References | 27-4 |
| IP Multicast Routing | 27-5 |
| Interoperability between Multicast Routing Protocols | 27-7 |
| Distance Vector Multicast Routing Protocol (DVMRP) | 27-7 |
| Configuring DVMRP | 27-8 |
| Protocol Independent Multicast (PIM) | 27-9 |
| PIM Dense Mode | 27-10 |
| PIM Sparse Mode | 27-12 |
| Internet Group Management Protocol (IGMP) | 27-20 |
| Configuring IGMP | 27-20 |
| Static IGMP | 27-21 |
| IGMP Proxy | 27-23 |
| IGMP Snooping | 27-25 |
| IGMP Filtering | 27-29 |
| IGMP Throttling | 27-31 |
| Multicast Switching | 27-32 |
| Multicast Switching Emulation | 27-32 |
| Multicast VLAN Registration (MVR) | 27-33 |
| Dynamic MVR | 27-33 |
| Compatible MVR | 27-33 |
| Immediate Leave | 27-33 |
| Configuring MVR | 27-34 |
| Configuration Examples | 27-35 |
| Static IGMP | 27-35 |
| Multicasting using DVMRP | 27-35 |
| Protocol Independent Multicast (PIM) | 27-38 |
| Command Reference | 27-47 |
| add dvmrp interface | 27-48 |
| add igmp filter | 27-49 |
| add igmpsnooping routeraddress | 27-50 |
| add igmpsnooping vlan | 27-51 |
| add ip igmp destination | 27-52 |
| add ip mvr | 27-53 |
| add pim bsrcandidate | 27-54 |
| add pim interface | 27-55 |
| add pim rpcandidate | 27-57 |
| create igmp filter | 27-59 |
| create ip igmp destination | 27-60 |
| create ip mvr | 27-61 |
| delete dvmrp interface | 27-62 |
| delete igmp filter | 27-63 |
| delete igmpsnooping routeraddress | 27-63 |
| delete igmpsnooping vlan | 27-64 |
| delete ip igmp destination | 27-65 |
| delete ip mvr | 27-66 |
| delete pim bsrcandidate | 27-66 |
| delete pim interface | 27-67 |
| delete pim rpcandidate | 27-68 |
| destroy igmp filter | 27-69 |
| destroy ip igmp destination | 27-69 |
| destroy ip mvr | 27-70 |
| disable dvmrp | 27-70 |
| disable dvmrp debug | 27-71 |
| disable igmpsnooping | 27-72 |
| disable ip igmp | 27-72 |
| disable ip igmp allgroup | 27-73 |
| disable ip igmp debug | 27-73 |

| | |
|---------------------------------------|--------|
| disable ip igmp interface | 27-74 |
| disable ip multicastsitching | 27-74 |
| disable ip mvr | 27-75 |
| disable ip mvr debug | 27-75 |
| disable pim | 27-75 |
| disable pim bsmsecuritycheck | 27-76 |
| disable pim debug | 27-76 |
| enable dvmrp | 27-77 |
| enable dvmrp debug | 27-78 |
| enable igmpsnooping | 27-79 |
| enable ip igmp | 27-79 |
| enable ip igmp allgroup | 27-80 |
| enable ip igmp debug | 27-80 |
| enable ip igmp interface | 27-81 |
| enable ip multicastsitching | 27-81 |
| enable ip mvr | 27-82 |
| enable ip mvr debug | 27-82 |
| enable pim | 27-83 |
| enable pim bsmsecuritycheck | 27-83 |
| enable pim debug | 27-84 |
| purge dvmrp | 27-84 |
| purge pim | 27-85 |
| reset dvmrp interface | 27-85 |
| reset pim interface | 27-86 |
| set dvmrp interface | 27-87 |
| set igmp filter | 27-88 |
| set igmpsnooping vlan | 27-89 |
| set igmpsnooping routermode | 27-90 |
| set ip igmp | 27-91 |
| set ip igmp interface | 27-92 |
| set ip mvr | 27-93 |
| set pim | 27-94 |
| set pim log | 27-95 |
| set pim bsrcandidate | 27-96 |
| set pim interface | 27-97 |
| set pim rpcandidate | 27-99 |
| show dvmrp | 27-100 |
| show dvmrp counters | 27-101 |
| show dvmrp debug | 27-102 |
| show dvmrp forwarding | 27-103 |
| show dvmrp interface | 27-104 |
| show dvmrp neighbour | 27-105 |
| show dvmrp route | 27-106 |
| show igmp filter | 27-107 |
| show igmpsnooping | 27-109 |
| show igmpsnooping counter | 27-111 |
| show igmpsnooping routeraddress | 27-113 |
| show ip igmp | 27-114 |
| show ip igmp counter | 27-118 |
| show ip igmp debug | 27-121 |
| show ip mvr | 27-122 |
| show ip mvr counter | 27-123 |
| show pim | 27-124 |
| show pim bsrcandidate | 27-125 |
| show pim config | 27-126 |
| show pim counters | 27-127 |
| show pim debug | 27-131 |
| show pim interface | 27-132 |
| show pim neighbour | 27-134 |

| | |
|-----------------------------|--------|
| show pim route | 27-135 |
| show pim rpcandidate | 27-141 |
| show pim rpset | 27-142 |
| show pim staterefresh | 27-144 |
| show pim timer | 27-145 |

CHAPTER 28 **Routing Information Protocol (RIP)**

| | |
|--------------------------------------|-------|
| Introduction | 28-2 |
| Configuring RIP | 28-3 |
| Redistributing Routes into RIP | 28-4 |
| Statically-Configured Routes | 28-4 |
| BGP Routes | 28-4 |
| Configuration Example | 28-5 |
| Command Reference | 28-7 |
| add ip rip interface | 28-7 |
| add ip rip redistribute | 28-10 |
| add ip trusted | 28-11 |
| delete ip rip interface | 28-12 |
| delete ip rip redistribute | 28-13 |
| delete ip trusted | 28-13 |
| set ip rip interface | 28-14 |
| set ip rip redistribute | 28-17 |
| set ip riptimer | 28-18 |
| show ip rip | 28-19 |
| show ip rip counter | 28-21 |
| show ip rip redistribute | 28-23 |
| show ip riptimer | 28-24 |
| show ip trusted | 28-25 |

CHAPTER 29 **Open Shortest Path First (OSPF)**

| | |
|---|-------|
| Introduction | 29-3 |
| OSPF Features | 29-3 |
| Adjacency and Designated Routers | 29-5 |
| Link State Advertisements | 29-5 |
| OSPF Packet Types | 29-6 |
| OSPF States | 29-7 |
| Automatic Cost Calculation | 29-8 |
| Routing with OSPF | 29-9 |
| Filtering OSPF Routes | 29-9 |
| Addressless Interfaces | 29-10 |
| Network Types | 29-10 |
| Passive Interfaces | 29-12 |
| Authenticating OSPF | 29-13 |
| Password Authentication | 29-13 |
| Cryptographic Authentication | 29-13 |
| Exchanging Information Between OSPF and RIP | 29-14 |
| Importing BGP routes into OSPF | 29-15 |
| Redistributing External Routes | 29-15 |
| Summarising Routes for Redistribution | 29-17 |
| OSPF On-Demand Circuits | 29-18 |
| Configuration Examples | 29-20 |
| Basic OSPF Network | 29-20 |
| OSPF Network with Addressless PPP Links | 29-22 |
| OSPF Network with Virtual Links | 29-23 |
| Command Reference | 29-27 |
| add ospf area | 29-28 |
| add ospf host | 29-30 |
| add ospf interface | 29-31 |

| | |
|----------------------------------|--------|
| add ospf md5key | 29-35 |
| add ospf neighbour | 29-36 |
| add ospf range | 29-37 |
| add ospf redistribute | 29-38 |
| add ospf stub | 29-40 |
| add ospf summaryaddress | 29-41 |
| delete ospf area | 29-42 |
| delete ospf host | 29-42 |
| delete ospf interface | 29-43 |
| delete ospf md5key | 29-44 |
| delete ospf neighbour | 29-45 |
| delete ospf range | 29-45 |
| delete ospf redistribute | 29-46 |
| delete ospf stub | 29-47 |
| delete ospf summaryaddress | 29-48 |
| disable ospf | 29-48 |
| disable ospf debug | 29-49 |
| disable ospf interface | 29-50 |
| disable ospf log | 29-50 |
| enable ospf | 29-51 |
| enable ospf debug | 29-51 |
| enable ospf interface | 29-53 |
| enable ospf log | 29-54 |
| purge ospf | 29-55 |
| reset ospf | 29-55 |
| reset ospf counter | 29-56 |
| reset ospf interface | 29-57 |
| reset ospf spf | 29-58 |
| set ospf | 29-59 |
| set ospf area | 29-63 |
| set ospf host | 29-65 |
| set ospf interface | 29-66 |
| set ospf neighbour | 29-70 |
| set ospf range | 29-71 |
| set ospf redistribute | 29-72 |
| set ospf stub | 29-74 |
| set ospf summaryaddress | 29-75 |
| show ospf | 29-76 |
| show ospf area | 29-79 |
| show ospf debug | 29-82 |
| show ospf host | 29-83 |
| show ospf interface | 29-85 |
| show ospf lsa | 29-90 |
| show ospf md5key | 29-95 |
| show ospf neighbour | 29-96 |
| show ospf range | 29-98 |
| show ospf redistribute | 29-100 |
| show ospf route | 29-101 |
| show ospf stub | 29-103 |
| show ospf summaryaddress | 29-105 |

CHAPTER 30 **Border Gateway Protocol version 4 (BGP-4)**

| | |
|---|------|
| Introduction | 30-3 |
| Overview of BGP-4 | 30-3 |
| BGP Operation | 30-5 |
| BGP Attributes | 30-6 |
| BGP Route Selection | 30-8 |
| Classless Inter-domain Routing (CIDR) and Aggregation | 30-9 |

| | |
|--|-------|
| BGP Multi-Homing | 30-11 |
| BGP Route Filtering | 30-13 |
| AS Confederations | 30-13 |
| Triggers | 30-14 |
| Redistributing BGP Routes | 30-15 |
| Configuring BGP Peers | 30-16 |
| How to Create a Basic BGP AS | 30-16 |
| How to Create BGP Peers Using Peer Templates | 30-20 |
| How to Modify BGP Peers (Without Templates) | 30-21 |
| How to Use a Template to Modify BGP Peers | 30-22 |
| How to Modify BGP Peers that Use a Template | 30-23 |
| How to Delete BGP Peers | 30-23 |
| Optimising BGP | 30-24 |
| How to Minimise the Impact of Unstable EBGp Routes | 30-24 |
| How to Withdraw Routes As Soon As they Fail | 30-29 |
| How to Advertise as Few Routes as Possible | 30-30 |
| How to Improve IBGP Scalability | 30-33 |
| How to Handle Spikes in Memory Use | 30-38 |
| How to Stop BGP from Overloading System Memory | 30-39 |
| How to Avoid Leaking Private AS Numbers into Global BGP Tables | 30-40 |
| How to Set the IP Address that Identifies the Switch | 30-41 |
| Configuration Examples | 30-42 |
| Basic BGP Configuration | 30-42 |
| Advanced BGP Configuration | 30-44 |
| Command Reference | 30-47 |
| add bgp aggregate | 30-48 |
| add bgp confederationpeer | 30-50 |
| add bgp import | 30-51 |
| add bgp network | 30-52 |
| add bgp peer | 30-53 |
| add bgp peertemplate | 30-61 |
| create bgp damping parameterset | 30-66 |
| delete bgp aggregate | 30-68 |
| delete bgp confederationpeer | 30-69 |
| delete bgp import | 30-69 |
| delete bgp network | 30-70 |
| delete bgp peer | 30-70 |
| delete bgp peertemplate | 30-71 |
| destroy bgp damping parameterset | 30-71 |
| disable bgp autosoftupdate | 30-72 |
| disable bgp autosummary | 30-72 |
| disable bgp backoff | 30-73 |
| disable bgp damping | 30-74 |
| disable bgp debug | 30-75 |
| disable bgp defaultoriginate | 30-76 |
| disable bgp peer | 30-76 |
| enable bgp autosoftupdate | 30-77 |
| enable bgp autosummary | 30-77 |
| enable bgp backoff | 30-78 |
| enable bgp damping | 30-79 |
| enable bgp debug | 30-80 |
| enable bgp defaultoriginate | 30-81 |
| enable bgp peer | 30-82 |
| purge bgp damping | 30-82 |
| reset bgp damping | 30-83 |
| reset bgp peer | 30-83 |
| reset bgp peer soft | 30-84 |
| set bgp | 30-85 |
| set bgp aggregate | 30-87 |

| | |
|------------------------------------|--------|
| set bgp backoff | 30-88 |
| set bgp damping parameterset | 30-89 |
| set bgp import | 30-91 |
| set bgp memlimit | 30-92 |
| set bgp peer | 30-93 |
| set bgp peertemplate | 30-101 |
| set ip autonomous | 30-111 |
| show bgp | 30-112 |
| show bgp aggregate | 30-114 |
| show bgp confederation | 30-115 |
| show bgp backoff | 30-116 |
| show bgp counters | 30-118 |
| show bgp damping | 30-122 |
| show bgp damping routes | 30-124 |
| show bgp import | 30-125 |
| show bgp memlimit | 30-126 |
| show bgp memlimit scan | 30-127 |
| show bgp network | 30-130 |
| show bgp peer | 30-131 |
| show bgp peertemplate | 30-136 |
| show bgp route | 30-138 |

CHAPTER 31 Filtering IP Routes

| | |
|--|-------|
| Introduction | 31-3 |
| Types of Filters | 31-4 |
| About Prefix Lists | 31-4 |
| About AS Path Lists | 31-5 |
| About Route Maps | 31-5 |
| About IP Route Filters | 31-7 |
| About IP Filters | 31-8 |
| Creating Filters | 31-9 |
| Creating Prefix Lists | 31-9 |
| Creating AS Path Lists for BGP Routes | 31-9 |
| Creating Route Maps for BGP Routes | 31-10 |
| Creating Route Maps for OSPF Routes | 31-16 |
| Creating Route Maps for Redistributing BGP Routes into RIP | 31-19 |
| Creating IP Route Filters | 31-21 |
| Creating IP Filters | 31-21 |
| Applying Filters | 31-22 |
| Applying Filters When Writing to the RIB | 31-22 |
| Applying Filters When Redistributing from the RIB | 31-24 |
| Applying Filters Before Advertising Routes | 31-27 |
| Overview of Filters for each Route Source | 31-29 |
| Border Gateway Protocol (BGP-4) | 31-29 |
| Open Shortest Path First (OSPF) | 31-30 |
| Routing Information Protocol (RIP) | 31-32 |
| Interface Routes | 31-33 |
| Statically-Configured Routes | 31-33 |
| Configuration Examples | 31-34 |
| Filtering When Writing BGP Routes to the RIB: Using an AS Path Filter .. | 31-34 |
| Filtering When Writing BGP Routes to the RIB: Using a Route Map | 31-35 |
| Filtering Before Advertising Routes with BGP: Using an AS Path Filter .. | 31-36 |
| Filtering Before Advertising Routes with BGP: Using a Route Map | 31-37 |
| Filtering Inbound and Outbound BGP Routes: Using Communities | 31-38 |
| Filtering When Importing Routes from BGP to OSPF | 31-39 |
| Command Reference | 31-40 |
| add ip aspathlist | 31-40 |
| add ip communitylist | 31-42 |

| | |
|-------------------------------|-------|
| add ip prefixlist | 31-44 |
| add ip route filter | 31-46 |
| add ip routemap | 31-49 |
| delete ip aspathlist | 31-56 |
| delete ip communitylist | 31-57 |
| delete ip prefixlist | 31-57 |
| delete ip route filter | 31-58 |
| delete ip routemap | 31-59 |
| set ip prefixlist | 31-61 |
| set ip route filter | 31-63 |
| set ip routemap | 31-66 |
| show ip aspathlist | 31-73 |
| show ip communitylist | 31-74 |
| show ip prefixlist | 31-75 |
| show ip route filter | 31-76 |
| show ip routemap | 31-77 |

CHAPTER 32 **Voice over IP (VoIP)**

| | |
|---|-------|
| Introduction | 32-3 |
| VoIP Overview | 32-3 |
| VoIP Benefits and Business Applications | 32-5 |
| VoIP FXS Interface Components | 32-6 |
| Ring Generation | 32-6 |
| Tone Generation | 32-6 |
| Port Gain | 32-6 |
| Port Impedance | 32-6 |
| Voice Activation and Silence Detection | 32-7 |
| Digit Collection | 32-7 |
| VoIP Protocols | 32-7 |
| H.323 | 32-7 |
| Session Initiation Protocol (SIP) | 32-12 |
| VoIP Engines | 32-17 |
| Loading VoIP Firmware onto a PIC | 32-18 |
| Configuration Examples | 32-20 |
| Using H.323 and no gatekeeper | 32-20 |
| Using H.323 and a gatekeeper | 32-22 |
| Using a SIP server | 32-23 |
| Command Reference | 32-25 |
| create h323 | 32-25 |
| create h323 entry | 32-27 |
| create sip | 32-28 |
| destroy h323 | 32-30 |
| destroy h323 entry | 32-31 |
| destroy sip | 32-32 |
| disable voip | 32-32 |
| disable voip debug | 32-33 |
| enable voip | 32-33 |
| enable voip debug | 32-34 |
| reset voip | 32-35 |
| set h323 | 32-36 |
| set h323 entry | 32-37 |
| set h323 gateway | 32-38 |
| set sip | 32-39 |
| set sip gateway | 32-41 |
| set voip | 32-42 |
| set voip ap | 32-43 |
| set voip bootcode | 32-45 |
| set voip file | 32-45 |

| | |
|---------------------------------|-------|
| set voip phone | 32-46 |
| set voip public interface | 32-53 |
| show h323 | 32-54 |
| show h323 entry | 32-55 |
| show h323 gateway | 32-56 |
| show sip | 32-57 |
| show sip gateway | 32-58 |
| show voip | 32-59 |
| show voip ap | 32-61 |
| show voip counter engine | 32-63 |
| show voip instance | 32-65 |
| show voip load | 32-66 |
| show voip phone | 32-67 |

CHAPTER 33 **Generic Routing Encapsulation (GRE)**

| | |
|---------------------------------|-------|
| Introduction | 33-2 |
| GRE on the Switch | 33-3 |
| Configuration Examples | 33-5 |
| Basic Configuration | 33-5 |
| Multi-Point Configuration | 33-6 |
| Command Reference | 33-11 |
| add gre | 33-11 |
| add gre tunnel | 33-13 |
| delete gre | 33-14 |
| delete gre tunnel | 33-14 |
| disable gre | 33-15 |
| disable gre debug | 33-15 |
| enable gre | 33-15 |
| enable gre debug | 33-16 |
| purge gre | 33-16 |
| reset gre | 33-17 |
| set gre | 33-18 |
| set gre tunnel | 33-20 |
| show gre | 33-21 |
| show gre general | 33-22 |
| show gre tunnel | 33-23 |

CHAPTER 34 **Internet Protocol version 6 (IPv6)**

| | |
|--|-------|
| Introduction | 34-3 |
| Overview of IPv6 | 34-3 |
| The 6bone | 34-4 |
| IPv6 Addresses and Prefixes | 34-4 |
| IPv6 Headers | 34-5 |
| The Internet Control Message Protocol (ICMPv6) | 34-8 |
| IPv6 Routing | 34-11 |
| IPv6 Filtering | 34-12 |
| Integration of IPv4 and IPv6 | 34-12 |
| IPv6 on the Switch | 34-12 |
| Enabling IPv6 | 34-13 |
| IPv6 Interfaces and Addresses | 34-13 |
| Extension Header Processing | 34-15 |
| Routing Table Processing and RIPv6 | 34-15 |
| Neighbour Discovery | 34-16 |
| IPv6 Filtering | 34-17 |
| IPv6 Fragmentation | 34-18 |
| Telnet v6 | 34-18 |
| Ping | 34-19 |
| Secure Shell | 34-20 |

| | |
|--|-------|
| Tunnelling IPv6 Packets over IPv4 | 34-20 |
| Configuration Examples | 34-23 |
| Basic Routing | 34-23 |
| Dynamic Routing with RIPv6 | 34-25 |
| Dynamic (6-to-4) Tunnelling over an IPv4 Network | 34-29 |
| Static Tunnelling over an IPv4 Network | 34-31 |
| IPv6 Filters | 34-33 |
| Command Reference | 34-35 |
| add ipv6 6to4 | 34-35 |
| add ipv6 filter | 34-36 |
| add ipv6 host | 34-41 |
| add ipv6 interface | 34-42 |
| add ipv6 nd | 34-45 |
| add ipv6 prefix | 34-46 |
| add ipv6 rip | 34-47 |
| add ipv6 route | 34-48 |
| add ipv6 tunnel | 34-49 |
| create ipv6 interface | 34-50 |
| delete ipv6 6to4 | 34-51 |
| delete ipv6 filter | 34-51 |
| delete ipv6 host | 34-52 |
| delete ipv6 interface | 34-52 |
| delete ipv6 nd | 34-54 |
| delete ipv6 prefix | 34-55 |
| delete ipv6 rip | 34-56 |
| delete ipv6 route | 34-57 |
| delete ipv6 tunnel | 34-58 |
| destroy ipv6 interface | 34-59 |
| disable ipv6 | 34-59 |
| disable ipv6 advertise | 34-60 |
| disable ipv6 debug | 34-60 |
| disable ipv6 mtudiscovery | 34-61 |
| disable ipv6 rip | 34-61 |
| enable ipv6 | 34-61 |
| enable ipv6 advertise | 34-62 |
| enable ipv6 debug | 34-62 |
| enable ipv6 mtudiscovery | 34-63 |
| enable ipv6 rip | 34-63 |
| reset ipv6 ndcache | 34-64 |
| set ipv6 filter | 34-65 |
| set ipv6 interface | 34-68 |
| set ipv6 mtu | 34-69 |
| set ipv6 nd | 34-70 |
| set ipv6 prefix | 34-72 |
| set ipv6 route preference | 34-73 |
| show ipv6 | 34-74 |
| show ipv6 counter | 34-76 |
| show ipv6 filter | 34-80 |
| show ipv6 host | 34-82 |
| show ipv6 interface | 34-83 |
| show ipv6 multicast | 34-85 |
| show ipv6 ndcache | 34-86 |
| show ipv6 ndconfig | 34-87 |
| show ipv6 rip | 34-89 |
| show ipv6 route | 34-91 |
| show ipv6 route multicast | 34-93 |
| show ipv6 route preference | 34-94 |
| show ipv6 tunnel | 34-95 |
| show ipv6 udp | 34-96 |

CHAPTER 35 Dynamic Host Configuration Protocol for IPv6 (DHCP6)

| | |
|-------------------------------------|-------|
| Introduction | 35-2 |
| DHCP for IPv6 | 35-2 |
| DHCP6 Messages | 35-2 |
| DHCP Unique Identifier (DUID) | 35-3 |
| Identity Associations | 35-3 |
| Configuring DHCP6 Servers | 35-4 |
| Configuring DHCP6 Clients | 35-5 |
| DHCP6 Message Authentication | 35-6 |
| Rapid Commit | 35-6 |
| Configuration Examples | 35-7 |
| Address Assignment | 35-7 |
| Prefix Delegation | 35-8 |
| Command Reference | 35-10 |
| add dhcp6 interface | 35-10 |
| add dhcp6 key | 35-11 |
| add dhcp6 policy | 35-12 |
| add dhcp6 range | 35-14 |
| create dhcp6 policy | 35-15 |
| create dhcp6 range | 35-16 |
| delete dhcp6 interface | 35-17 |
| delete dhcp6 key | 35-17 |
| delete dhcp6 policy | 35-18 |
| delete dhcp6 range | 35-19 |
| destroy dhcp6 policy | 35-19 |
| destroy dhcp6 range | 35-20 |
| disable dhcp6 | 35-20 |
| disable dhcp6 debug | 35-20 |
| disable dhcp6 rapidcommit | 35-21 |
| enable dhcp6 | 35-21 |
| enable dhcp6 debug | 35-21 |
| enable dhcp6 rapidcommit | 35-22 |
| set dhcp6 key | 35-22 |
| set dhcp6 policy | 35-23 |
| show dhcp6 | 35-25 |
| show dhcp6 client | 35-27 |
| show dhcp6 counter | 35-29 |
| show dhcp6 interface | 35-32 |
| show dhcp6 key | 35-34 |
| show dhcp6 policy | 35-35 |
| show dhcp6 range | 35-36 |
| show dhcp6 server | 35-38 |

CHAPTER 36 IPv6 Multicasting

| | |
|--|-------|
| Introduction | 36-3 |
| Overview of IPv6 Multicast Routing | 36-3 |
| Interoperability between Multicast Routing Protocols | 36-4 |
| Multicast Listener Discovery (MLD) | 36-5 |
| Queries and Reports | 36-5 |
| Configuring MLD | 36-7 |
| MLD Snooping | 36-7 |
| Protocol Independent Multicast Sparse Mode (PIM-SM) | 36-9 |
| Configuring PIM Sparse Mode | 36-9 |
| Protocol Independent Multicast Dense Mode (PIM-DM) | 36-13 |
| Configuring PIM Dense Mode | 36-13 |
| Configuration Examples | 36-15 |

| | |
|----------------------------------|-------|
| Command Reference | 36-26 |
| add pim6 bsrcandidate | 36-26 |
| add pim6 interface | 36-27 |
| add pim6 rpcandidate | 36-29 |
| delete pim6 bsrcandidate | 36-30 |
| delete pim6 interface | 36-30 |
| delete pim6 rpcandidate | 36-31 |
| disable ipv6 mld | 36-31 |
| disable ipv6 mld debug | 36-32 |
| disable ipv6 mld interface | 36-32 |
| disable mldsnooping | 36-33 |
| disable mldsnooping debug | 36-33 |
| disable pim6 | 36-33 |
| disable pim6 debug | 36-34 |
| enable ipv6 mld | 36-34 |
| enable ipv6 mld debug | 36-34 |
| enable ipv6 mld interface | 36-35 |
| enable mldsnooping | 36-36 |
| enable mldsnooping debug | 36-36 |
| enable pim6 | 36-36 |
| enable pim6 debug | 36-37 |
| purge pim6 | 36-38 |
| reset pim6 interface | 36-38 |
| set ipv6 mld | 36-39 |
| set ipv6 mld interface | 36-40 |
| set pim6 | 36-41 |
| set pim6 bsrcandidate | 36-42 |
| set pim6 interface | 36-43 |
| set pim6 rpcandidate | 36-44 |
| show ipv6 mld | 36-45 |
| show ipv6 mld config | 36-47 |
| show ipv6 mld counters | 36-48 |
| show ipv6 mld debug | 36-49 |
| show mldsnooping | 36-50 |
| show mldsnooping counter | 36-51 |
| show pim6 | 36-52 |
| show pim6 bsrcandidate | 36-53 |
| show pim6 config | 36-54 |
| show pim6 counters | 36-55 |
| show pim6 debug | 36-58 |
| show pim6 interface | 36-59 |
| show pim6 neighbour | 36-61 |
| show pim6 route | 36-62 |
| show pim6 rpcandidate | 36-67 |
| show pim6 rpset | 36-68 |
| show pim6 staterefresh | 36-70 |
| show pim6 timer | 36-71 |

CHAPTER 37 **AppleTalk**

| | |
|--|------|
| Introduction | 37-3 |
| AppleTalk Protocol Architecture | 37-3 |
| AppleTalk Nodes and Networks | 37-4 |
| LocalTalk | 37-4 |
| EtherTalk and TokenTalk | 37-5 |
| AppleTalk Address Resolution Protocol (AARP) | 37-6 |
| Address Translation | 37-6 |
| Dynamic Assignment of Protocol Addresses | 37-6 |

| | |
|---|-------|
| Datagram Delivery Protocol | 37-7 |
| Routing Table Maintenance Protocol (RTMP) | 37-8 |
| Name Binding Protocol (NBP) | 37-9 |
| Zone Information Protocol (ZIP) | 37-10 |
| AppleTalk on the Switch | 37-10 |
| AppleTalk Filtering | 37-12 |
| DDP packet filtering | 37-12 |
| RTMP or Routing Update filtering | 37-13 |
| Zone Filtering | 37-14 |
| AppleTalk Dial-On-Demand | 37-15 |
| Extended Ping for AppleTalk | 37-16 |
| Configuration Example | 37-16 |
| Command Reference | 37-21 |
| add apple circuit | 37-21 |
| add apple dlci | 37-22 |
| add apple packetfilter | 37-23 |
| add apple port | 37-25 |
| add apple route | 37-27 |
| add apple routefilter | 37-28 |
| add apple zone | 37-29 |
| add apple zonefilter | 37-30 |
| delete apple circuit | 37-31 |
| delete apple dlci | 37-32 |
| delete apple packetfilter | 37-33 |
| delete apple port | 37-33 |
| delete apple route | 37-34 |
| delete apple routefilter | 37-34 |
| delete apple zone | 37-35 |
| delete apple zonefilter | 37-36 |
| disable apple | 37-36 |
| disable apple debug | 37-37 |
| enable apple | 37-37 |
| enable apple debug | 37-37 |
| purge apple | 37-38 |
| reset apple | 37-38 |
| set apple packetfilter | 37-39 |
| set apple port | 37-41 |
| set apple routeconvert | 37-43 |
| set apple routefilter | 37-44 |
| set apple zone | 37-45 |
| set apple zonefilter | 37-46 |
| show apple | 37-47 |
| show apple aarp | 37-48 |
| show apple circuit | 37-49 |
| show apple counter | 37-50 |
| show apple dlci | 37-56 |
| show apple packetfilter | 37-57 |
| show apple port | 37-59 |
| show apple route | 37-61 |
| show apple routefilter | 37-62 |
| show apple zone | 37-63 |
| show apple zonefilter | 37-64 |

CHAPTER 38 **Novell IPX**

| | |
|--------------------------------------|------|
| Introduction | 38-3 |
| The IPX Protocol | 38-3 |
| Addressing in a Novell Network | 38-4 |
| Interfaces and Circuits | 38-5 |

| | |
|--|-------|
| Routing | 38-5 |
| Service Advertisement | 38-7 |
| Traffic Filters | 38-8 |
| RIP and SAP Filters | 38-8 |
| Wildcard Expressions | 38-9 |
| RIP Filters | 38-10 |
| SAP Filters | 38-10 |
| Global Versus Circuit-Specific Filters | 38-11 |
| Dial-on-Demand IPX | 38-11 |
| SPX Spoofing with Dial-on-Demand IPX | 38-12 |
| Troubleshooting SPX Spoofing | 38-13 |
| Extended PING for IPX | 38-15 |
| Counters and the MIB | 38-16 |
| Configuration Examples | 38-17 |
| Basic IPX Setup | 38-17 |
| IPX Dial-On-Demand | 38-22 |
| Command Reference | 38-30 |
| add ipx circuit | 38-31 |
| add ipx exclusion | 38-35 |
| add ipx inclusion | 38-36 |
| add ipx rip | 38-37 |
| add ipx route | 38-38 |
| add ipx sap | 38-39 |
| add ipx service | 38-40 |
| delete ipx circuit | 38-42 |
| delete ipx exclusion | 38-43 |
| delete ipx inclusion | 38-44 |
| delete ipx rip | 38-45 |
| delete ipx route | 38-45 |
| delete ipx sap | 38-46 |
| delete ipx service | 38-47 |
| disable ipx | 38-47 |
| disable ipx circuit | 38-48 |
| enable ipx | 38-48 |
| enable ipx circuit | 38-49 |
| purge ipx | 38-49 |
| reset ipx | 38-50 |
| set ipx circuit | 38-51 |
| set ipx grip gsap | 38-54 |
| set ipx rip | 38-55 |
| set ipx sap | 38-56 |
| show ipx | 38-57 |
| show ipx cache | 38-59 |
| show ipx calllog | 38-60 |
| show ipx circuit | 38-63 |
| show ipx counter | 38-65 |
| show ipx exclusion | 38-68 |
| show ipx inclusion | 38-69 |
| show ipx rip | 38-70 |
| show ipx route | 38-71 |
| show ipx sap | 38-72 |
| show ipx service | 38-74 |
| show ipx spxspooof | 38-75 |

CHAPTER 39 Generic Packet Classifier

| | |
|------------------------------------|-------|
| Introduction | 39-2 |
| Configuration of Classifiers | 39-2 |
| Command Reference | 39-3 |
| create classifier | 39-4 |
| destroy classifier | 39-17 |
| set classifier | 39-18 |
| show classifier | 39-28 |

CHAPTER 40 Quality of Service (QoS) on Switch Ports

| | |
|--|-------|
| Introduction | 40-3 |
| Quality of Service (QoS) | 40-3 |
| Configuring QoS | 40-4 |
| Alternative Methods of Configuring QoS Functionality | 40-5 |
| Classifiers | 40-6 |
| Flow Groups | 40-7 |
| Traffic Classes | 40-7 |
| Policies | 40-8 |
| QoS Policy Configuration Rules | 40-8 |
| Packet Processing | 40-8 |
| Bandwidth Allocation | 40-9 |
| Packet Prioritisation | 40-10 |
| Class of Service (CoS) Queue Scheduling | 40-11 |
| Replacing Priorities | 40-12 |
| DiffServ Domains | 40-13 |
| Examples of QoS Applications | 40-14 |
| Voice Applications | 40-14 |
| Video Applications | 40-15 |
| Critical Databases | 40-16 |
| Command Reference | 40-17 |
| add qos flowgroup | 40-17 |
| add qos policy | 40-18 |
| add qos trafficclass | 40-19 |
| create qos flowgroup | 40-20 |
| create qos policy | 40-21 |
| create qos trafficclass | 40-22 |
| delete qos flowgroup | 40-24 |
| delete qos policy | 40-25 |
| delete qos trafficclass | 40-26 |
| destroy qos flowgroup | 40-27 |
| destroy qos policy | 40-28 |
| destroy qos trafficclass | 40-29 |
| disable qos debug | 40-29 |
| enable qos debug | 40-30 |
| purge qos | 40-30 |
| set qos flowgroup | 40-31 |
| set qos hwpriority | 40-32 |
| set qos hwqueue | 40-33 |
| set qos policy | 40-34 |
| set qos port | 40-35 |
| set qos trafficclass | 40-36 |
| show qos flowgroup | 40-38 |
| show qos hwpriority | 40-39 |
| show qos hwqueue | 40-40 |
| show qos policy | 40-41 |
| show qos trafficclass | 40-43 |

CHAPTER 41 **Software Quality of Service (QoS)**

| | |
|--|-------|
| Introducing QoS | 41-4 |
| Stages | 41-4 |
| Interfaces for Software QoS | 41-5 |
| When to Use Software QoS | 41-5 |
| Separate Traffic—Separate Needs | 41-6 |
| Applying QoS in a Network | 41-6 |
| Local Level | 41-6 |
| Domain Level: DiffServ, TOS and 802.1p Priority | 41-6 |
| The Hierarchy | 41-10 |
| Traffic Class Trees | 41-10 |
| Traffic Classes | 41-12 |
| Policies | 41-13 |
| Order of Classifier Matching | 41-13 |
| Dynamic Application Recognition for Voice and Video | 41-14 |
| Processing Points | 41-15 |
| Ingress QoS | 41-16 |
| Egress QoS | 41-17 |
| Tunnel QoS | 41-17 |
| Software QoS Stages | 41-18 |
| Packet Flow | 41-18 |
| Classification: Identifying and Sorting Traffic | 41-20 |
| Bandwidth Class | 41-20 |
| Premarking: Labelling Packets Before Metering | 41-20 |
| Metering: Bandwidth Conformance | 41-21 |
| Packet Queuing | 41-24 |
| RED Curves | 41-24 |
| Dequeuing | 41-26 |
| Queue Scheduling | 41-29 |
| Re-Marking | 41-31 |
| Virtual Bandwidth | 41-31 |
| Configuring a Software QoS Hierarchy | 41-32 |
| The Total Software QoS Solution | 41-32 |
| Default Traffic Class | 41-35 |
| Configuring QoS Stages | 41-36 |
| Premarking | 41-36 |
| Metering | 41-37 |
| RED | 41-39 |
| Re-Marking | 41-41 |
| Queue Scheduling | 41-43 |
| Configuring DAR for Voice and Video Traffic | 41-46 |
| Configuring Software QoS on Specific Interfaces | 41-48 |
| PPP and PPPoE | 41-48 |
| Frame Relay | 41-51 |
| Configuring Software QoS on Tunnels | 41-53 |
| VPN | 41-53 |
| 6 to 4 | 41-54 |
| Generic Router Encapsulation (GRE) | 41-55 |
| Interaction with Other Modules | 41-56 |
| Network Address Translation (NAT) | 41-56 |
| Resource Reservation Protocol (RSVP) | 41-57 |
| Priority Filters | 41-57 |
| Policy Filters | 41-57 |
| Counters | 41-58 |
| Debugging | 41-59 |
| Configuration Examples | 41-62 |
| 1: Guaranteeing VoIP Traffic | 41-63 |
| 2: Guaranteeing VoIP Traffic using DAR | 41-66 |
| 3: Guaranteeing VoIP Traffic While Maintaining File Server Traffic | 41-69 |

| | |
|---|--------|
| 4: Guaranteeing VoIP Traffic over a VPN Tunnel | 41-72 |
| 5: VoIP, Critical Database, and File Server Traffic | 41-77 |
| 6: Multiple Applications over Frame Relay | 41-80 |
| Command Reference | 41-85 |
| add sqos interface dar | 41-85 |
| add sqos policy trafficclass | 41-86 |
| add sqos trafficclass classifier | 41-87 |
| add sqos trafficclass dar | 41-88 |
| add sqos trafficclass subclass | 41-89 |
| create sqos dar | 41-90 |
| create sqos dscpmap | 41-92 |
| create sqos meter | 41-93 |
| create sqos policy | 41-96 |
| create sqos red | 41-99 |
| create sqos trafficclass | 41-101 |
| delete sqos interface dar | 41-106 |
| delete sqos policy trafficclass | 41-107 |
| delete sqos trafficclass classifier | 41-108 |
| delete sqos trafficclass dar | 41-109 |
| delete sqos trafficclass subclass | 41-110 |
| destroy sqos dar | 41-111 |
| destroy sqos dscpmap | 41-111 |
| destroy sqos meter | 41-112 |
| destroy sqos policy | 41-112 |
| destroy sqos red | 41-113 |
| destroy sqos trafficclass | 41-113 |
| disable sqos | 41-114 |
| disable sqos debug | 41-114 |
| enable sqos | 41-115 |
| enable sqos debug | 41-115 |
| purge sqos | 41-116 |
| reset sqos counters | 41-117 |
| set sqos dar | 41-119 |
| set sqos dscpmap | 41-121 |
| set sqos interface | 41-123 |
| set sqos meter | 41-125 |
| set sqos policy | 41-128 |
| set sqos red | 41-131 |
| set sqos trafficclass | 41-133 |
| show sqos | 41-137 |
| show sqos counters | 41-139 |
| show sqos dar | 41-145 |
| show sqos dscpmap | 41-147 |
| show sqos interface | 41-149 |
| show sqos meter | 41-151 |
| show sqos policy | 41-153 |
| show sqos red | 41-157 |
| show sqos trafficclass | 41-160 |

CHAPTER 42 Resource Reservation Protocol (RSVP)

| | |
|--|-------|
| Introduction | 42-2 |
| Resource Reservation Protocol (RSVP) | 42-2 |
| RSVP on the Switch | 42-5 |
| RSVP Proxy Agent | 42-6 |
| Command Reference | 42-9 |
| create rsvp proxy | 42-9 |
| destroy rsvp proxy | 42-12 |
| disable rsvp | 42-12 |

| | |
|-------------------------------|-------|
| disable rsvp debug | 42-13 |
| disable rsvp interface | 42-14 |
| disable rsvp proxy | 42-15 |
| enable rsvp | 42-15 |
| enable rsvp debug | 42-16 |
| enable rsvp interface | 42-17 |
| enable rsvp proxy | 42-18 |
| reset rsvp proxy | 42-19 |
| set rsvp interface | 42-20 |
| set rsvp proxy | 42-21 |
| show rsvp | 42-23 |
| show rsvp counter | 42-25 |
| show rsvp interface | 42-28 |
| show rsvp path | 42-29 |
| show rsvp proxy | 42-30 |
| show rsvp proxy counter | 42-32 |
| show rsvp resv | 42-33 |

CHAPTER 43 User Authentication

| | |
|---|-------|
| Introduction | 43-3 |
| Privilege Levels | 43-3 |
| User Level | 43-3 |
| Manager Level | 43-4 |
| Security Officer Level | 43-5 |
| Remote Security Officer Level | 43-6 |
| Operating Modes | 43-6 |
| User Authentication Facility | 43-8 |
| User Authentication Database | 43-10 |
| Adding Entries to the User Authentication Database | 43-10 |
| Modifying Entries in the User Authentication Database | 43-11 |
| Choosing Passwords | 43-12 |
| Asynchronous Port Security | 43-12 |
| Telnetting from the Switch | 43-13 |
| Counters | 43-14 |
| Semipermanent Manager Port | 43-14 |
| RADIUS | 43-15 |
| TACACS | 43-18 |
| TACACS+ | 43-18 |
| Token Card Authentication | 43-22 |
| Token Card Authentication on the Switch | 43-22 |
| Using Token Card with TACACS+ | 43-23 |
| Using Token Card with RADIUS or TACACS | 43-24 |
| Debug Support for RADIUS, TACACS and TACACS+ | 43-26 |
| S/Key and OTP One-Time Password Systems | 43-26 |
| Initialising the S/Key or OTP System on the Authentication Server | 43-27 |
| Configuring S/Key and OTP on the Switch | 43-28 |
| Command Reference | 43-30 |
| add radius server | 43-30 |
| add tacacs server | 43-31 |
| add tacplus server | 43-32 |
| add user | 43-33 |
| add user rso | 43-36 |
| delete radius server | 43-37 |
| delete tacacs server | 43-38 |
| delete tacplus server | 43-38 |
| delete user | 43-39 |
| delete user rso | 43-40 |
| disable radius debug | 43-41 |

| | |
|------------------------------------|-------|
| disable system security_mode | 43-41 |
| disable tacacs debug | 43-42 |
| disable tacplus | 43-42 |
| disable tacplus debug | 43-42 |
| disable user | 43-43 |
| disable user rso | 43-43 |
| enable | 43-44 |
| enable radius debug | 43-45 |
| enable system security_mode | 43-46 |
| enable tacacs debug | 43-47 |
| enable tacplus | 43-47 |
| enable tacplus debug | 43-48 |
| enable user | 43-48 |
| enable user rso | 43-49 |
| login | 43-50 |
| logout | 43-51 |
| purge user | 43-51 |
| reset user | 43-52 |
| set manager asyn | 43-53 |
| set password | 43-54 |
| set radius | 43-55 |
| set skey | 43-55 |
| set tacplus key | 43-56 |
| set tacplus server | 43-56 |
| set tacplus telnet | 43-57 |
| set user | 43-58 |
| show manager asyn | 43-61 |
| show radius | 43-62 |
| show radius debug | 43-63 |
| show skey | 43-64 |
| show tacacs debug | 43-66 |
| show tacacs server | 43-67 |
| show tacplus | 43-68 |
| show tacplus key | 43-68 |
| show tacplus server | 43-69 |
| show tacplus telnet | 43-70 |
| show tacplus user | 43-71 |
| show user | 43-72 |
| show user rso | 43-77 |

CHAPTER 44 **Compression and Encryption Services**

| | |
|---|-------|
| Introduction | 44-2 |
| Data Compression | 44-2 |
| Data Encryption | 44-5 |
| Symmetrical Encryption | 44-5 |
| Asymmetrical (Public Key) Encryption | 44-6 |
| Network Encryption | 44-7 |
| Authentication | 44-8 |
| Key Exchange Algorithms | 44-9 |
| Hardware Support | 44-9 |
| PCI Accelerator Cards (PACs) | 44-10 |
| Hardware Control and Monitoring | 44-10 |
| ENCO Services | 44-10 |
| Compression | 44-11 |
| Encryption | 44-12 |
| Authentication | 44-12 |
| Diffie-Hellman Key Exchange Algorithm | 44-12 |
| Key Creation and Storage | 44-13 |

| | |
|--|-------|
| Access Control | 44-15 |
| User Modules | 44-16 |
| IP Payload Encryption and Virtual Private Networks | 44-16 |
| Secure Shell | 44-16 |
| PPP | 44-16 |
| Frame Relay | 44-17 |
| X.25 Link Compression | 44-17 |
| Command Reference | 44-18 |
| create enco key | 44-19 |
| destroy enco key | 44-21 |
| disable enco compstatistics | 44-22 |
| disable enco debugging | 44-22 |
| enable enco compstatistics | 44-22 |
| enable enco debugging | 44-23 |
| reset enco counters | 44-24 |
| set enco dhpadding | 44-25 |
| set enco dhpriority | 44-25 |
| set enco key | 44-26 |
| set enco sw | 44-27 |
| show enco | 44-28 |
| show enco channel | 44-31 |
| show enco counters | 44-37 |
| show enco debug | 44-52 |
| show enco key | 44-53 |

CHAPTER 45 **Port Authentication**

| | |
|---|-------|
| Introduction | 45-2 |
| 802.1x Port Based Network Access Control | 45-2 |
| The 802.1x Implementation | 45-2 |
| Port Authentication Control | 45-6 |
| The Authentication Server | 45-8 |
| The Authentication Process | 45-9 |
| 802.1x Guest VLAN | 45-10 |
| MAC-Based Authentication | 45-11 |
| The MAC-Based Authentication Implementation | 45-11 |
| The MAC-Based Authentication Process | 45-12 |
| Dynamic VLAN Assignment | 45-13 |
| Port Authentication on the Switch | 45-15 |
| Enable Port Authentication on the Switch | 45-15 |
| Enable Port Authentication on a Port | 45-15 |
| Reauthenticate Supplicants | 45-17 |
| Setting Global 802.1x Username and Password | 45-18 |
| Debug Port Authentication | 45-18 |
| Multi-Supplicant Configuration | 45-18 |
| Configuration Examples | 45-20 |
| Port as Authenticator | 45-20 |
| Port as Supplicant | 45-21 |
| Command Reference | 45-23 |
| activate portauth port reauthenticate | 45-23 |
| disable portauth | 45-24 |
| disable portauth debug | 45-25 |
| disable portauth port | 45-26 |
| enable portauth | 45-27 |
| enable portauth debug | 45-28 |
| enable portauth port | 45-29 |
| purge portauth port | 45-35 |
| reset portauth port | 45-36 |
| reset portauth port multimib | 45-37 |

| | |
|--|-------|
| set portauth port | 45-38 |
| set portauth port supplicantmac | 45-44 |
| set portauth username | 45-48 |
| show portauth | 45-50 |
| show portauth counter | 45-52 |
| show portauth port | 45-55 |
| show portauth port multisupplicant | 45-63 |
| show portauth timer | 45-68 |

CHAPTER 46 **Secure Shell**

| | |
|----------------------------------|-------|
| Introduction | 46-2 |
| Secure Shell on the Switch | 46-2 |
| Configuring Secure Shell | 46-4 |
| Configuration Examples | 46-7 |
| Command Reference | 46-11 |
| add ssh user | 46-11 |
| delete ssh session | 46-13 |
| delete ssh user | 46-13 |
| disable ssh debug | 46-14 |
| disable ssh server | 46-14 |
| disable ssh user | 46-15 |
| enable ssh debug | 46-15 |
| enable ssh server | 46-16 |
| enable ssh user | 46-17 |
| set ssh client | 46-18 |
| set ssh server | 46-19 |
| set ssh user | 46-21 |
| show ssh | 46-22 |
| show ssh counter | 46-25 |
| show ssh session | 46-33 |
| show ssh user | 46-36 |
| ssh | 46-38 |

CHAPTER 47 **Secure Sockets Layer (SSL)**

| | |
|--|-------|
| Introduction | 47-2 |
| SSL Operations | 47-2 |
| Phases | 47-3 |
| SSL on the Switch | 47-5 |
| SSL and the Graphical User Interface | 47-5 |
| SSL and Load Balancer | 47-6 |
| Configuration Example | 47-6 |
| Command Reference | 47-9 |
| disable ssl debug | 47-10 |
| enable ssl debug | 47-10 |
| set ssl | 47-11 |
| show ssl | 47-12 |
| show ssl counters | 47-14 |
| show ssl sessions | 47-22 |

CHAPTER 48 **Firewall**

| | |
|---|-------|
| Introduction | 48-4 |
| Firewall Technologies | 48-4 |
| Policies | 48-6 |
| Rules | 48-8 |
| Using Limit Rules to Limit Sessions | 48-12 |
| Access Lists | 48-13 |
| List Files | 48-13 |

| | |
|---|-------|
| RADIUS Servers | 48-14 |
| Dynamic Interfaces | 48-16 |
| Dynamic Interface Templates | 48-16 |
| Configuring Dynamic Interfaces | 48-17 |
| Disabling the TCP Setup Proxy | 48-18 |
| Firewall UDP Session Timeouts | 48-18 |
| Multicast Packet Handling | 48-19 |
| Enhanced Packet Fragment Handling | 48-19 |
| Enabling the Secure Shell Server | 48-20 |
| Network Address Translation (NAT) | 48-21 |
| Enhanced NAT | 48-24 |
| Network Address and Port Translation (NAPT) | 48-25 |
| Enhanced Network Address and Port Translation (ENAPT) | 48-26 |
| Standard NAT | 48-28 |
| Other Advanced NAT Types | 48-29 |
| NAT on Ethernet Interfaces | 48-30 |
| FTP Session Handling | 48-31 |
| PPTP Pass Through | 48-32 |
| SMTP Proxy | 48-33 |
| Interaction Between the SMTP Proxy and Firewall Rules | 48-34 |
| Protecting the Email System | 48-34 |
| Email Relaying | 48-35 |
| HTTP Proxy | 48-35 |
| Firewall HTTP Proxies and Firewall Policies | 48-35 |
| HTTP Filters | 48-35 |
| Logging | 48-36 |
| SIP Application Layer Gateway: VoIP Phone Calls | 48-36 |
| Using Automatic Client Management Mode | 48-37 |
| Using Manual Client Management Mode | 48-39 |
| Displaying and Debugging the SIP ALG | 48-41 |
| Attacks Recognised by the Firewall | 48-41 |
| Monitoring Firewall Activity | 48-45 |
| Notifications | 48-45 |
| Debugging | 48-46 |
| Event Triggers | 48-46 |
| Logging | 48-47 |
| Session Monitoring | 48-49 |
| Accounting | 48-52 |
| Configuration Examples | 48-53 |
| Minimum Configuration for a Small Office | 48-53 |
| Firewall with an ISP-Assigned Internet Address | 48-54 |
| Firewall with a Single Global Internet Address | 48-54 |
| Allowing Access to a WWW Server | 48-55 |
| Configuring a Firewall to Allow VoIP Phone Calls | 48-55 |
| Troubleshooting | 48-58 |
| Traffic Flow and Network Address Translation (NAT) | 48-58 |
| Traffic Allowed or Denied by Firewall | 48-58 |
| Traffic Logging and Firewall Alert Messages | 48-60 |
| SIP ALG and VoIP Phone Calls | 48-61 |
| Command Reference | 48-62 |
| add firewall monitor | 48-62 |
| add firewall policy apprule | 48-65 |
| add firewall policy dynamic | 48-67 |
| add firewall policy httpfilter | 48-68 |
| add firewall policy interface | 48-71 |
| add firewall policy limitrule | 48-73 |
| add firewall policy list | 48-75 |
| add firewall policy nat | 48-76 |
| add firewall policy proxy | 48-79 |

| | |
|---|--------|
| add firewall policy rule | 48-81 |
| add firewall policy spamsources | 48-95 |
| add firewall policy udpporttimeout | 48-96 |
| create firewall policy | 48-97 |
| create firewall policy dynamic | 48-98 |
| delete firewall monitor | 48-98 |
| delete firewall policy apprule | 48-99 |
| delete firewall policy dynamic | 48-100 |
| delete firewall policy httpfilter | 48-101 |
| delete firewall policy interface | 48-102 |
| delete firewall policy limitrule | 48-103 |
| delete firewall policy list | 48-104 |
| delete firewall policy nat | 48-105 |
| delete firewall policy proxy | 48-107 |
| delete firewall policy rule | 48-108 |
| delete firewall policy spamsources | 48-109 |
| delete firewall policy udpporttimeout | 48-110 |
| delete firewall session | 48-110 |
| destroy firewall policy | 48-111 |
| destroy firewall policy dynamic | 48-111 |
| disable firewall | 48-112 |
| disable firewall monitor | 48-112 |
| disable firewall notify | 48-113 |
| disable firewall policy | 48-114 |
| disable firewall policy debug | 48-116 |
| disable firewall policy httpcookies | 48-118 |
| disable firewall policy identproxy | 48-119 |
| disable firewall policy smtprelay | 48-119 |
| disable firewall policy tcpsetupproxy | 48-120 |
| disable firewall sessionreport | 48-121 |
| disable firewall sipalg | 48-121 |
| enable firewall | 48-122 |
| enable firewall monitor | 48-122 |
| enable firewall notify | 48-123 |
| enable firewall policy | 48-124 |
| enable firewall policy debug | 48-126 |
| enable firewall policy httpcookies | 48-128 |
| enable firewall policy identproxy | 48-128 |
| enable firewall policy smtprelay | 48-129 |
| enable firewall policy tcpsetupproxy | 48-130 |
| enable firewall sessionreport | 48-130 |
| enable firewall sipalg | 48-131 |
| reset firewall policy maccache | 48-131 |
| reset firewall sipalg autoclients | 48-132 |
| reset firewall sipalg counter | 48-132 |
| set firewall maxfragment | 48-133 |
| set firewall monitor | 48-134 |
| set firewall policy | 48-136 |
| set firewall policy attack | 48-138 |
| set firewall policy limitrule | 48-140 |
| set firewall policy rule | 48-142 |
| set firewall policy smtpdomain | 48-147 |
| set firewall policy udpporttimeout | 48-148 |
| set firewall sipalg | 48-149 |
| show firewall | 48-151 |
| show firewall accounting | 48-154 |
| show firewall arp | 48-156 |
| show firewall event | 48-158 |
| show firewall monitor | 48-161 |

| | |
|---|--------|
| show firewall policy | 48-162 |
| show firewall policy attack | 48-180 |
| show firewall policy dynamic | 48-181 |
| show firewall policy limitrule | 48-183 |
| show firewall policy list | 48-185 |
| show firewall policy maccache | 48-186 |
| show firewall policy user | 48-187 |
| show firewall policy udpporttimeout | 48-188 |
| show firewall session | 48-189 |
| show firewall sipalg | 48-192 |
| show firewall sipalg autoclients | 48-196 |
| show firewall sipalg counter | 48-199 |

CHAPTER 49 IP Security (IPsec)

| | |
|---|-------|
| Introduction | 49-3 |
| IP Security (IPsec) | 49-4 |
| Security Protocols and Modes | 49-4 |
| Compression Protocol | 49-5 |
| Security Associations (SA) | 49-5 |
| ISAKMP/IKE | 49-6 |
| ISAKMP | 49-6 |
| IKE | 49-10 |
| IPsec on the Switch | 49-12 |
| Security Policy Database (SPD) | 49-13 |
| SA Bundles | 49-15 |
| Security through Key Management | 49-16 |
| Dynamic IP Addresses | 49-17 |
| IPsec Support for IPv6 | 49-18 |
| IPsec over UDP | 49-19 |
| Pre-IPsec Security Associations | 49-19 |
| ISAKMP/IKE on the Switch | 49-21 |
| ISAKMP Policies | 49-21 |
| ISAKMP Exchanges | 49-24 |
| ISAKMP Security Associations (SA) | 49-24 |
| ISAKMP Heartbeats | 49-25 |
| Responding to IPsec Packets from an Unknown Tunnel | 49-26 |
| IPsec NAT-Traversal | 49-28 |
| Basic NAT-T Operations | 49-28 |
| NAT-T on the Switch | 49-29 |
| Pre-IPsec Security Associations | 49-31 |
| Configuration Examples | 49-32 |
| Setting Security | 49-32 |
| VPN-only with details about ISAKMP/IKE key management | 49-33 |
| VPN with NAT-Traversal | 49-38 |
| Troubleshooting IPsec | 49-45 |
| IPsec | 49-45 |
| ISAKMP | 49-46 |
| Command Reference | 49-48 |
| activate ipsec convertoldsa | 49-48 |
| add sa member | 49-49 |
| create ipsec bundlespecification | 49-50 |
| create ipsec policy | 49-52 |
| create ipsec saspecification | 49-60 |
| create isakmp policy | 49-63 |
| create sa | 49-71 |
| delete sa member | 49-72 |
| destroy ipsec bundlespecification | 49-72 |
| destroy ipsec policy | 49-73 |

| | |
|--------------------------------------|--------|
| destroy ipsec saspecification | 49-74 |
| destroy isakmp policy | 49-74 |
| destroy sa | 49-75 |
| disable ipsec | 49-75 |
| disable ipsec oldsa | 49-76 |
| disable ipsec policy debug | 49-77 |
| disable isakmp | 49-79 |
| disable isakmp debug | 49-80 |
| disable sa debug | 49-81 |
| enable ipsec | 49-81 |
| enable ipsec oldsa | 49-82 |
| enable ipsec policy debug | 49-83 |
| enable isakmp | 49-86 |
| enable isakmp debug | 49-88 |
| enable sa debug | 49-89 |
| purge ipsec | 49-89 |
| reset ipsec counter | 49-90 |
| reset ipsec policy | 49-91 |
| reset ipsec policy counter | 49-91 |
| reset ipsec sa counter | 49-92 |
| reset isakmp counters | 49-93 |
| reset isakmp policy | 49-94 |
| set ipsec bundlespecification | 49-95 |
| set ipsec policy | 49-96 |
| set ipsec saspecification | 49-104 |
| set ipsec udpport | 49-106 |
| set isakmp policy | 49-107 |
| set sa | 49-115 |
| show ipsec | 49-117 |
| show ipsec bundlespecification | 49-118 |
| show ipsec counter | 49-121 |
| show ipsec policy | 49-136 |
| show ipsec policy counter | 49-140 |
| show ipsec policy sabundle | 49-144 |
| show ipsec sa | 49-146 |
| show ipsec sa counter | 49-151 |
| show ipsec saspecification | 49-154 |
| show isakmp | 49-157 |
| show isakmp counters | 49-159 |
| show isakmp exchange | 49-189 |
| show isakmp policy | 49-196 |
| show isakmp sa | 49-201 |
| show sa | 49-206 |
| show sa counter | 49-209 |
| show sa user | 49-215 |

CHAPTER 50 **Public Key Infrastructure (PKI)**

| | |
|---|------|
| Introduction | 50-2 |
| Overview of PKI | 50-2 |
| Public Keys | 50-2 |
| Certificates | 50-3 |
| Elements of a Public Key Infrastructure | 50-5 |
| Certificate Validation | 50-5 |
| Certificate Revocation Lists (CRLs) | 50-6 |
| PKI on the Switch | 50-7 |
| Certificate Retrieval and Storage | 50-7 |
| Certificate Validation | 50-8 |
| Certificate Revocation Lists | 50-9 |

| | |
|-------------------------------------|-------|
| Requesting a Certificate | 50-9 |
| Global PKI Parameters | 50-10 |
| Configuration Examples | 50-12 |
| Manual Enrollment | 50-12 |
| Automatic Enrollment with CMP | 50-14 |
| Command Reference | 50-16 |
| add pki certificate | 50-16 |
| add pki crl | 50-18 |
| add pki ldaprepository | 50-20 |
| create pki certificate | 50-21 |
| create pki enrollmentrequest | 50-22 |
| create pki keyupdaterequest | 50-23 |
| delete pki certificate | 50-24 |
| delete pki crl | 50-24 |
| delete pki ldaprepository | 50-25 |
| destroy pki enrollmentrequest | 50-25 |
| destroy pki keyupdaterequest | 50-26 |
| disable pki debug | 50-26 |
| enable pki debug | 50-27 |
| purge pki | 50-28 |
| set pki | 50-29 |
| set pki certificate | 50-30 |
| set pki crl | 50-31 |
| set pki ldaprepository | 50-32 |
| set system distinguishedname | 50-33 |
| show pki | 50-34 |
| show pki certificate | 50-42 |
| show pki crl | 50-45 |
| show pki enrollmentrequest | 50-48 |
| show pki keyupdaterequest | 50-50 |
| show pki ldaprepository | 50-52 |

CHAPTER 51 **Link Compression and Encryption**

| | |
|---------------------------------|-------|
| Introduction | 51-2 |
| Overview | 51-2 |
| Link Compression | 51-2 |
| PPP | 51-3 |
| Frame Relay | 51-4 |
| X.25 | 51-4 |
| Link Encryption | 51-4 |
| Star Key Management | 51-5 |
| PPP | 51-9 |
| Frame Relay | 51-10 |
| Command Reference | 51-11 |
| create star | 51-12 |
| destroy star | 51-13 |
| disable star debugging | 51-13 |
| enable star debugging | 51-14 |
| enable star mkttransfer | 51-14 |
| set star | 51-15 |
| show star | 51-17 |
| show star counter | 51-19 |
| show star mkttransfer log | 51-24 |
| show star netkey | 51-25 |

CHAPTER 52 **Server Load Balancing**

| | |
|--------------------|------|
| Introduction | 52-3 |
| Overview | 52-3 |

| | |
|---|-------|
| Server Load Balancer on the Switch | 52-5 |
| TCP Virtual Balancer | 52-5 |
| Route-Based Virtual Balancer | 52-6 |
| HTTP Virtual Balancer | 52-7 |
| SSL Load Balancer | 52-8 |
| Load Balancer and Firewall | 52-9 |
| Redundancy | 52-10 |
| Healthchecks | 52-12 |
| Triggers | 52-14 |
| Configuration Example | 52-18 |
| Command Reference | 52-21 |
| add loadbalancer resource | 52-21 |
| add loadbalancer respool | 52-23 |
| add loadbalancer virtualbalancer | 52-24 |
| add loadbalancer virtualbalancer httperrorcode | 52-27 |
| delete loadbalancer resource | 52-28 |
| delete loadbalancer respool | 52-28 |
| delete loadbalancer virtualbalancer | 52-29 |
| delete loadbalancer virtualbalancer httperrorcode | 52-30 |
| disable loadbalancer | 52-30 |
| disable loadbalancer debug | 52-31 |
| disable loadbalancer healthpings | 52-31 |
| disable loadbalancer redundancy | 52-32 |
| disable loadbalancer resource | 52-33 |
| disable loadbalancer virtualbalancer | 52-34 |
| enable loadbalancer | 52-35 |
| enable loadbalancer debug | 52-35 |
| enable loadbalancer healthpings | 52-36 |
| enable loadbalancer redundancy | 52-37 |
| enable loadbalancer resource | 52-38 |
| enable loadbalancer virtualbalancer | 52-38 |
| reset loadbalancer | 52-39 |
| set loadbalancer | 52-40 |
| set loadbalancer redundancy | 52-41 |
| set loadbalancer resource | 52-43 |
| set loadbalancer respool | 52-44 |
| set loadbalancer virtualbalancer | 52-45 |
| show loadbalancer | 52-47 |
| show loadbalancer affinity | 52-49 |
| show loadbalancer connections | 52-51 |
| show loadbalancer redundancy | 52-52 |
| show loadbalancer resource | 52-55 |
| show loadbalancer respool | 52-58 |
| show loadbalancer virtualbalancer | 52-60 |
| CHAPTER 53 Virtual Router Redundancy Protocol (VRRP) | |
| Introduction | 53-2 |
| Virtual Router Redundancy Protocol | 53-2 |
| Interface Monitoring | 53-3 |
| Port Monitoring | 53-4 |
| VRRP on the Switch | 53-5 |
| Adopting the VRRP IP Address | 53-7 |
| Triggers | 53-9 |
| Configuration Example | 53-10 |
| Master with Backup Switch | 53-10 |
| Authenticated Virtual Router with No Preferred Master | 53-10 |
| Command Reference | 53-12 |
| add vrrp | 53-12 |

| | |
|--------------------------------------|-------|
| add vrrp monitoredinterface | 53-13 |
| create vrrp | 53-14 |
| delete vrrp | 53-17 |
| delete vrrp monitoredinterface | 53-18 |
| destroy vrrp | 53-19 |
| disable vrrp | 53-19 |
| disable vrrp debug | 53-20 |
| enable vrrp | 53-20 |
| enable vrrp debug | 53-21 |
| set vrrp | 53-22 |
| show vrrp | 53-25 |

CHAPTER 54 **Ping Polling of Device Reachability**

| | |
|--|-------|
| Introduction | 54-2 |
| Configuring Ping Polling | 54-2 |
| Triggers | 54-4 |
| Logging | 54-5 |
| Interaction with Other Protocols | 54-6 |
| Ping and Traceroute | 54-6 |
| Firewalls | 54-6 |
| Configuration Example | 54-7 |
| Command Reference | 54-9 |
| add ping poll | 54-9 |
| delete ping poll | 54-11 |
| disable ping poll | 54-12 |
| disable ping poll debug | 54-12 |
| enable ping poll | 54-13 |
| enable ping poll debug | 54-13 |
| reset ping poll | 54-14 |
| set ping poll | 54-15 |
| show ping poll | 54-17 |

CHAPTER 55 **Simple Network Management Protocol (SNMP)**

| | |
|---|-------|
| Introduction | 55-3 |
| Network Management Framework | 55-3 |
| Structure of Management Information | 55-5 |
| Names | 55-6 |
| Instances | 55-6 |
| Syntax | 55-7 |
| Access | 55-7 |
| Status | 55-8 |
| Description | 55-8 |
| The SNMP Protocol | 55-8 |
| SNMP Versions | 55-9 |
| SNMP Messages | 55-9 |
| Polling versus Event Notification | 55-9 |
| Message Format for SNMPv1 and SNMPv2c | 55-10 |
| SNMP Communities (Version v1 and v2c) | 55-11 |
| SNMPv3 Entities | 55-11 |
| SNMPv3 Message Protocol Format | 55-13 |
| SNMPv1 and SNMPv2c on the Switch | 55-15 |
| SNMP MIB Views for SNMPv1 and SNMPv2c | 55-15 |
| SNMP Communities | 55-16 |
| Configuration Example (SNMPv1 and v2) | 55-19 |
| SNMPv3 on the Switch | 55-21 |
| SNMP MIB Views for SNMPv3 | 55-21 |
| SNMP Defined MIB Names | 55-21 |
| SNMP Groups | 55-22 |

| | |
|--------------------------------------|-------|
| SNMP Users | 55-22 |
| SNMP Target Addresses | 55-23 |
| SNMP Target Params | 55-23 |
| Configuration Example (SNMPv3) | 55-24 |
| Command Reference | 55-25 |
| add snmp community | 55-25 |
| add snmp group | 55-27 |
| add snmp targetaddr | 55-28 |
| add snmp targetparams | 55-29 |
| add snmp user | 55-30 |
| add snmp view | 55-32 |
| create snmp community | 55-33 |
| delete snmp community | 55-35 |
| delete snmp group | 55-36 |
| delete snmp targetaddr | 55-36 |
| delete snmp targetparams | 55-37 |
| delete snmp user | 55-37 |
| delete snmp view | 55-38 |
| destroy snmp community | 55-39 |
| disable snmp | 55-39 |
| disable snmp authenticate_trap | 55-39 |
| disable snmp community | 55-40 |
| enable snmp | 55-40 |
| enable snmp authenticate_trap | 55-41 |
| enable snmp community | 55-41 |
| purge snmp | 55-42 |
| set snmp community | 55-42 |
| set snmp engineid | 55-43 |
| set snmp group | 55-44 |
| set snmp local | 55-45 |
| set snmp targetaddr | 55-46 |
| set snmp targetparams | 55-47 |
| set snmp user | 55-48 |
| show snmp | 55-49 |
| show snmp community | 55-52 |
| show snmp group | 55-53 |
| show snmp targetaddr | 55-54 |
| show snmp targetparams | 55-55 |
| show snmp user | 55-56 |
| show snmp view | 55-57 |

CHAPTER 56 **Link Layer Discovery Protocol (LLDP)**

| | |
|---|-------|
| Introduction | 56-3 |
| Link Layer Discovery Protocol | 56-3 |
| Type Length Values | 56-4 |
| Transmission and Reception | 56-5 |
| Storing LLDP Information | 56-7 |
| Configuring LLDP | 56-9 |
| LLDP Triggers | 56-11 |
| Cisco Discovery Protocol | 56-12 |
| CDP Advertisements | 56-12 |
| CDP Neighbours | 56-13 |
| Receiving and Checking Advertisements | 56-13 |
| Storing CDP Data | 56-13 |
| Configuring CDP | 56-14 |
| CDP Triggers | 56-14 |
| Command Reference | 56-16 |
| disable lldp cdp | 56-16 |

| | |
|---------------------------------------|-------|
| disable lldp cdp debug | 56-17 |
| disable lldp cdp interface | 56-18 |
| disable lldp cdp ppptemplate | 56-18 |
| disable lldp managementaddress | 56-19 |
| disable lldp notifications | 56-20 |
| disable lldp port | 56-21 |
| disable lldp portdescription | 56-22 |
| disable lldp systemcapabilities | 56-23 |
| disable lldp systemdescription | 56-24 |
| disable lldp systemname | 56-25 |
| enable lldp cdp | 56-26 |
| enable lldp cdp debug | 56-27 |
| enable lldp cdp interface | 56-28 |
| enable lldp cdp ppptemplate | 56-28 |
| enable lldp managementaddress | 56-29 |
| enable lldp notifications | 56-30 |
| enable lldp port | 56-31 |
| enable lldp portdescription | 56-32 |
| enable lldp systemcapabilities | 56-33 |
| enable lldp systemdescription | 56-34 |
| enable lldp systemname | 56-35 |
| purge lldp | 56-36 |
| reset lldp | 56-36 |
| reset lldp cdp counters | 56-36 |
| reset lldp cdp table | 56-37 |
| set lldp managementaddress | 56-37 |
| set lldp notification interval | 56-38 |
| set lldp reinitdelay | 56-38 |
| set lldp txdelay | 56-39 |
| set lldp txhold | 56-39 |
| set lldp txinterval | 56-40 |
| show lldp | 56-41 |
| show lldp cdp | 56-47 |
| show lldp cdp counters | 56-49 |
| show lldp cdp entry | 56-50 |
| show lldp cdp interface | 56-52 |
| show lldp cdp neighbour | 56-54 |
| show lldp counters | 56-57 |
| show lldp memory | 56-60 |
| show lldp neighbour | 56-61 |

CHAPTER 57 **Network Time Protocol (NTP)**

| | |
|-----------------------------|-------|
| Introduction | 57-2 |
| Overview | 57-2 |
| NTP on the Switch | 57-4 |
| Configuration Example | 57-4 |
| Troubleshooting | 57-7 |
| Command Reference | 57-8 |
| add ntp peer | 57-8 |
| delete ntp peer | 57-8 |
| disable ntp | 57-9 |
| enable ntp | 57-9 |
| purge ntp | 57-9 |
| reset ntp | 57-10 |
| set ntp utcoffset | 57-10 |
| show ntp | 57-11 |

CHAPTER 58 Management Stacking

| | |
|------------------------------------|-------|
| Introduction | 58-2 |
| What is Stacking? | 58-2 |
| How Stacking Works | 58-4 |
| Configuring a Stack | 58-6 |
| Configuration Example | 58-15 |
| Command Reference | 58-17 |
| Host-Directed Commands (HDC) | 58-17 |
| add stack interface | 58-18 |
| delete stack interface | 58-18 |
| disable stack | 58-19 |
| disable stack debug | 58-20 |
| enable stack | 58-21 |
| enable stack debug | 58-22 |
| set stack authentication | 58-23 |
| set stack stackid | 58-24 |
| set system hostid | 58-25 |
| show stack | 58-26 |

CHAPTER 59 Scripting

| | |
|---|-------|
| Introduction | 59-2 |
| Activating a Script at Login | 59-2 |
| Creating Scripts | 59-2 |
| Using Script Commands | 59-3 |
| Using the Built-In Text Editor | 59-3 |
| Loading from a TFTP Server | 59-3 |
| Loading from an Asynchronous Port | 59-4 |
| Using Scripts | 59-4 |
| Script Parameters | 59-4 |
| Script Control Structures | 59-5 |
| Command Reference | 59-7 |
| activate script | 59-7 |
| add script | 59-8 |
| deactivate script | 59-9 |
| delete script | 59-10 |
| if..then..else..endif | 59-11 |
| set script | 59-12 |
| show script | 59-14 |
| wait | 59-15 |

CHAPTER 60 Trigger Facility

| | |
|-----------------------------|-------|
| Introduction | 60-2 |
| Defining Triggers | 60-3 |
| Configuration Example | 60-4 |
| Command Reference | 60-6 |
| activate trigger | 60-6 |
| add trigger | 60-7 |
| create trigger | 60-8 |
| delete trigger | 60-15 |
| destroy trigger | 60-15 |
| disable trigger | 60-16 |
| enable trigger | 60-17 |
| purge trigger | 60-17 |
| set trigger | 60-18 |
| show trigger | 60-24 |

CHAPTER 61 Logging Facility

| | |
|--|-------|
| Introduction | 61-2 |
| Format of Log Messages | 61-3 |
| Secure Router Log Protocol (SRLP) | 61-4 |
| Net Manage Message Protocol | 61-4 |
| Processing Log Messages | 61-4 |
| Output Definitions and Message Filters | 61-4 |
| Destinations | 61-6 |
| Configuring Output Definitions | 61-8 |
| Configuring Message Filters | 61-8 |
| Configuration Example | 61-9 |
| Command Reference | 61-12 |
| add log output | 61-13 |
| add log receive | 61-16 |
| create log output | 61-18 |
| delete log output | 61-22 |
| delete log receive | 61-22 |
| destroy log output | 61-23 |
| disable log | 61-23 |
| disable log generation | 61-23 |
| disable log output | 61-24 |
| disable log reception | 61-24 |
| enable log | 61-25 |
| enable log generation | 61-25 |
| enable log output | 61-26 |
| enable log reception | 61-26 |
| flush log output | 61-27 |
| purge log | 61-27 |
| set log output | 61-28 |
| set log receive | 61-34 |
| set log utcoffset | 61-35 |
| show log | 61-36 |
| show log counter | 61-42 |
| show log output | 61-44 |
| show log queue | 61-49 |
| show log receive | 61-50 |
| show log status | 61-52 |

CHAPTER 62 Terminal Server

| | |
|---|-------|
| Introduction | 62-2 |
| TTY Devices | 62-2 |
| Multiple Sessions | 62-5 |
| Accessing Telnet Hosts and Other Services | 62-6 |
| Telnet | 62-6 |
| Remote Management | 62-7 |
| Services | 62-7 |
| Reverse Telnet | 62-8 |
| Client Command Limitations | 62-9 |
| Configuration Examples | 62-9 |
| Telnet Service | 62-9 |
| Locally Defined Service | 62-10 |
| Remote Use of Asynchronous Services | 62-11 |
| Troubleshooting | 62-12 |
| Command Reference | 62-13 |
| connect | 62-14 |
| create service | 62-15 |
| destroy service | 62-16 |
| disable rtelnet | 62-16 |

| | | |
|-------------------|---|-------|
| | disable rtelnet debug | 62-17 |
| | disable telnet server | 62-17 |
| | disconnect | 62-18 |
| | enable rtelnet | 62-18 |
| | enable rtelnet debug | 62-19 |
| | enable telnet server | 62-19 |
| | reconnect | 62-20 |
| | set service | 62-21 |
| | set rtelnet | 62-22 |
| | set telnet | 62-23 |
| | set tty | 62-24 |
| | show service | 62-26 |
| | show sessions | 62-27 |
| | show telnet | 62-28 |
| | show tty | 62-29 |
| | telnet | 62-33 |
| CHAPTER 63 | Line Printer Daemon (LPD) | |
| | Introduction | 63-2 |
| | Line Printer Daemon (LPD) | 63-2 |
| | LPD on the Switch | 63-2 |
| | Configuring LPD | 63-3 |
| | Printer Operation | 63-6 |
| | Troubleshooting | 63-7 |
| | Command Reference | 63-9 |
| | create lpd | 63-10 |
| | destroy lpd | 63-11 |
| | disable lpd | 63-11 |
| | enable lpd | 63-12 |
| | reset lpd | 63-12 |
| | set lpd | 63-13 |
| | show lpd | 63-14 |
| CHAPTER 64 | Stream Printing | |
| | Introduction | 64-2 |
| | Overview of Stream Printing | 64-2 |
| | Configuring Stream Printing | 64-3 |
| | Command Reference | 64-5 |
| | add stream | 64-5 |
| | delete stream | 64-6 |
| | reset stream | 64-6 |
| | set stream | 64-7 |
| | show stream | 64-8 |
| CHAPTER 65 | Test Facility | |
| | Introduction | 65-2 |
| | Ethernet Port Tests | 65-3 |
| | Asynchronous Port Tests | 65-5 |
| | Synchronous Interface Tests | 65-5 |
| | Basic Rate ISDN Interface Tests | 65-7 |
| | Primary Rate ISDN Interface Tests | 65-8 |
| | PAC Card Tests | 65-9 |
| | Command Reference | 65-10 |
| | disable test interface | 65-10 |
| | enable test interface | 65-11 |
| | reset test interface | 65-12 |
| | show test | 65-13 |

APPENDIX A **Messages**

| | |
|--|-------|
| Introduction | A-3 |
| Message Descriptions | A-4 |
| smmm001–smmm255: Global Messages | A-4 |
| s002256–s002999: Frame Relay | A-14 |
| s003256–s003999: Point-to-Point Protocol | A-17 |
| s004256–s004999: AppleTalk | A-21 |
| s005256–s005999: Internet Protocol (IP) | A-24 |
| s006256–s006999: Novell IPX | A-38 |
| s007256–s007999: SYN Driver | A-41 |
| s013256–s013999: X.25 Layer 3 (DCE) | A-42 |
| s014256–s014999: Q.931 | A-43 |
| s017256–s017999: LAPB | A-45 |
| s018256–s018999: TEST Module | A-46 |
| s019256–s019999: LAPD | A-48 |
| s020256–s020999: Synchronous Tunnelling (STT) | A-51 |
| s021256–s021999: Stream Printing | A-52 |
| s022256–s022999: TCP | A-53 |
| s023256–s023999: Ethernet Driver | A-53 |
| s026256–s026999: LPD Server | A-53 |
| s027256–s027999: Bridging | A-54 |
| s030256–s030999: X.25 Layer 3 (DTE) | A-59 |
| s031256–s031999: FLASH Driver | A-61 |
| s033256–s033999: TELNET | A-62 |
| s034256–s034999: System | A-62 |
| s035256–s035999: Command Processor | A-65 |
| s036256–s036999: TTY | A-65 |
| s037256–s037999: ISDN Call Control | A-68 |
| s038256–s038999: MIOX | A-71 |
| s039256–s039999: BOOTP | A-73 |
| s040256–s040999: Network Time Protocol (NTP) | A-74 |
| s041256–s041999: BRI Driver | A-75 |
| s042256–s042999: PRI Driver | A-76 |
| s043256–s043999: PORT Driver | A-78 |
| s045256–s045999: User Authentication Facility | A-81 |
| s046256–s046999: Asynchronous Call Control | A-85 |
| s048256–s048999: LOADER | A-89 |
| s049256–s049999: INSTALL | A-92 |
| s050256–s050999: Open Shortest Path First (OSPF) | A-95 |
| s051256–s051999: RADIUS | A-99 |
| s052256–s052999: Generic Routing Encapsulation (GRE) | A-100 |
| s053256–s053999: Trigger Facility | A-101 |
| s054256–s054999: Scripting | A-104 |
| s055256–s055999: Time Division Multiplexing (TDM) | A-104 |
| s056256–s056999: File Subsystem | A-106 |
| s057256–s057999: Logging Facility | A-109 |
| s058256–s058999: PING | A-112 |
| s059256–s059999: Simple Network Management Protocol (SNMP) | A-114 |
| s060256–s060999: SCC Driver | A-118 |
| s062256–s062999: Security Associations | A-118 |
| s066256–s066999: Internet Protocol version 6 (IPv6) | A-119 |
| s067256–s067999: Layer 2 Tunnelling Protocol (L2TP) | A-122 |
| s070256–s070999: Dynamic Host Configuration Protocol (DHCP) | A-123 |
| s073256–s073999: Encryption | A-126 |
| s074256–s074999: Star Key Management | A-128 |
| s075256–s075999: Secure Shell | A-129 |
| s076256–s076999: Resource Reservation Protocol (RSVP) | A-130 |
| s077256–s077999: Firewall | A-131 |
| s079256–s079999: Transaction Packet Assembler | |

| | |
|---|-------|
| Disassembler (TPAD) | A-137 |
| s081256–s081999: IP Security (IPsec) | A-138 |
| s082256–s082999: ISAKMP/IKE | A-143 |
| s083256–s083999: Finger | A-144 |
| s084256–s084999: HTTP | A-144 |
| s087256–s087999: Layer 3 Switching | A-145 |
| s088256–s088999: Virtual Router Redundancy Protocol (VRRP) | A-160 |
| s089256–s089999: VLANs | A-161 |
| s091256–s091999: GARP | A-174 |
| s092256–s092999: Spanning Tree Protocol (STP) | A-176 |
| s093256–s093999: GUI | A-179 |
| s095256–s095999: Public Key Infrastructure (PKI) | A-181 |
| s096256–s096999: Lightweight Directory Access Protocol (LDAP) | A-182 |
| s097256–s097999: Protocol Independent Multicast (PIM) | A-186 |
| s099256–s099999: Quality of Service (QoS) | A-190 |
| s100256–s100999: Generic Classifier | A-193 |
| s103256–s103999: Border Gateway Protocol version 4 (BGP-4) | A-194 |
| s104256–s104999: Load Balancer | A-201 |
| s109256–s109999: DS3 | A-205 |
| s112256–s112999: S/Key | A-206 |
| s117256–s117999: Dynamic Host Configuration Protocol v6 (DHCP6) | A-207 |
| s118256–s118999: Port Authentication | A-208 |
| s120256–s120999: Management Stacking | A-211 |
| s123256–s123999: Software Quality of Service | A-211 |
| s124256–s124999: Multiple Spanning Tree Protocol (MSTP) | A-216 |
| s132256–s132999: Link Layer Discovery Protocol | A-218 |
| s137256–s137999: DHCP Snooping | A-219 |
| s141256–s141999: MAC-Forced Forwarding (MACFF) | A-220 |

APPENDIX B Reference Tables

| | |
|---|------|
| Module Identifiers and Names | B-2 |
| Flash File System Message Codes | B-7 |
| ISDN Q.931 Call Clearance Cause Codes | B-9 |
| Log Message Types and Subtypes | B-11 |

APPENDIX C SNMP MIBs

| | |
|---|------|
| Introduction | C-3 |
| Allied Telesis Enterprise MIB | C-4 |
| Products Subtree | C-5 |
| AT Router Subtree | C-9 |
| Objects Group | C-9 |
| traps Group | C-16 |
| sysinfo Group | C-16 |
| arInterfaces Group | C-17 |
| Modules Group | C-18 |
| MIB-II MIB | C-29 |
| Implementation | C-30 |
| Interfaces Group MIB | C-31 |
| Implementation | C-32 |
| IP Forwarding Table MIB | C-33 |
| Implementation | C-33 |
| Ethernet-like Interface Types MIB | C-34 |
| Implementation | C-34 |
| Medium Attachment Unit (MAU) MIB | C-35 |
| Implementation | C-36 |
| Bridge MIB | C-37 |

| | |
|--|------|
| Implementation | C-38 |
| Virtual Bridge (VLAN) MIB | C-39 |
| Implementation | C-39 |
| Link Aggregation MIB | C-41 |
| Implementation | C-42 |
| Port Access Control MIB | C-43 |
| Implementation | C-44 |
| RMON MIB | C-45 |
| Implementation | C-46 |
| Frame Relay DTE MIB | C-47 |
| Implementation | C-48 |
| DS1, E1, DS2 and E2 Interface Types MIB | C-49 |
| Implementation | C-50 |
| DS3/E3 Interface Types MIB | C-51 |
| Implementation | C-51 |
| Host Resources MIB | C-52 |
| Implementation | C-53 |
| SNMP v3 MIBs | C-55 |
| Implementation | C-55 |
| Border Gateway Protocol v4 (BGP-4) MIB | C-56 |
| Implementation | C-57 |
| Link Layer Discovery Protocol (LLDP) MIB | C-58 |
| Implementation | C-58 |
| State and Topology Change Traps | C-59 |

Glossary

Index