

x930 Series

Gigabit Layer 3 Ethernet Switches


AT-x930-28GTX

AT-x930-28GPX

AT-x930-28GSTX

AT-x930-52GTX

AT-x930-52GPX

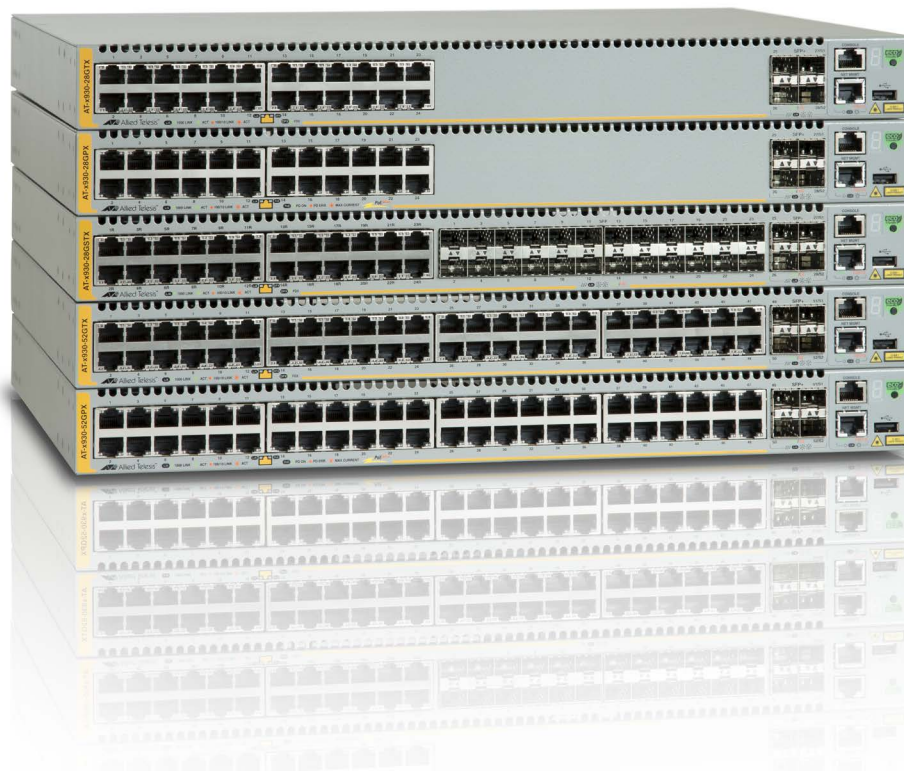

Installation Guide

For Standalone Switches and VCStack™

Copyright © 2025 Allied Telesis, Inc.

All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Allied Telesis, VCStack, and the Allied Telesis logo are trademarks of Allied Telesis, Incorporated. All other product names, company names, logos or other designations mentioned herein are trademarks or registered trademarks of their respective owners.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information contained in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

Electrical Safety and Emissions Standards

This product meets the following standards.

U.S. Federal Communications Commission

Radiated Energy

Note: This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Note: Modifications or changes not expressly approved of by the manufacturer or the FCC, can void your right to operate this equipment.

Industry Canada

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

RFI Emissions: FCC Class A, EN55022 Class A, EN61000-3-2, EN61000-3-3, VCCI Class A, C-TICK, CE

Warning: In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

EMC (Immunity): EN55024

Electrical Safety: EN60950-1 (TUV), UL 60950-1 (cUL_{US})



Laser Safety

EN60825

Contents

Preface	13
How to Use This Installation Guide	14
Installing a Standalone Switch	14
Installing a VCStack	14
Document Conventions	16
Document Revisions	17
Translated Safety Statements	18
Section I	
Hardware Overview and Installation	19
Chapter 1: Hardware Overview	21
Models	22
Front and Rear Panels	23
Features	26
x930 Models	26
10/100/1000 Mbps Copper Ports	26
Power Over Ethernet	26
SFP Ports	27
SFP+ Ports	27
SFP+ S1 and S2 Stacking Ports	28
LEDs	28
Optional Expansion Cards	28
Installation Options	28
MAC Address Table	28
Management Software and Interfaces	29
Management Methods	29
Power Supplies	29
Management Panel	30
Power Supplies	31
System-Only Power Supplies	31
System and PoE+ Power Supplies	32
Guidelines	34
10/100/1000Base-T Copper Ports	36
Speed	36
Duplex Mode	36
Wiring Configuration	36
Maximum Distance	37
Cable Requirements	37
Port Pinouts	37
Power Over Ethernet	38
PoE Standards	38
Powered Device Classes	38
PoE Power Budgets	39
Port Prioritization	41
Wiring Implementation	42
SFP Ports	43
SFP+ Ports	44
S1 and S2 SFP+ Ports	45

Ethernet Management Port (NET MGMT)	46
NET MGMT LEDs.....	46
eco-friendly Button.....	47
LEDs	48
Copper Port LEDs on non-PoE Switches	48
Copper Port LEDs on PoE Switches	49
SFP Port LEDs	51
SFP+ Port LEDs	52
S1 and S2 Stacking Port LEDs.....	53
Switch ID LED	54
USB Port.....	56
Console Port	57
AT-StackQS and AT-x9EM/XT4 Cards.....	59
AT-StackQS Card	59
AT-x9EM/XT4 Card	61
Chapter 2: Beginning the Installation	63
Reviewing Safety Precautions	64
Choosing a Site for the Switch.....	69
Unpacking the Switch	70
Chapter 3: Installing the Power Supplies	73
Installing the Power Supplies.....	74
Installing a Blank Power Supply Slot Cover.....	80
Chapter 4: Installing AT-StackQS and AT-x9EM/XT4 Cards	83
Guidelines	84
Installing the Card	85
Chapter 5: Installing the Switch on a Table	93
Chapter 6: Installing the Switch in an Equipment Rack	95
Required Items	96
Installing the Switch in an Equipment Rack.....	97
Chapter 7: Installing the Switch on a Wall	101
Switch Orientation on the Wall.....	102
Recommended Minimum Wall Area Dimensions.....	103
Plywood Base for a Wall with Wooden Studs.....	105
Installation Guidelines.....	107
Tools and Material	107
Installing the Plywood Base.....	109
Installing the Switch on the Plywood Base	110
Installing the Switch on a Concrete Wall.....	113
Chapter 8: Wiring the DC Connector on the AT-PWR250-80 Power Supply	117
Section II	
Powering On and Verifying a Standalone Switch	121
Chapter 9: Powering On the Switch	123
Powering On AC Power Supplies	124
Powering On the AT-PWR250-80 DC Power Supply	127
Monitoring the Initialization Processes.....	129
Chapter 10: Configuring the Switch for Standalone Operations	133
Determining the Status of the Switch.....	134
Starting a Local Management Session	135
Disabling VCStack	137
Viewing the AlliedWare Plus Version Number	140

Chapter 11: Cabling the Networking Ports	141
Cabling Copper Ports	142
Installing SFP or SFP+ Transceivers.....	144
Specifying Ports in the Command Line Interface for Standalone Switches.....	148
Installing AT-SP10TW Direct Connect Cables	150
Cabling the AT-StackQS Card with AT-QSFICU Cables	152
Cabling the AT-StackQS Card with Fiber Optic Transceivers	154
 Section III	
Building a VCStack	155
 Chapter 12: Virtual Chassis Stacking Overview	157
Overview.....	158
Stack Trunks.....	159
Trunks of Ports S1 and S2	160
Trunks of AT-StackQS Cards	164
Trunks of Copper 10/100/1000Mbps Ports.....	167
Trunks of SFP Ports on AT-x930-28GSTX Switches	169
General Stacking Guidelines	172
Master and Member Switches	173
Selection of the Master Switch	173
Switch ID Numbers	174
Feature Licenses	175
Specifying Ports in the Command Line Interface.....	176
Stack Worksheet	178
VCStack Command Summary.....	182
STACK ENABLE Command.....	182
STACKPORT Command.....	182
STACK PRIORITY Command.....	182
STACK RENUMBER Command	184
SWITCH PROVISION Command.....	184
Displaying the Hardware Status and AlliedWare Plus Version Numbers	185
 Chapter 13: Building a Stack with SFP+ Ports S1 and S2	187
Introduction.....	188
Designating SFP+ Ports S1 and S2 as the Stack Trunk	190
 Chapter 14: Building a Stack with AT-StackQS Cards	193
 Chapter 15: Building a Stack with Copper or SFP Gigabit Ports	195
Introduction.....	196
Configuring the Master Switch.....	198
General Steps for the Master Switch.....	198
Configuring the Master Switch - Part I.....	199
Configuring the Master Switch - Part II.....	201
Verifying the Master Switch	202
What to Do Next	204
Configuring the Member Switches.....	205
General Steps for the Member Switches.....	205
Configuring Member Switches - Part I.....	206
Configuring Member Switches - Part II.....	207
Verifying Member Switches	209
What to Do Next for Member Switches	211
 Chapter 16: Powering On and Verifying the Stack	213
Introduction.....	214
Powering On the Switches Sequentially	215
Powering On the Switches Simultaneously	217
Verifying the Stack and Assigning Priority Numbers	219
 Chapter 17: Troubleshooting	223

Appendix A: Technical Specifications	231
Physical Specifications	232
Environmental Specifications	234
Power Specifications	235
Certifications	237
RJ-45 Copper Port Pinouts	238
RJ-45 Style Serial Console Port Pinouts	240

Figures

Figure 1: Front Panels on AT-x930-28GTX and AT-x930-28GPX Switches	23
Figure 2: Front Panels on AT-x930-28GSTX, AT-x930-52GTX, and AT-x930-52GPX Switches.....	24
Figure 3: Pre-installed Components on the Rear Panel of the non-PoE Switches.....	25
Figure 4: Pre-installed Components on the Rear Panel of the PoE Switches.....	25
Figure 5: Management Panel	30
Figure 6: AT-PWR150, AT-PWR250 V2, and AT-PWR250-80 System-only Power Supplies.....	31
Figure 7: AT-PWR800, AT-PWR800 V2, AT-PWR1200, and AT-PWR1200 V2 Power Supplies	33
Figure 8: Copper Port LEDs on the non-PoE Switches	48
Figure 9: Copper Port LEDs on the PoE Switches	50
Figure 10: SFP Port LEDs	51
Figure 11: SFP+ Port LEDs	52
Figure 12: Switch ID LED	54
Figure 13: Switch ID LED States	55
Figure 14: Switch ID LED in the Low Power Mode.....	55
Figure 15: AT-VT-Kit3 Management Cable	58
Figure 16: Local Management Session of the Switch with the VT-Kit3 Management Cable.....	58
Figure 17: AT-StackQS Card.....	59
Figure 18: Copper Breakout Cable.....	59
Figure 19: AT-x9EM/XT4 Card	61
Figure 20: Accessory Kit.....	70
Figure 21: Pre-installed Items.....	71
Figure 22: Removing the Blank Panel	75
Figure 23: Power Supply Accessory Items.....	76
Figure 24: Installing a Power Supply	77
Figure 25: Improper Installation of a Power Supply.....	78
Figure 26: Tightening the Captive Screws on the Power Supply.....	78
Figure 27: Installing the Power Cord Retaining Clip	79
Figure 28: Installing the Blank Panel on a Power Supply Slot.....	80
Figure 29: Tightening the Captive Screws on the Blank Panel for the Power Supply Slot.....	81
Figure 30: Loosening the Two Captive Screws on the AT-FAN09 Module	86
Figure 31: Removing the AT-FAN09 Module.....	86
Figure 32: Loosening the Captive Screw on the AT-FAN09ADP Module.....	87
Figure 33: Removing the AT-FAN09ADP Module	87
Figure 34: Removing the Card from the Anti-static Bag	88
Figure 35: Aligning the Card in the Slot.....	89
Figure 36: Seating the Card in the Switch	89
Figure 37: Tightening the Captive Screw on the Card.....	90
Figure 38: Aligning the AT-FAN09 Module in the Slot.....	90
Figure 39: Tightening the Two Captive Screws on the AT-FAN09 Module	91
Figure 40: Storing the AT-FAN09ADP Module in an Anti-static Bag.....	91
Figure 41: Installing the Bumper Feet.....	93
Figure 42: Attaching the Equipment Rack Brackets	98
Figure 43: Attaching the Equipment Rack Brackets (Continued)	99
Figure 44: Installing the Switch in an Equipment Rack.....	100
Figure 45: Positions of the Switch on the Wall	102
Figure 46: Minimum Wall Area Dimensions with the Front Panel on the Left.....	103
Figure 47: Minimum Wall Area Dimensions with the Front Panel on the Right	104
Figure 48: Switch on the Wall with a Plywood Base.....	105
Figure 49: Steps to Installing the Switch with a Plywood Base	106

Figure 50: Installing the Brackets to the Switch for Wall Installation.....	110
Figure 51: Mounting Holes.....	111
Figure 52: Securing the Switch to the Plywood Base.....	112
Figure 53: Marking the Locations of the Bracket Holes on a Concrete Wall.....	114
Figure 54: Installing the Switch on a Concrete Wall.....	115
Figure 55: On/Off Switch on AT-PWR250-80 Power Supply.....	118
Figure 56: DC Terminal Block.....	118
Figure 57: Stripped Wire.....	119
Figure 58: Connecting the Ground Wire to the DC Terminal Block.....	119
Figure 59: Raising the Power Cord Retaining Clip.....	124
Figure 60: Connecting the AC Power Cord.....	125
Figure 61: Lowering the Power Cord Retaining Clip.....	125
Figure 62: On/Off Switch on the AT-PWR250-80 DC Power Supply.....	127
Figure 63: Switch Initialization Messages.....	129
Figure 64: Switch Initialization Messages (Continued).....	130
Figure 65: Switch Initialization Messages (Continued).....	131
Figure 66: Connecting the VT-Kit3 Management Cable to the Console Port.....	136
Figure 67: User Exec Mode Prompt.....	136
Figure 68: SHOW STACK Command.....	137
Figure 69: Moving to the Global Configuration Mode.....	138
Figure 70: Confirmation Prompt for the NO STACK ENABLE Command.....	138
Figure 71: Disabling VCStack.....	138
Figure 72: Returning to the Privileged Exec Mode.....	138
Figure 73: Saving the Changes with the WRITE Command.....	139
Figure 74: Removing the Dust Plug from an SFP Slot.....	145
Figure 75: Installing an SFP+ Transceiver.....	146
Figure 76: Removing the Dust Cover from an SFP or SFP+ Transceiver.....	146
Figure 77: Positioning the SFP or SFP+ Handle in the Upright Position.....	147
Figure 78: Connecting a Fiber Optic Cable to an SFP or SFP+ Transceiver.....	147
Figure 79: PORT Parameter in the Command Line Interface.....	148
Figure 80: Removing the Dust Cover from the AT-SP10TW Cable.....	150
Figure 81: Installing AT-SP10TW Cables.....	151
Figure 82: Removing the Dust Cover from Port 1.....	152
Figure 83: Installing the AT-QSFPICU Cable in Port 1.....	153
Figure 84: Trunk of Ports S1 and S2 for a Stack of Two Switches.....	161
Figure 85: Trunk of Ports S1 and S2 for a Stack of Four Switches.....	162
Figure 86: Trunk of Ports S1 and S2 for a Stack of Eight Switches.....	163
Figure 87: Trunk of AT-StackQS Cards for a Stack of Two Switches.....	165
Figure 88: Trunk of AT-StackQS Cards for a Stack of Four Switches.....	165
Figure 89: Trunk of AT-StackQS Cards for a Stack of Eight Switches.....	166
Figure 90: Trunk of Copper Gigabit Ports for a Stack of Two Switches.....	167
Figure 91: Trunk of Copper Gigabit Ports for a Stack of Three Switches.....	168
Figure 92: Trunk of Copper Gigabit Ports for a Stack of Four Switches.....	168
Figure 93: Trunk of SFP Gigabit Ports for a Stack of Two AT-x930-28GSTX Switches.....	170
Figure 94: Trunk of SFP Gigabit Ports for a Stack of Three AT-x930-28GSTX Switches.....	170
Figure 95: Trunk of SFP and Copper Gigabit Ports for a Mixed Stack of Four Switches.....	171
Figure 96: PORT Parameter in the Command Line Interface.....	176
Figure 97: SHOW STACK Command on the Master Switch.....	202
Figure 98: SHOW RUNNING-CONFIG INTERFACE Command on the Master Switch.....	203
Figure 99: SHOW STACK Command for a Member Switch.....	209
Figure 100: SHOW RUNNING-CONFIG INTERFACE Command for Member Switches.....	210
Figure 101: SHOW STACK Command.....	219
Figure 102: Moving to the Global Configuration Mode with the ENABLE and CONFIGURE TERMINAL Commands.....	220
Figure 103: Returning to the Privileged Exec Mode.....	221
Figure 104: Saving the Priority Values with the WRITE Command.....	221
Figure 105: SHOW STACK Command with New Switch Priority Numbers.....	221
Figure 106: RJ-45 Socket Pin Layout (Front View).....	238

Tables

Table 1: Revision to the x930 Series Installation Guide	17
Table 2: Models and Basic Features	22
Table 3: IEEE Powered Device Classes	39
Table 4: Power Budgets of the PoE Power Supplies	39
Table 5: Power Budgets with Two Power Supplies and Power Boost	40
Table 6: NET MGMT Port LED	46
Table 7: LEDs on the 10/100/1000Base-T Ports on the AT-x930-28GTX, AT-x930-28GSTX and AT-x930-52GTX Switches	49
Table 8: Copper Port LEDs on the PoE Switches	50
Table 9: SFP Port LEDs on the AT-x930-28GSTX Switch	52
Table 10: SFP+ Port LEDs	53
Table 11: Stacking Port LEDs	54
Table 12: AT-StackQS Card LEDs	60
Table 13: AT-StackQS Card LEDs with 10Gbps Breakout Cables	60
Table 14: Copper Cables for the AT-x9EM/XT4 Card	61
Table 15: AT-x9EM/XT4 Card LEDs	62
Table 16: Power Supply Accessory Items	76
Table 17: PORT Parameter Format	148
Table 18: PORT Parameter Format	176
Table 19: Stack Worksheet	178
Table 20: Stacking Worksheet Columns	180
Table 21: Hardware Options and Management Software Versions	186
Table 22: Designating SFP+ Ports S1 and S2 as the Stack Trunk in Switches Containing AT-StackQS Cards	190
Table 23: Configuring the Master Switch to Use Gigabit Ports as the Stack Trunk - Part I	199
Table 24: Configuring the Master Switch to Use Gigabit Ports as the Stack Trunk - Part II	201
Table 25: Configuring Member Switches - Part I	206
Table 26: Configuring Member Switches - Part II	207
Table 27: Product Dimensions	232
Table 28: Product Weights	233
Table 29: Ventilation Requirements	233
Table 30: Environmental Specifications	234
Table 31: Maximum Power Consumption with the AT-PWR150, AT-PWR250 or AT-PWR250-80 Power Supply	235
Table 32: Maximum Power Consumption with the AT-PWR800 or AT-PWR800 V2 Power Supply	235
Table 33: Maximum Power Consumption with the AT-PWR1200 or AT-PWR1200 V2 Power Supply	235
Table 34: Input Voltages	236
Table 35: Product Certifications	237
Table 36: Pin Signals for 10 and 100 Mbps	238
Table 37: Pin Signals for 1000 Mbps	239
Table 38: RJ-45 Style Serial Console Port Pin Signals	240

Preface

This guide contains the hardware installation instructions for the x930 Series of Layer 3, Gigabit Ethernet switches. The instructions explain how to install the switches as standalone units or in a VCStack configuration. This preface contains the following sections:

- ❑ “How to Use This Installation Guide” on page 14
- ❑ “Document Conventions” on page 16
- ❑ “Document Revisions” on page 17
- ❑ “Translated Safety Statements” on page 18

How to Use This Installation Guide

Installing a Standalone Switch

Here are the steps and procedures to installing the switch as a standalone unit:

Step 1. Reviewing and Installing the Hardware

- ❑ Chapter 1, “Hardware Overview” on page 21
- ❑ Chapter 2, “Beginning the Installation” on page 63
- ❑ Chapter 3, “Installing the Power Supplies” on page 73
- ❑ Chapter 4, “Installing AT-StackQS and AT-x9EM/XT4 Cards” on page 83
- ❑ Chapter 5, “Installing the Switch on a Table” on page 93
- ❑ Chapter 6, “Installing the Switch in an Equipment Rack” on page 95
- ❑ Chapter 7, “Installing the Switch on a Wall” on page 101
- ❑ Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117

Step 2. Powering On, Configuring, and Cabling the Switch

- ❑ Chapter 9, “Powering On the Switch” on page 123
- ❑ Chapter 10, “Configuring the Switch for Standalone Operations” on page 133
- ❑ Chapter 11, “Cabling the Networking Ports” on page 141

Installing a VCStack

Here are the steps and procedures to building a VCStack:

Step 1. Reviewing the Hardware and VCStack Overviews

- ❑ Chapter 1, “Hardware Overview” on page 21
- ❑ Chapter 12, “Virtual Chassis Stacking Overview” on page 157

Step 2. Installing the Hardware

- ❑ Chapter 2, “Beginning the Installation” on page 63
- ❑ Chapter 3, “Installing the Power Supplies” on page 73
- ❑ Chapter 4, “Installing AT-StackQS and AT-x9EM/XT4 Cards” on page 83
- ❑ Chapter 5, “Installing the Switch on a Table” on page 93
- ❑ Chapter 6, “Installing the Switch in an Equipment Rack” on page 95
- ❑ Chapter 7, “Installing the Switch on a Wall” on page 101

- ❑ Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117

Note

Do not attach the network cables until after you have configured the switches for VCStack.

Step 3. Configuring the Master and Member Switches

- ❑ Chapter 13, “Building a Stack with SFP+ Ports S1 and S2” on page 187
- ❑ Chapter 14, “Building a Stack with AT-StackQS Cards” on page 193
- ❑ Chapter 15, “Building a Stack with Copper or SFP Gigabit Ports” on page 195

Step 4. Cabling the Stacking Ports

- ❑ Chapter 11, “Cabling the Networking Ports” on page 141

Note

After configuring the switches for VCStack, you should cable only the stacking ports to verify that the switches can form the stack. You should cable the networking ports only after verifying the stack.

Step 5. Powering On and Verifying the Stack

- ❑ Chapter 16, “Powering On and Verifying the Stack” on page 213

Step 6. Cabling the Networking Ports

- ❑ Chapter 11, “Cabling the Networking Ports” on page 141

Document Conventions

This document uses the following conventions:

Note

Notes provide additional information.



Caution

Cautions inform you that performing or omitting a specific action may result in equipment damage or loss of data.



Warning

Warnings inform you that performing or omitting a specific action may result in bodily injury.





Warning

Laser warnings inform you that an eye or skin hazard may exist due to the presence of a laser product.


Document Revisions

Revisions to this installation guide are listed in Table 1.


Table 1. Revision to the x930 Series Installation Guide

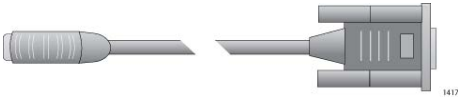Rev.	Description
B	<p>The management cable shown here and listed in the product accessory kits in Revision A of this Installation Guide is no longer included with the product and is not available from Allied Telesis.</p>  <p>The VT-Kit3 Management Cable shown here is available from Allied Telesis for local management sessions with the product:</p>  <p>For further information, refer to “Console Port” on page 57 and “Starting a Local Management Session” on page 135. The VT-Kit3 Management Cable is sold separately.</p>


Translated Safety Statements

Important: Safety statements with the  symbol are translated into multiple languages in **Translated Safety Statements** at alliedtelesisis.com/library/search.


- ❑ Übersetzte Sicherheitshinweise

Wichtig: Sicherheitshinweise mit dem -Symbol werden in **Translated Safety Statements** bei alliedtelesisis.com/library/search in mehrere Sprachen übersetzt.


- ❑ Declaraciones de seguridad traducidas

Importante: Las declaraciones de seguridad con el símbolo  se traducen a varios idiomas en **Translated Safety Statements** en alliedtelesisis.com/library/search.

- ❑ Consignes de sécurité traduites

Important: Les déclarations de sécurité avec le symbole  sont traduites en plusieurs langues en **Translated Safety Statements** sur alliedtelesisis.com/library/search.

- ❑ Dichiarazioni di sicurezza tradotte

Importante: Le dichiarazioni di sicurezza con il simbolo  sono tradotte in più lingue in **Translated Safety Statements** su alliedtelesisis.com/library/search.

- ❑ Översatta säkerhetsförklaringar

Viktig: Säkerhetsföreskrifter med -symbolen översätts till flera språk på **Translated Safety Statements** vid alliedtelesisis.com/library/search.

Section I

Hardware Overview and Installation

The chapters in this section contain hardware overview and installation instructions:

- ❑ Chapter 1, “Hardware Overview” on page 21
- ❑ Chapter 2, “Beginning the Installation” on page 63
- ❑ Chapter 3, “Installing the Power Supplies” on page 73
- ❑ Chapter 4, “Installing AT-StackQS and AT-x9EM/XT4 Cards” on page 83
- ❑ Chapter 5, “Installing the Switch on a Table” on page 93
- ❑ Chapter 6, “Installing the Switch in an Equipment Rack” on page 95
- ❑ Chapter 7, “Installing the Switch on a Wall” on page 101
- ❑ Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117

Note

Review “How to Use This Installation Guide” on page 14 before beginning the installation procedures.

Section I:

Chapter 1

Hardware Overview

This chapter contains the following sections:

- “Models” on page 22
- “Front and Rear Panels” on page 23
- “Features” on page 26
- “Management Panel” on page 30
- “Power Supplies” on page 31
- “10/100/1000Base-T Copper Ports” on page 36
- “Power Over Ethernet” on page 38
- “SFP Ports” on page 43
- “SFP+ Ports” on page 44
- “S1 and S2 SFP+ Ports” on page 45
- “Ethernet Management Port (NET MGMT)” on page 46
- “eco-friendly Button” on page 47
- “LEDs” on page 48
- “USB Port” on page 56
- “Console Port” on page 57
- “AT-StackQS and AT-x9EM/XT4 Cards” on page 59

Models

Table 2 lists the models and basic features of the x930 Series of stackable Gigabit Layer 3 switches.

Table 2. Models and Basic Features

Model	10/100/1000 Base-T Ports	SFP Ports	SFP+ Ports	PoE+	VCStack
AT-x930-28GTX	24	0	4	No	Yes
AT-x930-28GPX	24	0	4	Yes	Yes
AT-x930-28GSTX	24	24	4	No	Yes
AT-x930-52GTX	48	0	4	No	Yes
AT-x930-52GPX	48	0	4	Yes	Yes


Additional information is listed here:

- ❑ The switches do not come with power supplies. Power supplies are ordered separately. For more information, refer to “Power Supplies” on page 31.
- ❑ The power budgets of the AT-x930-28GPX and AT-x930-52GPX Switches for PoE+ powered devices depend on the number and types of power supplies installed in the units. For more information, refer to “PoE Power Budgets” on page 39.
- ❑ You may use the VCStack feature to stack the switches with the S1 and S2 ports, the optional AT-StackQS card, or the 10/100/1000Mbps front panel ports. For more information, refer to the Chapter 12, “Virtual Chassis Stacking Overview” on page 157.
- ❑ The copper ports and SFP ports on AT-x930-28GSTX Switch are paired together. Only one port or slot in a pair is operational at a time. For more information, refer to “SFP Ports” on page 43.

Front and Rear Panels

The front panels on the x930 Series are shown in Figure 1 and Figure 2 on page 24.

AT-x930-28GTX

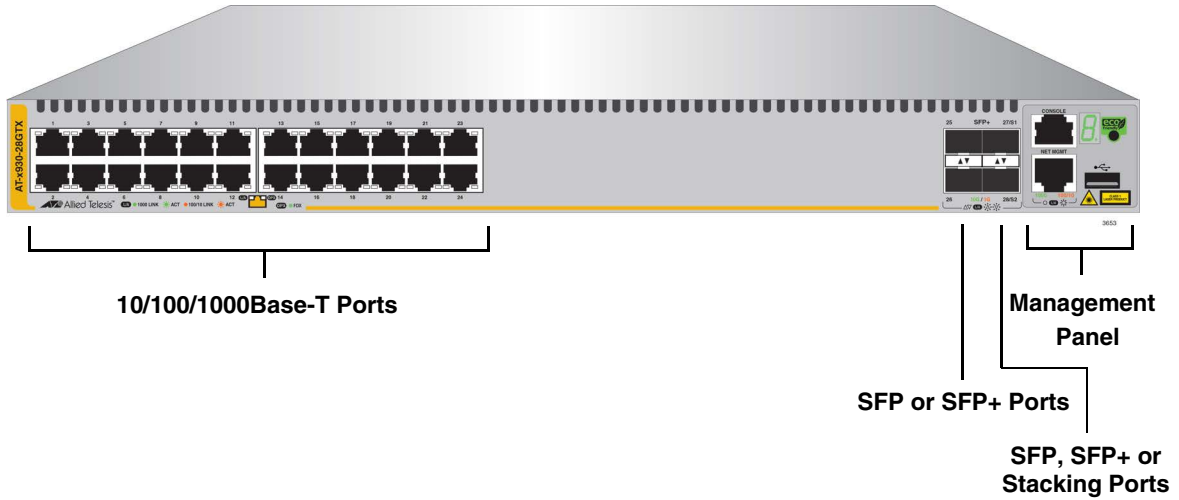

AT-x930-28GPX



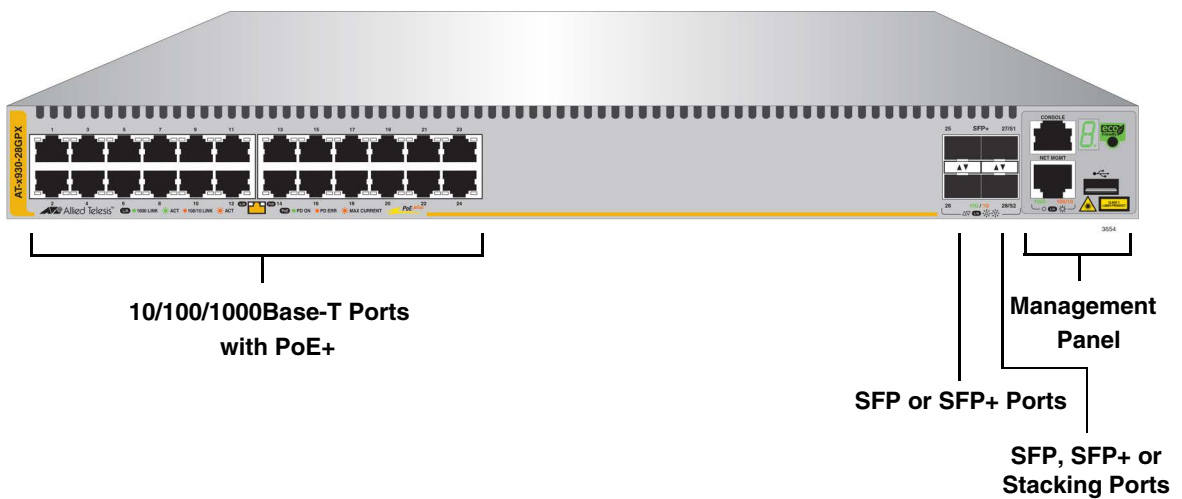


Figure 1. Front Panels on AT-x930-28GTX and AT-x930-28GPX Switches

AT-x930-28GSTX

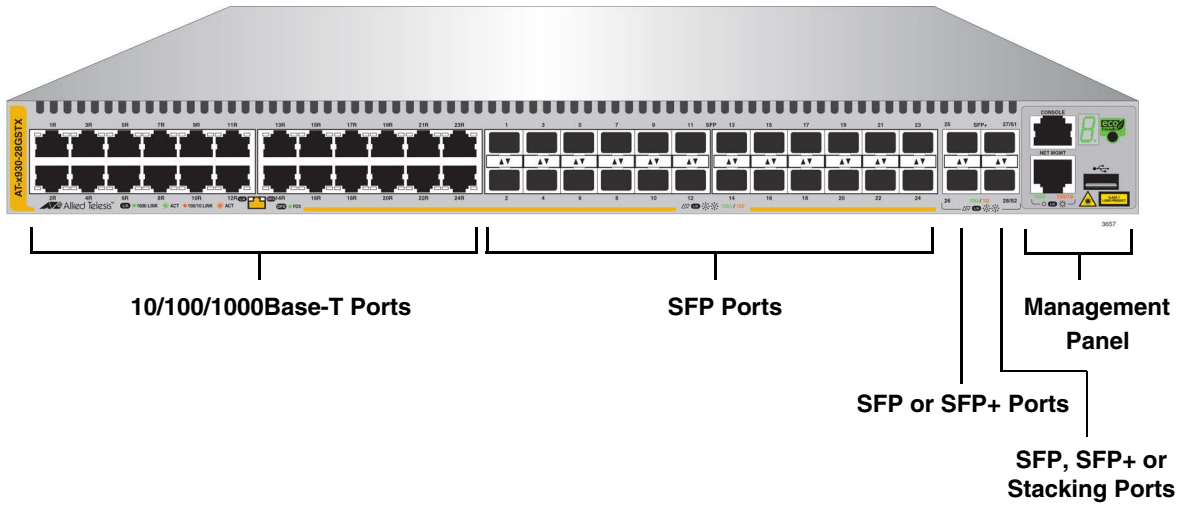

AT-x930-52GTX

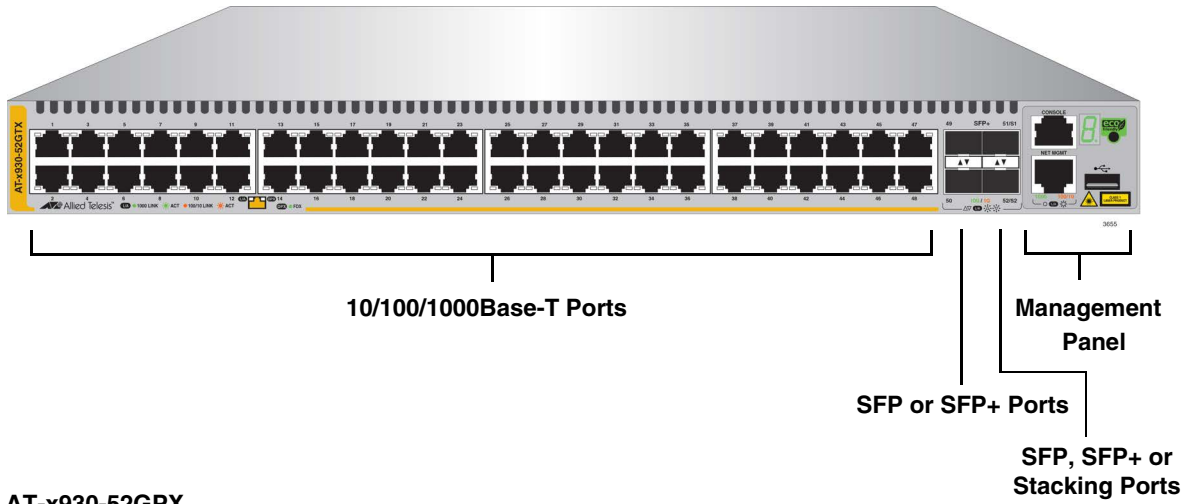

AT-x930-52GPX

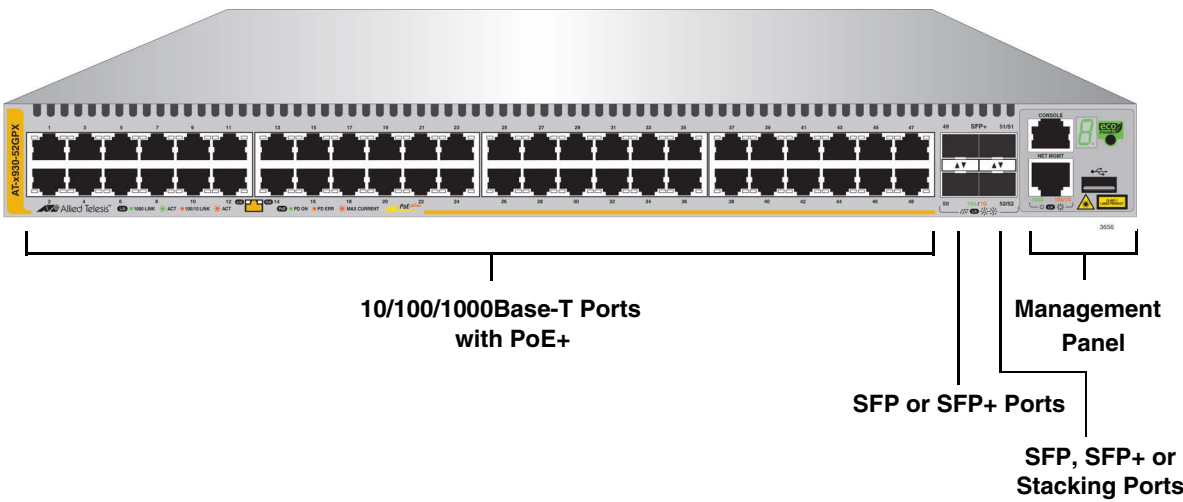


Figure 2. Front Panels on AT-x930-28GSTX, AT-x930-52GTX, and AT-x930-52GPX Switches

Figure 3 illustrates the pre-installed components on the rear panels of these non-PoE switches:

- ❑ AT-x930-28GTX
- ❑ AT-x930-28GSTX
- ❑ AT-x930-52GTX

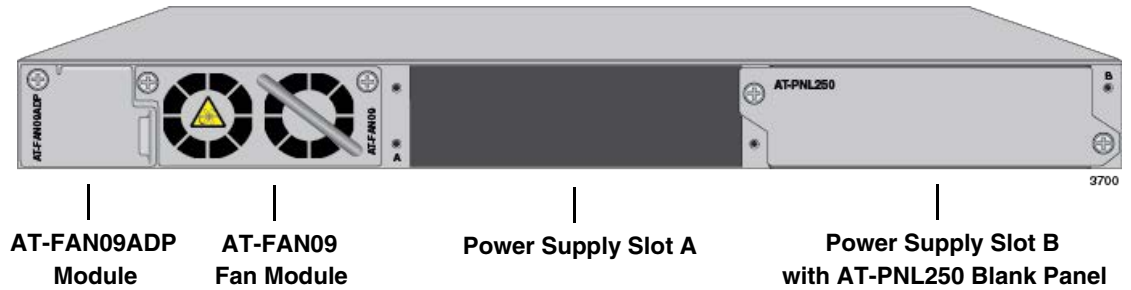


Figure 3. Pre-installed Components on the Rear Panel of the non-PoE Switches

Figure 4 illustrates the pre-installed components on the rear panels of these PoE switches:

- ❑ AT-x930-28GPX
- ❑ AT-x930-52GPX

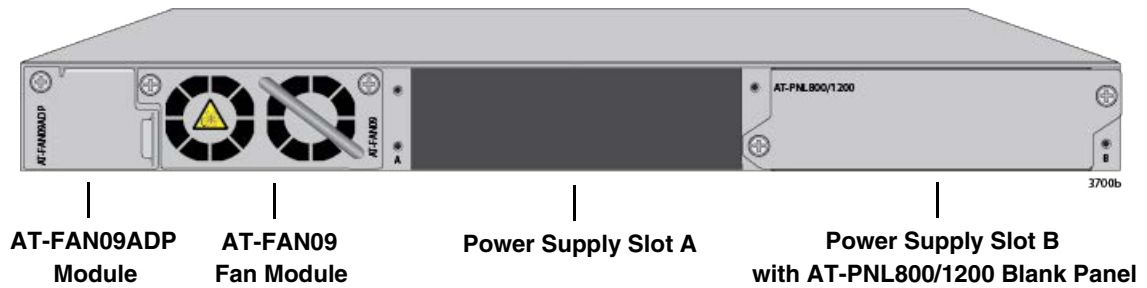


Figure 4. Pre-installed Components on the Rear Panel of the PoE Switches

Features

Here are the switches and their features:

x930 Models

Here are the switches in the x930 Series:

- ❑ AT-x930-28GTX
- ❑ AT-x930-28GPX
- ❑ AT-x930-28GSTX
- ❑ AT-x930-52GTX
- ❑ AT-x930-52GPX

10/100/1000 Mbps Copper Ports

Here are the basic features of the 10/100/1000 Mbps copper ports:

- ❑ 24 or 48 ports per switch
- ❑ 10Base-T, 100Base-TX, and 1000Base-T compliant
- ❑ IEEE 802.3u Auto-Negotiation compliant
- ❑ Auto-MDI/MDIX
- ❑ 100 meters (328 feet) maximum operating distance
- ❑ IEEE 802.3x flow control in 10/100Base-TX full-duplex mode
- ❑ IEEE 802.3x backpressure in 10/100Base-TX half-duplex mode
- ❑ IEEE 802.3ab 1000Base-T
- ❑ Layer 2 and Layer 3 jumbo frames up to 13KB and 9KB, respectively
- ❑ RJ-45 connectors

Power Over Ethernet

Here are the basic features of Power over Ethernet (PoE) on the copper ports on the AT-x930-28GPX and AT-x930-52GPX Switches:

- ❑ Supported on ports 1 to 24 on the AT-x930-28GPX Switch and ports 1 to 48 on the AT-x930-52GPX Switch
- ❑ Supports PoE (15.4 watts maximum) and PoE+ (30 watts maximum) at the switch ports
- ❑ Supports powered device classes 0 to 4
- ❑ Port prioritization
- ❑ Mode A wiring

SFP Ports The AT-x930-28GSTX Switch supports the following types of transceivers in its twenty four SFP ports:

- ❑ 100Base-FX, 1000Base-T, and 1000Base-SX/LX SFP transceivers
- ❑ Single-port BiDi 100Base-FX and 1000Base-LX SFP transceivers
- ❑ 1000Base-ZX SFP transceivers

Note

The SFP ports and copper ports on the AT-x930-28GSTX Switch are paired together. Only one port in a pair can be active at a time. For more information, refer to “SFP Ports” on page 43.

Note

SFP transceivers are purchased separately. For a list of supported transceivers, refer to the product's data sheet on the Allied Telesis website.

SFP+ Ports The four SFP+ ports support the following types of transceivers:

- ❑ SFP 1000Base-SX/LX SFP transceivers
- ❑ SFP single-port BiDi 1000Base-LX transceivers
- ❑ SFP 1000Base-ZX transceivers
- ❑ SFP+ 10Gbps, 10GBase-SR/LR fiber optic transceivers
- ❑ SFP+ 10Gbps AT-SP10TW1, AT-SP10TW3, and AT-SP10TW7 direct connect twinax cables with SFP+ transceiver-style connectors

Note

The SFP+ ports do not support 100Mbps 100Base-FX transceivers.

Note

The ports support full-duplex mode only. They do not support half-duplex mode.

Note

SFP and SFP+ transceivers are purchased separately. For a list of supported transceivers, refer to the product's data sheet on the Allied Telesis web site.

SFP+ S1 and S2 Stacking Ports

SFP+ ports 27/S1 and 28/S2 on the 28-port switches and ports 51/S1 and 52/S2 on the 52-port switches have these two functions:

- ❑ They can be used as regular networking ports.
- ❑ They can also be used as trunk ports to build a stack of up to eight switches with the VCStack feature. This is their default setting. To use them as regular Ethernet ports, you can disable VCStack, as explained in Chapter 10, “Configuring the Switch for Standalone Operations” on page 133, or designate other switch ports for the stack trunk. Refer to Chapter 12, “Virtual Chassis Stacking Overview” on page 157.

LEDs

Here are the port LEDs:

- ❑ Link/activity and duplex mode LEDs for the copper ports on non-PoE switches
- ❑ Link/activity and PoE status LEDs for the copper ports on PoE switches
- ❑ Link/activity LEDs for SFP and SFP+ ports
- ❑ Stack ID number LED
- ❑ eco-friendly button turns off the LEDs to conserve electricity

Optional Expansion Cards

Here are optional expansion cards:

- ❑ AT-StackQS Card - Contains two transceiver ports for 40Gbps networking ports or as the stack trunk for VCStack of up to eight switches. For more information, refer to “AT-StackQS Card” on page 59.
- ❑ AT-x9EM/XT4 Card - Contains four additional 1/10Gbps copper ports. Refer to “AT-x9EM/XT4 Card” on page 61.

Installation Options

Here are the installation options for the switches:

- ❑ 19-inch equipment rack
- ❑ Desk or tabletop
- ❑ Wall

MAC Address Table

Here are the basic features of the MAC address tables of the switches:

- ❑ Storage capacity of 64K dynamic and static entries
- ❑ Automatic learning and aging

Management Software and Interfaces

Here are the management software and interfaces:

- AlliedWare Plus Management Software
- Command line interface
- Web browser interface

Management Methods

Here are the methods for managing the switches:

- Local management through the Console port
- Remote Telnet and Secure Shell management
- Remote HTTP and HTTPS web browser management
- SNMPv1, v2c, and v3
- Allied Telesis Autonomous Management Framework (AMF)
- AT-Vista Manager mini
- Autonomous Wireless Control (AWC)

Power Supplies

Here are the power supplies:

- | | |
|--|---------------------------|
| <input type="checkbox"/> AT-PWR150 | AC system power only |
| <input type="checkbox"/> AT-PWR250 V2 | AC system power only |
| <input type="checkbox"/> AT-PWR250-80 | DC system power only |
| <input type="checkbox"/> AT-PWR800 | AC system power plus PoE+ |
| <input type="checkbox"/> AT-PWR800 V2 | AC system power plus PoE+ |
| <input type="checkbox"/> AT-PWR1200 | AC system power plus PoE+ |
| <input type="checkbox"/> AT-PWR1200 V2 | AC system power plus PoE+ |

Refer to “Power Supplies” on page 31.

Management Panel

Figure 5 identifies the components in the management panel on the x930 Series.

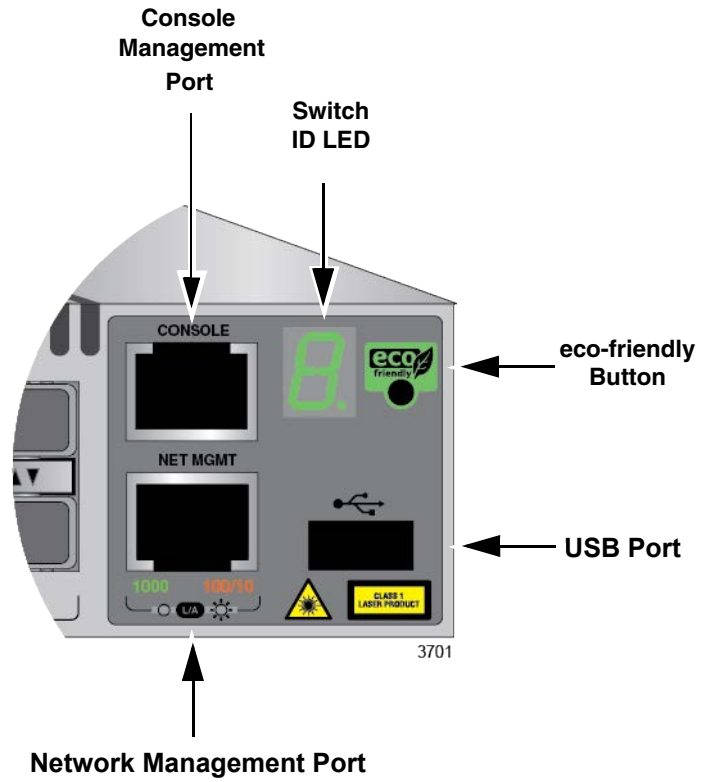


Figure 5. Management Panel

Power Supplies

There are seven power supplies in the x930 Series. They are divided into the following two groups:

- ❑ “System-Only Power Supplies,” next
- ❑ “System and PoE+ Power Supplies” on page 32

System-Only Power Supplies

The system-only power supplies are listed here:

- ❑ AT-PWR150 (150W AC)
- ❑ AT-PWR250 V2 (250W AC)
- ❑ AT-PWR250-80 (250W DC)

These power supplies provide system power only to the switches. Since they do not support PoE+, they are primarily intended for the following non-PoE+ x930 switches:

- ❑ AT-x930-28GTX
- ❑ AT-x930-28GSTX
- ❑ AT-x930-52GTX

The system-only power supplies are shown in Figure 6.

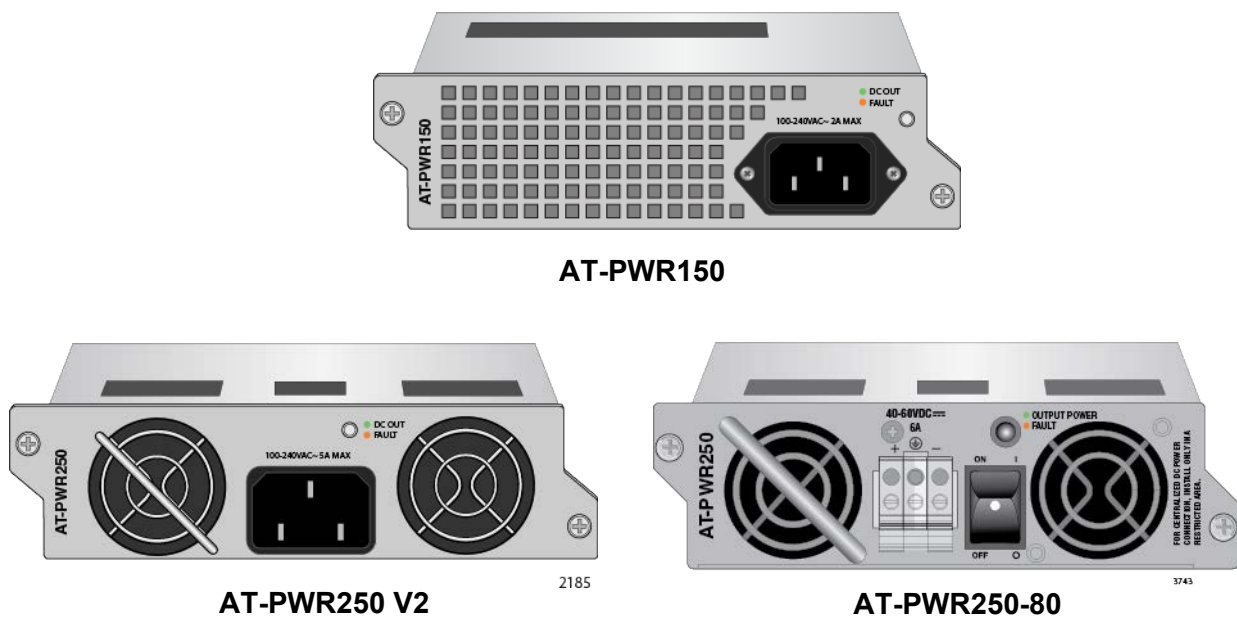


Figure 6. AT-PWR150, AT-PWR250 V2, and AT-PWR250-80 System-only Power Supplies

Here are their operating characteristics:

- ❑ The power supplies provide system power only. They do not support PoE+.
- ❑ A single power supply can power an entire switch.
- ❑ Installing two power supplies adds power redundancy.
- ❑ Given that these power supplies do not support PoE+, they are not recommended for the PoE+ x930 switches. You may install them in PoE+ switches, but the switches will not support powered devices.
- ❑ The DC wires for the AT-PWR250-80 DC Power Supply should be routed from a DC load center containing appropriate overcurrent branch protection for each DC feed, as required by the cognizant local electrical authority.



Caution

When installing two power supplies in a switch, they must both be the same model. Do not mix different power supply models in the same switch. The results may be unpredictable.

System and PoE+ Power Supplies

The second group of power supplies support both system power for switches and PoE+ for powered devices on switch ports. The power supplies in this group are listed here:

- ❑ AT-PWR800 (800W AC)
- ❑ AT-PWR800 V2 (800W AC)
- ❑ AT-PWR1200 (1200W AC)
- ❑ AT-PWR1200 V2 (1200W AC)

Refer to Figure 7 on page 33.



Figure 7. AT-PWR800, AT-PWR800 V2, AT-PWR1200, and AT-PWR1200 V2 Power Supplies

A PoE+ switch with one AT-PWR800 or AT-PWR800 V2 Power Supply has the following power characteristics:

- Full system power
- 380 watts of PoE+ power

A PoE+ switch with two AT-PWR800 or AT-PWR800 V2 Power Supplies has these power characteristics:

- Full system power and redundant system power
- Either 740 watts of PoE+ power or 380 watts of active PoE+ power and 380 watts of redundant PoE+ power.

A PoE+ switch with one AT-PWR1200 or AT-PWR1200 V2 Power Supply has the following power characteristics:

- Full system power
- 740 watts of power for PoE devices

A PoE+ switch with two AT-PWR1200 or AT-PWR1200 V2 Power Supplies has these power characteristics:

- Full system power and redundant system power
- Either 1440 watts of PoE power or 740 watts of active PoE power and 740 watts of redundant PoE power.

Guidelines

Please review the following guidelines concerning power supplies:


- ❑ The x930 Series does not come with power supplies. Power supplies are ordered separately.
- ❑ If you install two power supplies in the switch, they must both be the same model. For example, you may install two AT-PWR800 Power Supplies or two AT-PWR1200 Power Supplies in a switch. You may not install two different power supply models in the switch.
- ❑ The non-PoE AT-x930-28GTX, AT-x930-28GSTX, and AT-x930-52GTX Switches require only one power supply for full operations. Installing a second power supply adds power redundancy, which protects against interruptions to network operations in the event a power supply loses power or fails. Power redundancy is available only when both AC or DC connectors on the switch are connected to power sources.
- ❑ The PoE+ AT-x930-28GPX and AT-x930-52GPX Switches require only one power supply for system and PoE+ operations. Adding a second power supply provides redundant system power and doubles the amount of available PoE+ power. For further information, refer to “PoE Power Budgets” on page 39.
- ❑ You may install PoE power supplies in non-PoE x930 Switches. The power supplies will provide system power only.

Refer to “Power Specifications” on page 235 for the input voltage ranges.



Warning

Power cord is used as a disconnection device. To de-energize equipment, disconnect the power cord. *⚡* E3

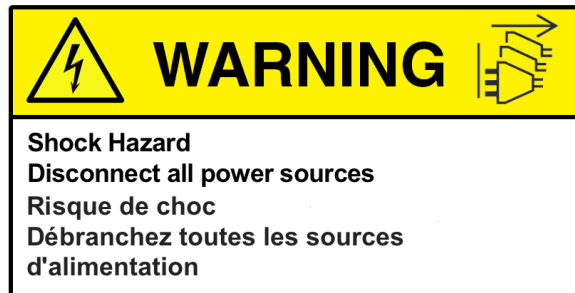

Warning

This unit might have more than one power cord. To reduce the risk of electric shock, disconnect all power cords before servicing the unit. *⚡* E30

Note

All AC power supplies are powered on or off by connecting or disconnecting the AC power cords. The DC AT-PWR250-80 Power Supply is powered on or off with its On/Off power switch or by deactivating the DC circuit.

10/100/1000Base-T Copper Ports

The copper ports on the switches are described in this section.

Speed The ports can operate at 10, 100, or 1000 Mbps. The speeds may be set manually using the management software or automatically with Auto-Negotiation (IEEE 802.3u), the default setting.

Note

The ports must be set to Auto-Negotiation to function at 1000 Mbps and are not compatible with devices that are not IEEE 802.3u compliant.

Duplex Mode The copper ports can operate in either half- or full-duplex mode. The duplex mode of a port, like port speed, may be set manually using the management software or automatically with Auto-Negotiation (IEEE 802.3u), the default setting.

The speed and duplex mode settings of a port may be set independently of each other. For example, a port may be configured such that its speed is set manually while its duplex mode is established through Auto-Negotiation.

Note

A switch port should not use Auto-Negotiation to set its duplex mode if it is connected to a network device that does not support Auto-Negotiation for 10 or 100 Mbps operation and has a fixed duplex mode of full-duplex. Otherwise, a duplex-mode mismatch may occur in which a switch port and a network device operate at different duplex modes. The duplex modes of switch ports that are connected to network devices that do not support Auto-Negotiation should be set manually through the management software.

Wiring Configuration The wiring configuration of a port operating at 10 or 100 Mbps can be MDI or MDI-X. The wiring configurations of a switch port and a network device connected with straight-through copper cabling have to be opposite, such that one device is using MDI and the other MDI-X. For instance, a switch port has to be set to MDI-X if it is connected to a network device set to MDI.

You may set the wiring configurations of the ports manually or let the switch configure them automatically with auto-MDI/MDI-X (IEEE 802.3ab-compliant). This feature enables the switch to automatically negotiate with network devices to establish their proper settings.

The MDI and MDI-X settings do not apply when ports are operating at 1000 Mbps.

Maximum Distance

The ports have a maximum operating distance of 100 meters (328 feet).

Cable Requirements

Here are the cable requirements:

- ❑ 10 or 100Mbps - Standard TIA/EIA 568-B-compliant Category 3 unshielded cabling
- ❑ 1000Mbps - Standard TIA/EIA 568-A-compliant Category 5 or TIA/EIA 568-B-compliant Enhanced Category 5 (Cat 5e) unshielded cabling.

Note

For the cable requirements for the ports on the AT-x930-28GPX and AT-x930-52GPX Switches for PoE devices, refer to “Cable Requirements” on page 37.

Port Pinouts

Refer to Table 36 on page 238 and Table 37 on page 239 for the port pinouts of the 10/100/1000Base-T copper ports.

Power Over Ethernet

The AT-x930-28GPX and AT-x930-52GPX Switches feature Power over Ethernet (PoE) on their copper 10/100/1000Base-T ports. PoE is used to supply power to network devices over the same copper cables that carry the network traffic.

The main advantage of PoE is that it can make it easier to install a network. The selection of a location for a network device is often limited by whether there is a power source nearby. This often limits equipment placement or requires the added time and cost of having additional electrical sources installed. But with PoE, you can install PoE-compatible devices wherever they are needed without having to worry about whether there are power sources nearby.

A device that provides PoE to other network devices is referred to as *power sourcing equipment* (PSE). The AT-x930-28GPX and AT-x930-52GPX Switches act as PSE units by adding DC power to the network cable, thus functioning as a central power source for other network devices.

Devices that receive their power from a PSE are called *powered devices* (PD). Examples include wireless access points, IP telephones, webcams, and even other Ethernet switches.

The switch automatically determines whether or not a device connected to a port is a powered device. Ports that are connected to network nodes that are not powered devices (that is, devices that receive their power from another power source) function as regular Ethernet ports, without PoE. The PoE feature remains activated on the ports but no power is delivered to the devices.

PoE Standards

The AT-x930-28GPX and AT-x930-52GPX Switches support these PoE standards:

- ❑ PoE (IEEE 802.3af): This standard provides up to 15.4 watts at the switch port to support powered devices that require up to 12.95 watts.
- ❑ PoE+ (IEEE 802.3at): This standard provides up to 30.0 watts at the switch port to support powered devices that require up to 25.5 watts.

Powered Device Classes

Powered devices are grouped into classes. The classes are based on the amount of power required by the network devices. The AT-x930-28GPX and AT-x930-52GPX Switches support the five classes in Table 3 on page 39.

Table 3. IEEE Powered Device Classes

Class	Maximum Power Output from a Switch Port	PD Power Range
0	15.4W	0.44W to 12.95W
1	4.0W	0.44W to 3.84W
2	7.0W	3.84W to 6.49W
3	15.4W	6.49W to 12.95W
4	30.0W	12.95W to 25.5W

PoE Power Budgets

The PoE power budget defines the maximum amount of power the switch can supply to the powered devices on its ports. The higher the budget, the more PoE devices the switch can support at one time.

The power budgets for the AT-x930-28GPX and AT-x930-52GPX Switches depend on several factors. The first is the power supply model. The power budgets for PoE devices provided by the four PoE power supplies are listed in Table 4.

Table 4. Power Budgets of the PoE Power Supplies

Power Supply	Power Budget for PoE Devices
AT-PWR800	380 watts
AT-PWR800 V2	380 watts
AT-PWR1200	740 watts
PWR1200 V2	740 watts

Note

The AT-PWR150, AT-PWR250 V2 and AT-PWR250-80 Power Supplies are not intended for the AT-x930-28GPX and AT-x930-52GPX Switches because they do not provide power for PoE devices. You may install them in the PoE switches, but the switches will not support powered devices.

Another factor that determines the PoE budget of the switch is the number of PoE power supplies in the device. The power budget of a PoE switch that has only one PoE power supply is equal to the budget of the power supply. For example, a switch that has one AT-PWR1200 Power Supply has a power budget of 740W for powered devices.

A PoE switch with two power supplies has either redundant PoE power or nearly double the power budget. This is controlled by the power boost feature, which has a status of either enabled or disabled. When the power boost feature is enabled, a PoE switch with two power supplies actively uses the PoE power from both supplies to increase its available power budget. When the feature is disabled, the switch uses the PoE power of only one of its power supplies and keeps the other in reserve in case the primary power supply should fail or lose power. The default setting of power boost is disabled.

As an example, assume that a PoE switch has one AT-PWR1200 Power Supply, which has a power budget of 740W for powered devices. Thus, the switch would have a total power budget of 740W. Now assume the switch has two AT-PWR1200 Power Supplies. When the power boost mode is enabled, the switch uses the PoE power from both supplies, for a total power budget of 1440W. When the power boost mode is disabled, the switch has an active PoE power of 740W and a redundant budget of the same amount. The switch activates the redundant power budget only if the power supply providing the active power budget fails or loses power.

Table 5 lists the PoE power budgets for the AT-x930-28GPX and AT-x930-52GPX Switches with two PoE power supplies, with and without power boost.

Table 5. Power Budgets with Two Power Supplies and Power Boost

Power Supplies	Power Boost	
	Disabled	Enabled
Two AT-PWR800	380 watts with 380 watts redundant power	740 watts
Two AT-PWR800 V2	380 watts with 380 watts redundant power	740 watts
Two AT-PWR1200	740 watts with 740 watts redundant power	1440 watts
Two PWR1200 V2	740 watts with 740 watts redundant power	1440 watts

Note

Do not install AT-PWR800 and AT-PWR800 V2 Power Supplies in the same switch. The power supplies are not compatible.

The maximum number of PoE devices the switch can support at one time is determined by its power budget and the power requirements of the devices. The switch can supply power to all of the devices as long as its power budget exceeds their total power requirements. If the switch

determines that the power requirements of the devices exceed its power budget, it denies power to one or more ports using a mechanism referred to as port prioritization.

To determine whether the power requirements of the PoE devices you plan to connect to the switch exceed its power budget, refer to their documentation for their power requirements and add the requirements together. The switch should be able to power all of the devices simultaneously as long as the total is below its power budget. If the total exceeds the available power budget, you should consider reducing the number of PoE devices so that all of the devices receive power. Otherwise, the switch powers a subset of the devices, based on port prioritization.

The switch can handle different power requirements on different ports. This enables you to connect different classes of PoE equipment to the ports on the switch.

Port Prioritization

If the power requirements of the powered devices exceed the switch's power budget, the switch denies power to some ports based on a system called port prioritization. You may use this mechanism to ensure that powered devices critical to the operations of your network are given preferential treatment by the switch in the distribution of power should the demands of the devices exceed the available capacity.

There are three priority levels:

- Critical
- High
- Low

Ports set to the Critical level, the highest priority level, are guaranteed power before any of the ports assigned to the other two priority levels. Ports assigned to the other priority levels receive power only if all the Critical ports are receiving power. Ports that are connected to your most critical powered devices should be assigned to this level. If there is not enough power to support all the ports set to the Critical priority level, power is provided to the ports based on port number, in ascending order.

The High level is the second highest level. Ports set to this level receive power only if all the ports set to the Critical level are already receiving power. If there is not enough power to support all of the ports set to the High priority level, power is provided to the ports based on port number, in ascending order.

The lowest priority level is Low. This is the default setting. Ports set to this level only receive power if all of the ports assigned to the other two levels are already receiving power. As with the other levels, if there is not enough power to support all of the ports set to the Low priority level, power is provided to the ports based on port number, in ascending order.

Power allocation is dynamic. Ports supplying power to powered devices may cease power transmission if the switch's power budget is at maximum usage and new powered devices, connected to ports with higher priorities, become active.

Wiring Implementation

The IEEE 802.3af standard defines two methods for the delivery of DC power over copper cable from a switch to the powered devices. These methods, known as modes A and B, identify the wires within the cable that carry the DC power from the switch to a powered device.

Copper cabling typically consists of eight wires. With 10Base-T and 100Base-TX devices, the wires connected to pins 1, 2, 3, and 6 on the RJ-45 connectors carry the network traffic while the wires connected to pins 4, 5, 7, and 8 are unused. With 1000Base-T devices, all eight wires are used to carry network data.

It takes four wires to deliver DC power to a PD. With Mode A, the power is delivered on pins 1, 2, 3, and 6. These are the same pins in 10Base-T and 100Base-TX devices that carry the network data. With mode B, the power is provided over the spare wires.

The ports on the AT-x930-28GPX and AT-x930-52GPX Switches deliver the power on pins 1, 2, 3, and 6, which corresponds to mode A in the IEEE 802.3af standard. Powered devices that comply with the IEEE 802.3af standard are required to support both power delivery methods. Legacy devices that do not comply with the standard will work with the switch if they are powered on pins 1, 2, 3, and 6.

SFP Ports

The twenty four ports on the AT-x930-28GSTX Switch support the following types of SFP transceivers:

- ❑ 100Base-FX, 1000Base-T, and 1000Base-SX/LX SFP transceivers
- ❑ Single-port BiDi 100Base-FX and 1000Base-LX SFP transceivers
- ❑ 1000Base-ZX SFP transceivers

The SFP ports are paired with the twenty four 10/100/1000Base-T copper ports. SFP port 1 is paired with copper port 1R, port 2 with copper port 2R, and so on. Only one port in a pair can be active at a time. For example, if you install a transceiver in SFP port 3 and connect it to an active network device, the switch deactivates copper port 3R.

Please review the following guidelines for using the SFP ports on the AT-x930-28GSTX Switch:

- ❑ Each SFP port is paired with a copper port.
- ❑ You may not change the port pairings.
- ❑ Only one port in a pair can be active at a time.
- ❑ The copper port is the default active port of a pair.
- ❑ An SFP port automatically becomes active when you install and connect an SFP transceiver to an active network device.
- ❑ The switch automatically reactivates the copper port of a pair when the transceiver in the corresponding SFP port loses its link to a remote network device. For example, the switch reactivates copper port 4R if you disconnect the fiber optic cable from a transceiver in SFP port 4.
- ❑ The letter “R” in the numbering of the copper ports on the front of the switch refers to the “redundant” function of the ports. The copper ports are only available when their corresponding SFP ports are empty or the SFP transceivers have not established links with network devices.

SFP+ Ports

The x930 Series has four SFP+ ports that support the following types of SFP 1000Mbps and SFP+ 10Gbps transceivers:

- ❑ 1000Base-SX/LX SFP transceivers
- ❑ Single-port BiDi 1000Base-LX SFP transceivers
- ❑ 1000Base-ZX SFP transceivers
- ❑ 10Gbps, 10GBase-SR/LR fiber optic transceivers
- ❑ 10Gbps AT-SP10TW direct connect twinax cables with SFP+ transceiver-style connectors
- ❑ 10Gbps AT-SP10TW1 (1 meter), AT-SP10TW3 (3 meters), and AT-SP10TW7 (7 meters) SFP+ direct attach cables

You may use the ports and transceivers to connect switches to other network devices over large distances, build high-speed backbone networks between network devices, or connect high-speed devices, such as servers, to your network.

The switches support a variety of short and long distance SFP and SFP+ modules. For a list of supported SFP modules, refer to the product's data sheet on the Allied Telesis website.

Note

The SFP+ ports do not support 100Mbps 100Base-FX transceivers.

Note

The ports support full-duplex mode only. They do not support half-duplex mode.

Note

SFP and SFP+ transceivers must be purchased separately.

S1 and S2 SFP+ Ports

SFP+ ports 27/S1 and 28/S2 on the front panels of the 28-port switches and 51/S1 and 52/S2 on the 52-port switches can be used either as follows:

- ❑ Regular Ethernet networking ports
- ❑ Trunk ports with the VCStack feature, in a stack of up to eight switches.

The switches of a VCStack act as a single virtual unit, synchronizing their actions so that switching operations, like spanning tree protocols, virtual LANs, and static port trunks, span across all of the units and ports. For more information, refer to Chapter 12, “Virtual Chassis Stacking Overview” on page 157.

Note

For a list of supported transceivers, refer to the product’s data sheet on the Allied Telesis web site.

Note

The S1 and S2 ports are the default stack trunk ports if the switch does not contain the AT-StackQS Card. The ports on the AT-StackQS Card are the default stack trunk ports if the card is installed. Refer to “Trunks of Ports S1 and S2” on page 160 for more information.

Ethernet Management Port (NET MGMT)

The NET MGMT port in the management panel of the switch is a separate routed eth0 interface. The interface is not part of the switching matrix of the Ethernet line cards, but the CPU on the controller card can route traffic in or out of the port.

Here are the guidelines to using the port:

- ❑ The port should only be used for initial configuration and maintenance access to the chassis.
- ❑ The NET MGMT port has a standard RJ-45 8-pin connector and operates at 10, 100, or 1000 Mbps in either half- or full-duplex mode.
- ❑ The cable requirements for the port are the same as the ports on the AT-x930-28GTX Switch, listed in “Cable Requirements” on page 37. For the port pinouts, refer to “RJ-45 Copper Port Pinouts” on page 238.
- ❑ The default setting for the port is Auto-Negotiation, which sets the speed and duplex mode automatically. You may disable Auto-Negotiation and configure the port manually.
- ❑ The wiring configuration of the NET MGMT port is set automatically with automatic MDIX detection. You may disable automatic MDIX detection and set the wiring configuration manually.
- ❑ The port is referred to as eth0 in the management software.

For instructions on how to configure the NET MGMT port, refer to the Software Reference for x930 Series Switches.

NET MGMT LEDs

The Network Management (NET MGMT) port on the switch has two Status LEDs, described in Table 6.

Table 6. NET MGMT Port LED

LED	State	Description
Left LED	Solid Green	The port has a valid 1000 Mbps link.
	Flashing Green	The port is transmitting or receiving data at 1000 Mbps.
Right LED	Solid Amber	The port has a valid 10 or 100 Mbps link.
	Flashing Amber	The port is transmitting or receiving data at 10 or 100 Mbps.

eco-friendly Button

The eco-friendly button on the front panel of the switch toggles the port LEDs on and off. You might turn off the LEDs to conserve electricity when you are not monitoring the device. You can also toggle the LEDs with the ECOFRIENDLY LED and NO ECOFRIENDLY LED commands in the Global Configuration mode of the command line interface. The switch is said to be operating in a low power mode when the LEDs are turned off.

Operating the switch in the low power mode with the LEDs turned off does not interfere with the network operations of the device.

The management software on the switch has a command that blinks the LEDs so that you can quickly and easily identify a specific unit among the devices in an equipment rack. It is the FINDME command. The command works on the switch even if the LEDs are turned off.

The Switch ID LED is always on, but it displays different information depending on whether the LEDs are on or off. When the LEDs are on, the ID LED displays the ID number of the switch. When the switch is operating in the low power mode with the LEDs off, the ID LED indicates whether the switch is a standalone unit or the master or member switch of a VCStack, as detailed in Figure 14 on page 55.

Note

Before checking or troubleshooting the network connections to the ports on the switch, you should always check to be sure that the LEDs are on by either pressing the eco-friendly button or issuing the ECOFRIENDLY LED and NO ECOFRIENDLY LED commands in the Global Configuration mode of the command line interface.

LEDs

Port LEDs are described in these sections:

- ❑ “Copper Port LEDs on non-PoE Switches,” next
- ❑ “Copper Port LEDs on PoE Switches” on page 49
- ❑ “SFP Port LEDs” on page 51
- ❑ “SFP+ Port LEDs” on page 52
- ❑ “S1 and S2 Stacking Port LEDs” on page 53

Copper Port LEDs on non-PoE Switches

This section applies to the LEDs on the copper ports on these non-PoE switches:

- ❑ AT-x930-28GTX
- ❑ AT-x930-28GSTX
- ❑ AT-x930-52GTX

The copper ports on these switches have two LEDs. The LEDs display link, activity and duplex mode information. Refer to Figure 8.

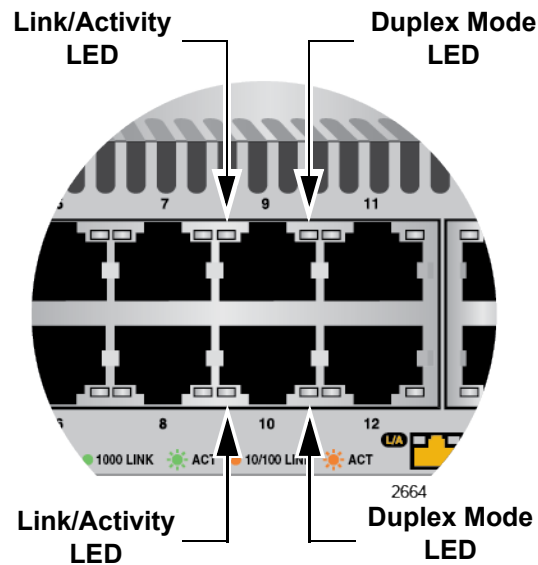


Figure 8. Copper Port LEDs on the non-PoE Switches

The LEDs are defined in Table 7 on page 49.

Table 7. LEDs on the 10/100/1000Base-T Ports on the AT-x930-28GTX, AT-x930-28GSTX and AT-x930-52GTX Switches

LED	State	Description
Link/ Activity LED	Solid Green	A port has established a 1000 Mbps link to a network device.
	Flashing Green	A port is transmitting or receiving data at 1000 Mbps.
	Solid Amber	A port has established a 10 or 100 Mbps link to a network device.
	Flashing Amber	A port is transmitting or receiving data at 10 or 100 Mbps.
	Off	A port has not established a link with another network device or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.
Duplex Mode LED	Green	A port is operating in full duplex mode.
	Amber	A port is operating in half-duplex mode at 10 or 100 Mbps. (Half-duplex mode does not apply to 1000 Mbps operation.)
	Flashing Amber	Collisions are occurring on a port operating at 10 or 100 Mbps.

Copper Port LEDs on PoE Switches

This section applies to the LEDs on the copper ports for these PoE switches:

- AT-x930-28GPX
- AT-x930-52GPX

The copper ports have two LEDs that display link, activity and PoE status. Refer to Figure 9 on page 50.

Note

To view the duplex mode of the ports on the PoE Switches, use the AlliedWare Plus management software.

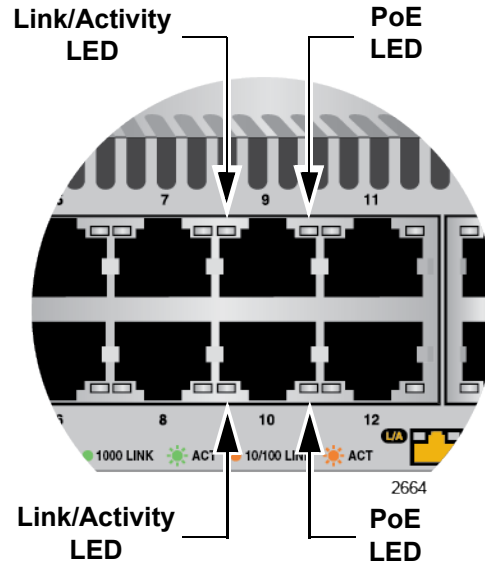


Figure 9. Copper Port LEDs on the PoE Switches

The LEDs are defined in Table 8.

Table 8. Copper Port LEDs on the PoE Switches

LED	State	Description
Link/ Activity LED	Solid Green	A port has established a 1000 Mbps link to a network device.
	Flashing Green	A port is transmitting or receiving data at 1000 Mbps.
	Solid Amber	A port has established a 10 or 100 Mbps link to a network device.
	Flashing Amber	A port is transmitting or receiving data at 10 or 100 Mbps.
	Off	A port has not established a link with another network device or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

Table 8. Copper Port LEDs on the PoE Switches (Continued)

LED	State	Description
PoE	Green	The switch detects a powered device (PD) on the port and is delivering power to it.
	Solid Amber	The switch has shut down PoE+ on the port because of a fault condition.
	Flashing Amber	The switch detects a PD on the port but is not delivering power to it because it has reached its maximum power budget.
	Off	This LED state can result from the following conditions: <ul style="list-style-type: none"> <input type="checkbox"/> The port is not connected to a PD. <input type="checkbox"/> The PD is powered off. <input type="checkbox"/> The port is disabled in the management software. <input type="checkbox"/> PoE is disabled on the port. <input type="checkbox"/> The LEDs on the Ethernet line cards are turned off. To turn on the LEDs, use the eco-friendly button.

SFP Port LEDs

The LEDs for the twenty four SFP ports on the AT-x930-28GSTX Switch are located between the ports. Refer to Figure 10. Each SFP port has one LED. The left-hand LED is for the top port and the right-hand LED is for the bottom port.

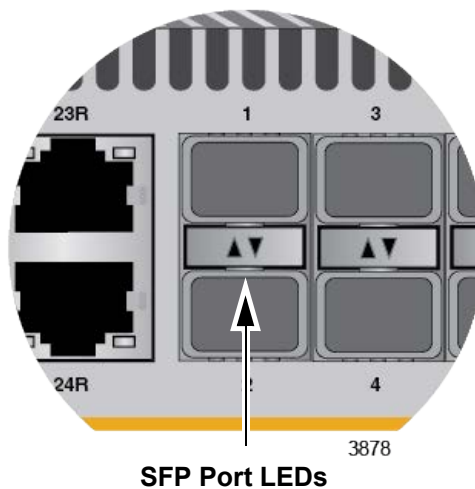


Figure 10. SFP Port LEDs

The possible states of the LEDs for the SFP ports are described in Table 9.

Table 9. SFP Port LEDs on the AT-x930-28GSTX Switch

LED	State	Description
Link/Activity	Solid green	The SFP transceiver in the port has established a link at 1000 Mbps to a network device.
	Flashing green	The SFP transceiver is receiving or transmitting packets to a network device at 1000 Mbps.
	Solid amber	The SFP transceiver in the port has established a link at 100 Mbps to a network device.
	Flashing amber	The SFP transceiver is receiving or transmitting packets to a network device at 100 Mbps.
	Off	The port is empty, the SFP transceiver has not established a link to a network device, or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

SFP+ Port LEDs

The LEDs for the SFP+ ports are located between the ports. Refer to Figure 11. Each SFP+ port has one LED. The left LED is for the top port and the right LED is for the bottom port.

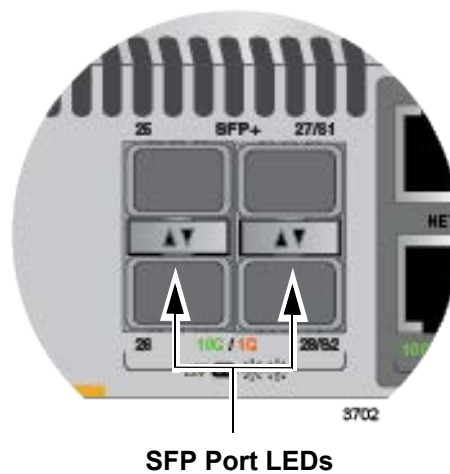


Figure 11. SFP+ Port LEDs

The LEDs are defined in Table 10.

Table 10. SFP+ Port LEDs

LED	State	Description
Link/Activity	Solid green	The SFP+ transceiver in the port has established a link at 10 Gbps to a network device.
	Flashing green	The SFP+ transceiver is receiving or transmitting packets to a network device at 10 Gbps.
	Solid amber	The SFP transceiver in the port has established a link at 1000 Mbps to a network device.
	Flashing amber	The SFP transceiver is receiving or transmitting packets to a network device at 1000 Mbps.
	Off	The port is empty, the SFP or SFP+ transceiver has not established a link to a network device, or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

S1 and S2 Stacking Port LEDs

SFP+ ports 27/S1 and 28/S2 on the 28-port switches and ports 51/S1 and 52/S2 on the 52-port switches may be used as stacking ports to build a VCStack of up to eight switches at 10Gbps speeds or four switches at 1000M speeds. For background information, refer to Chapter 12, “Virtual Chassis Stacking Overview” on page 157. Table 11 on page 54 defines the LED states when the ports are used to build a stack of switches.

Table 11. Stacking Port LEDs

LED	State	Description
Link/Activity	Off	The port is empty, the stacking transceiver has not established a link to a network device, or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.
	Solid green	The stacking transceiver has established a 10Gbps link to another switch in the stack.
	Flashing green	The stacking transceiver is receiving or transmitting packets.
	Solid amber	The stacking transceiver in the port has established a link at 1Gbps to a network device.
	Flashing amber	The stacking transceiver is receiving or transmitting packets to a network device at 1Gbps.

Switch ID LED

The Switch ID LED, shown in Figure 12, displays the ID number of the switch. A standalone switch has the ID number 0. Switches in a VCStack have the numbers 1 to 8.

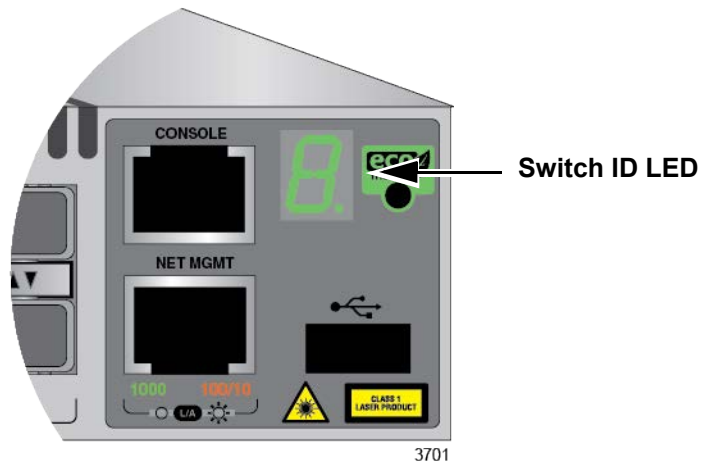


Figure 12. Switch ID LED

The states of the LED when the switch is not operating in the low power mode are shown in Figure 13.

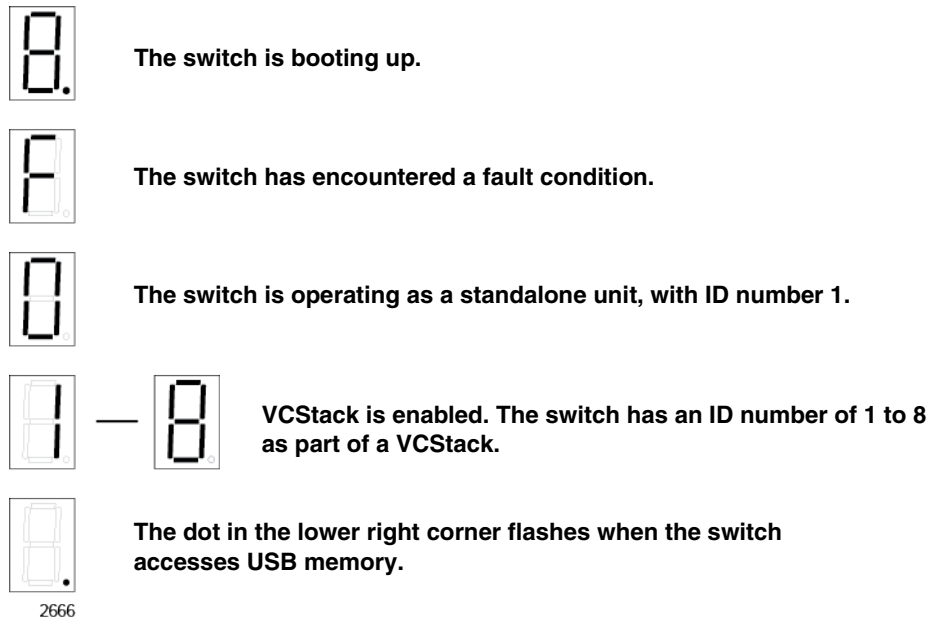


Figure 13. Switch ID LED States

The switch displays the letter “F” for fault on the ID LED if it detects one of the following problems:

- A cooling fan has failed.
- The internal temperature of the switch has exceeded the normal operating range and the switch may shut down.

Note

You can use the SHOW SYSTEM ENVIRONMENT command in the AlliedWare Plus software to identify the source of the problem.

The states of the LED when the switch is operating in the low power mode are shown in Figure 14.

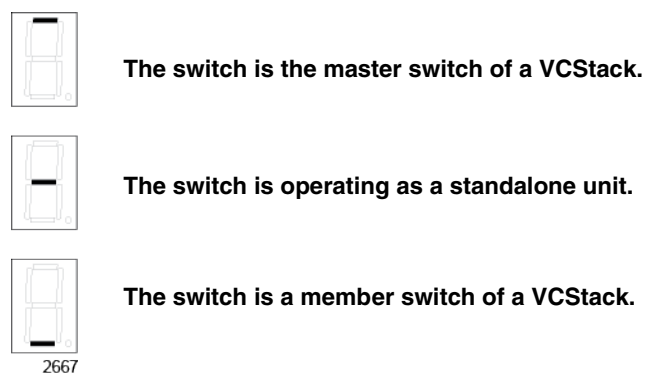


Figure 14. Switch ID LED in the Low Power Mode

USB Port

The management panel has a USB port. You may use the port to store configuration files on flash drives or to restore configuration files to switches whose settings have been lost or corrupted, or to quickly configure replacement units. You may also use the port and flash drives to update the management firmware on the switch.

The port is USB2.0 compatible.

Console Port

The serial Console port allows you to access the AlliedWare Plus management software so that you can configure the switch's features and parameter settings. Managing the switch through the Console port is commonly referred to as local management because you have to be at the switch's physical location to conduct this type of management session.

The Console port has an RJ-45 style (8P8C) connector with the following default serial RS-232 settings:

- Default baud rate: 9600 bps (Range is 9600 to 115200 bps)
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: None

Note

These settings are for a DEC VT100 or ANSI terminal, or an equivalent terminal emulation program.

You can manage the switch through the Console port using either of the following methods:

- Dumb terminal configured to the above serial settings.
- Personal computer with a terminal emulation program.

Both methods require a management cable to connect the terminal or personal computer to the Console port on the switch:

- For a dumb terminal that has an RJ-45 connector, use a straight-through Ethernet cable, with RJ-45 connectors at both ends.
- For a personal computer with a terminal emulation program and a USB port, Allied Telesis offers the AT-VT-Kit3 management cable. The cable is a USB-to-Serial converter with a USB-A male connector on one end and an RJ-45 female receptor on the other end. Refer to Figure 15 on page 58.



Figure 15. AT-VT-Kit3 Management Cable

The cable has two connectors:

- ❑ One USB-A male connector that connects to a USB port on your management workstation.
- ❑ One RJ-45 serial port that connects to the Console port on the switch with a straight-through Ethernet cable. Refer to Figure 16.



Figure 16. Local Management Session of the Switch with the VT-Kit3 Management Cable

For further instructions on the VT-Kit3 management cable, refer to the following product documents posted on the Allied Telesis web site at www.alliedtelesis.com:

- ❑ *VT-Kit3 Management Cable Installation Guide* (613-002684)
- ❑ *VT-Kit3 Management Cable Quick Installation Guide* (613-002685)
- ❑ *VT-Kit3 Management Cable Version 1.0.066 Driver Software Release Notes* (613-003128)

Note

The VT-Kit3 management cable is sold separately.

AT-StackQS and AT-x9EM/XT4 Cards

This section describes these two optional expansion cards for the x930 Series:

- ❑ AT-StackQS Card
- ❑ AT-x9EM/XT4 Card

The cards replace the AT-FAN09ADP Module in the rear panel of the switch. An x930 Switch can have only one expansion card. For installation instructions, refer to Chapter 4, “Installing AT-StackQS and AT-x9EM/XT4 Cards” on page 83.

AT-StackQS Card

The AT-StackQS Card has two ports for 40Gbps transceivers. Refer to Figure 17.

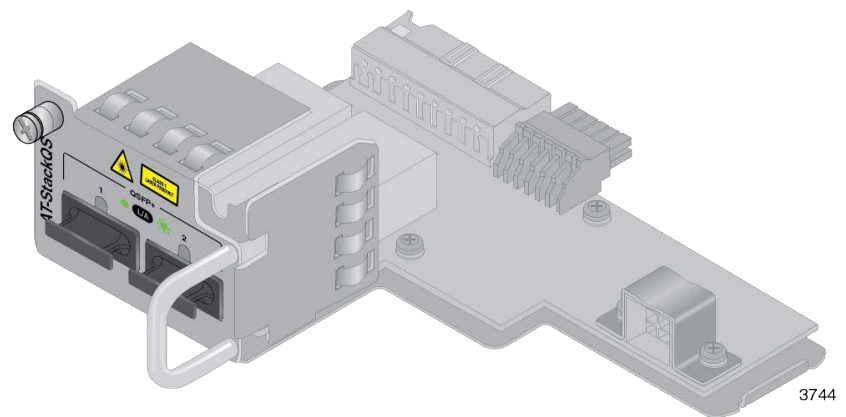


Figure 17. AT-StackQS Card

The card has three functions:

- ❑ The ports can be used as 40Gbps networking ports.
- ❑ The ports can be used as the stack trunk in a VCStack of up to eight switches. Refer to “Trunks of AT-StackQS Cards” on page 164.
- ❑ Each port can be converted from one 40Gbps port into four 10Gbps ports with breakout cables of 3 and 5 meters in length. Refer to Figure 18.

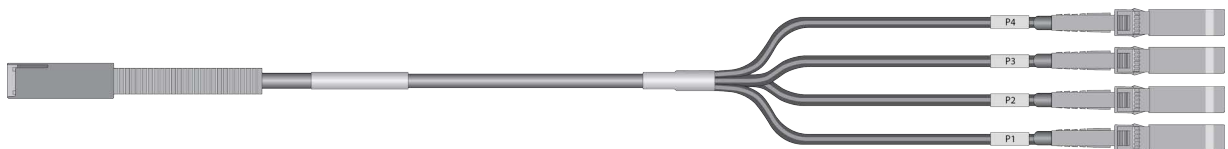


Figure 18. Copper Breakout Cable

Note

Breakout cables are supported in 26-port x930 Switches. They are not supported in 52-port switches.

Each transceiver port has one LED. The states of the LED are defined in Table 12.

Table 12. AT-StackQS Card LEDs

LED	State	Description
L/A (Link/Activity)	Off	The port is not connected to another network device, the device is not powered on, or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.
	Solid green	The port has established a 40Gbps link to network device.
	Flashing green	The port is transmitting or receiving network packets.

The LED states for breakout cables are described in Table 13.

Table 13. AT-StackQS Card LEDs with 10Gbps Breakout Cables

State	Description
Solid Amber	At least one of the four ports on the breakout cable has established a 10Gbps link to a network device.
Flashing Amber	At least one of the four ports on the breakout cable is sending or receiving data.
Off	<p>Possible causes of this state are listed here:</p> <ul style="list-style-type: none"> - The transceiver port is empty. - None of the ports on the breakout cable have established links to network devices. - The LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

AT-x9EM/XT4 Card

This card has four additional copper 1Gbps or 10Gbps ports for the switch. The ports have RJ-45 connectors for copper cables. Refer to Figure 19.

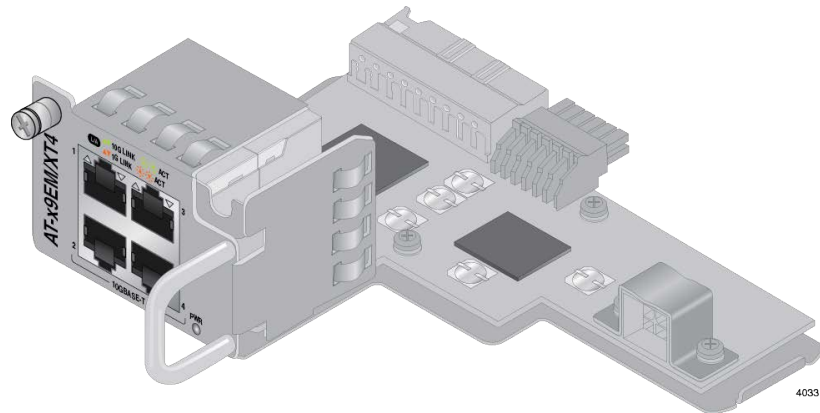


Figure 19. AT-x9EM/XT4 Card

Note

The card requires version 5.4.5-2 or later of the AlliedWare Plus management software. The instructions in “Displaying the Hardware Status and AlliedWare Plus Version Numbers” on page 185 explain how to determine the version number of the software on the switch.

The cable requirements for the ports are given in Table 14.

Table 14. Copper Cables for the AT-x9EM/XT4 Card

Port Speed	Cable Type	Maximum Operating Distance
1Gbps	Standard TIA/EIA 568-A-compliant Category 5 or TIA/EIA 568-B-compliant Enhanced Category 5 (Cat 5e) shielded or unshielded cabling	100 m (328 ft)
10Gbps	Standard TIA/EIA-568-C.1 compliant Category 6a (Cat 6a) shielded or unshielded cabling	100 m (328 ft)

Each port has one LED. The states of the LED are defined in Table 15.

Table 15. AT-x9EM/XT4 Card LEDs

LED	State	Description
L/A (Link/ Activity)	Off	The port is not connected to another network device, the device is not powered on, or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.
	Solid green	The port has established a 10Gbps link to a network device.
	Flashing green	The port is transmitting or receiving network traffic at 10Gbps.
	Solid amber	The port has established a 1Gbps link to a network device.
	Flashing amber	The port is transmitting or receiving network traffic at 1Gbps.

Chapter 2

Beginning the Installation


The chapter contains the following sections:

- “Reviewing Safety Precautions” on page 64
- “Choosing a Site for the Switch” on page 69
- “Unpacking the Switch” on page 70

Reviewing Safety Precautions


Please review the following safety precautions before beginning the installation procedure.

Note

Safety statements that have the  symbol are translated into multiple languages in the *Translated Safety Statements* document at www.alliedtelesis.com/support.



Warning

Class 1 Laser product.  L1




Warning

Laser Radiation.
Class 1M Laser product.



Warning

Do not stare into the laser beam.  L2




Warning

Do not look directly at the fiber optic ends or inspect the cable ends with an optical lens.  L6




Warning

To prevent electric shock, do not remove the cover. No user-serviceable parts inside. This unit contains hazardous voltages and should only be opened by a trained and qualified technician. To avoid the possibility of electric shock, disconnect electric power to the product before connecting or disconnecting the LAN cables.  E1



Warning

Do not work on equipment or cables during periods of lightning activity.  E2

**Warning**

Power cord is used as a disconnection device. To de-energize equipment, disconnect the power cord. ⚡ E3

**Warning**

Class I Equipment. This equipment must be earthed. The power plug must be connected to a properly wired earth ground socket outlet. An improperly wired socket outlet could place hazardous voltages on accessible metal parts. ⚡ E4

Note

Pluggable Equipment. The socket outlet shall be installed near the equipment and shall be easily accessible. ⚡ E5

**Caution**

Air vents must not be blocked and must have free access to the room ambient air for cooling. ⚡ E6

**Warning**

Operating Temperatures. All the switches are designed for a maximum ambient temperature of 45° C. ⚡ E52

Note

All Countries: Install product in accordance with local and National Electrical Codes. ⚡ E8

**Warning**

When installing this equipment, always ensure that the frame ground connection is installed first and disconnected last. ⚡ E11

**Warning**

Only trained and qualified personnel are allowed to install or replace this equipment. ⚡ E14



Caution

Circuit Overloading: Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern. *⌘* E21



Caution

Risk of explosion if battery is replaced by an incorrect type. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Attention: Le remplacement de la batterie par une batterie de type incorrect peut provoquer un danger d'explosion. La remplacer uniquement par une batterie du même type ou de type équivalent recommandée par le constructeur. Les batteries doivent être éliminées conformément aux instructions du constructeur. *⌘* E22



Warning

Mounting of the equipment in the rack should be such that a hazardous condition is not created due to uneven mechanical loading. *⌘* E25



Warning

The chassis may be heavy and awkward to lift. Allied Telesis recommends that you get assistance when mounting the chassis in an equipment rack. *⌘* E28

Note

Use dedicated power circuits or power conditioners to supply reliable electrical power to the device. *⌘* E27



Warning

This unit might have more than one power cord. To reduce the risk of electric shock, disconnect all power cords before servicing the unit. *⌘* E30

Note

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than the room ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (T_{mra}). ⚡ E35



Caution

Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised. ⚡ E36



Warning

Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuits (e.g., use of power strips). ⚡ E37



Warning

To reduce the risk of electric shock, the PoE ports on this product must not connect to cabling that is routed outside the building where this device is located. ⚡ E40



Warning

This product may have multiple AC power cords installed. To de-energize this equipment, disconnect all power cords from the device. ⚡ E41



Caution

An Energy Hazard exists inside this equipment. Do not insert hands or tools into open chassis slots or plugs. ⚡ E44




Warning

This equipment shall be installed in a Restricted Access location. ⚡ E45




Caution

The unit does not contain serviceable components. Please return damaged units for servicing.  E42



Warning

The temperature of an operational SFP or SFP+ transceiver may exceed 70° C (158° F). Exercise caution when removing or handling a transceiver with unprotected hands.  E43

Choosing a Site for the Switch

Observe these requirements when planning the installation of the switch.

- ❑ If you plan to install the switch in an equipment rack, check to be sure that the rack is safely secured so that it will not tip over. Devices in a rack should be installed starting at the bottom, with the heavier devices near the bottom of the rack.
- ❑ If you plan to install the switch on a table, check to be sure that the table is level and stable.
- ❑ The power outlet should be located near the switch and be easily accessible.
- ❑ The site should allow for easy access to the ports on the front of the switch, so that you can easily connect and disconnect cables, and view the port LEDs.
- ❑ The site should allow for adequate air flow around the unit and through the cooling vents on the front and rear panels. (The ventilation direction in units that have a cooling fan is from front to back, with the fan on the back panel drawing the air out of the unit.)
- ❑ The site should not expose the switch to moisture or water.
- ❑ The site should be a dust-free environment.
- ❑ The site should include dedicated power circuits or power conditioners to supply reliable electrical power to the network devices.
- ❑ Do not install the switch in a wiring or utility box because it will overheat and fail from inadequate airflow.




Warning


Switches should not be stacked on a table or desktop because that could present a personal safety hazard if you need to move or replace switches. *⚡* E91

Unpacking the Switch

Figure 20 lists the items in the accessory kit that comes with the switch. If any item is missing or damaged, contact your Allied Telesis sales representative for assistance.

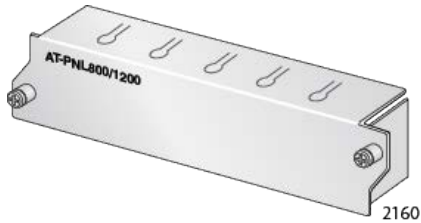


One AT-PNL800/1200 blank panel

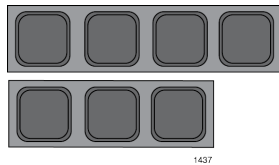

Seven bumper feet



Sixteen bracket screws

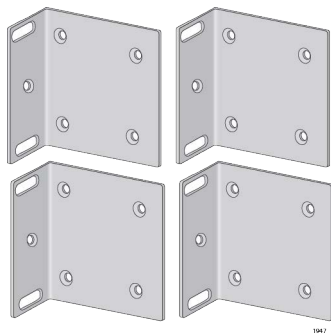


Four equipment rack or wall mounting brackets




Four dust covers in the SFP+ slots on the front panel

Figure 20. Accessory Kit


Figure 21 lists the items that are pre-installed in the switch.

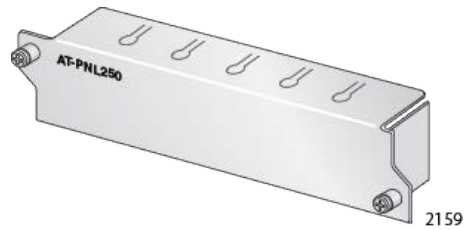

One AT-PNL250 blank panel on the back panel

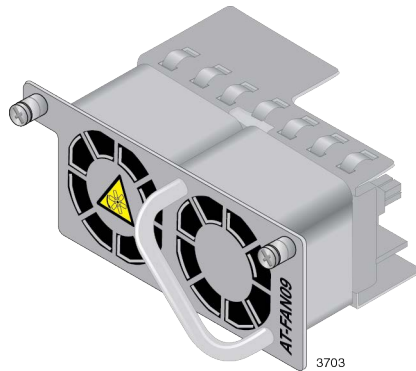

One AT-FAN09 Fan Module in the back panel

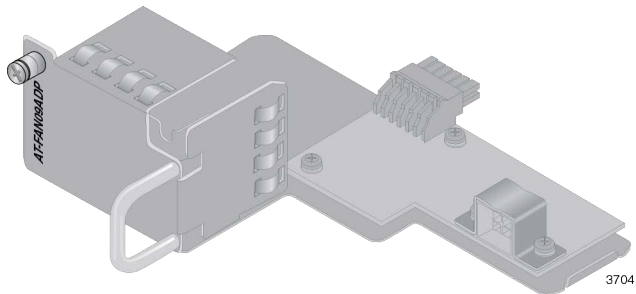

One AT-FAN09ADP Module in the back panel

Figure 21. Pre-installed Items

Note

You should retain the original packaging material in the event you need to return the unit to Allied Telesis.

Note

The product does not come with power supplies. Power supplies are ordered separately.

After unpacking the switch, go to Chapter 3, “Installing the Power Supplies” on page 73.

Chapter 3

Installing the Power Supplies

The sections in this chapter are listed here:

- ❑ “Installing the Power Supplies” on page 74
- ❑ “Installing a Blank Power Supply Slot Cover” on page 80

Installing the Power Supplies

This section contains the procedure for installing the power supplies in the switch. If you are planning to install the switch in an equipment rack, you may install the power supplies either before or after installing the device in the rack.



Caution

The device can be damaged by electrostatic discharge (ESD). Be sure to follow standard ESD protections procedures, such as wearing a wrist or foot strap, when installing the device. *ES* E106



Caution

The switch is heavy. Always ask for assistance before moving or lifting the device so as to avoid injuring yourself or damaging the equipment.

The illustrations in the following procedure show the AT-PWR800 Power Supply. The procedure is the same for all power supplies.

To install the power supplies, perform the following procedure:

1. Place the switch on a level, secure table or desk.
2. Use a cross-head screwdriver to loosen the two captive screws on the blank panel covering power supply slot B on the back panel and remove it from the switch. Refer to Figure 22 on page 75.

Note

Allied Telesis recommends removing the blank panel from slot B even if you are installing only one power supply, You reinstall the panel later in the procedure.

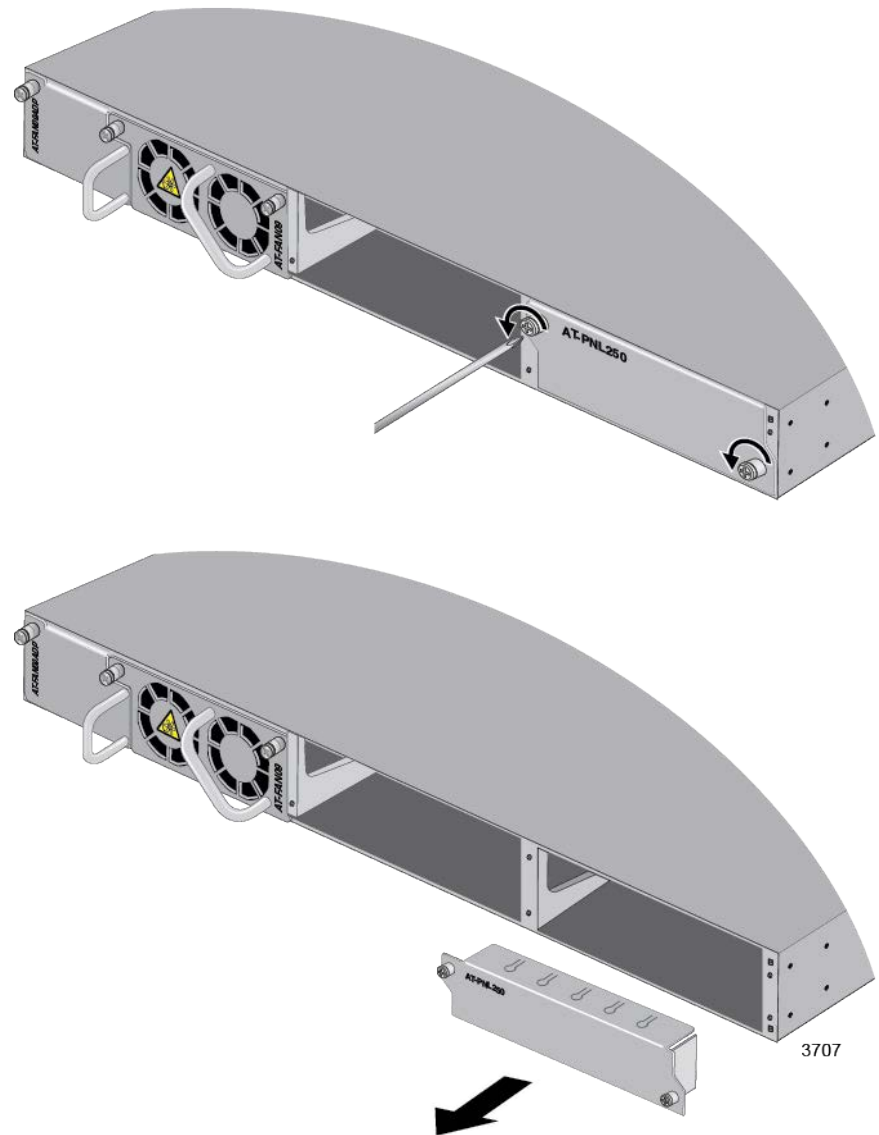


Figure 22. Removing the Blank Panel

3. Unpack the power supply from its shipping container.



Caution

The device is heavy. Use both hands to lift it. You might injure yourself or damage the device if you drop it. ⚡ E94

4. Check the shipping container for the accessory items. Refer to Table 16 and Figure 23.

Table 16. Power Supply Accessory Items

Power Supply	Retaining Clip	Power Cord
AT-PWR150	yes	yes
AT-PWR250 V2	yes	yes
AT-PWR250-80	no	no
AT-PWR800	yes	yes
AT-PWR800 V2	yes	yes
AT-PWR1200	no	yes
AT-PWR1200 V2	no	yes



Figure 23. Power Supply Accessory Items

Note

The DC AT-PWR250-80 Power Supply does not come with any accessory items.

Note

The power cord that comes with the AT-PWR1200 and AT-PWR1200 V2 Power Supplies for installations in North America has a 20 Amp, 125 V NEMA 5-20P plug that is only compatible with an NEMA 5-20R receptacle.

- Slide the new power supply into slot A or B in the back panel of the switch. Refer to Figure 24 on page 77.

Please review the following guidelines before installing the module:

- If you are installing only one power supply, you may install it in either slot A or B. Slot A is recommended.
- The handle on the power supply should be on the left as you install the module in the switch. Refer to Figure 24 on page 77.

- ❑ When installed, the AT-PWR1200 and AT-PWR1200 V2 Power Supplies extend 5.6 cm (2.2 in.) from the rear panel of the chassis.
- ❑ The power supply is fully installed in the slot when the tabs with the captive screws are flush with the back panel of the switch. Light pressure may be required to properly seat the module on the power connector inside the chassis.

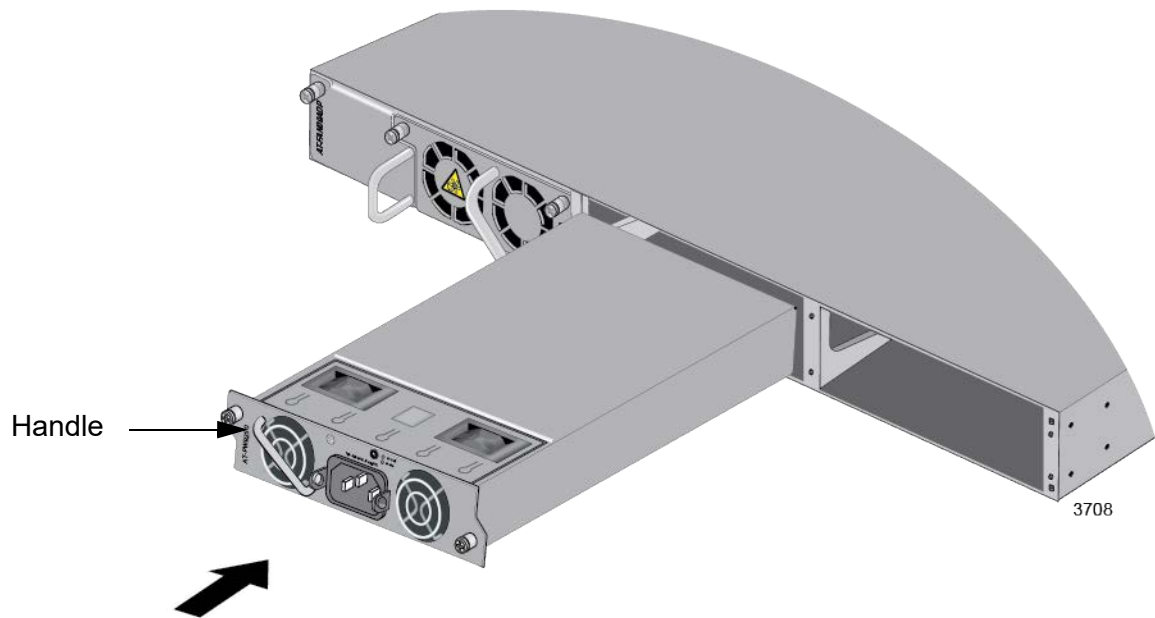


Figure 24. Installing a Power Supply



Caution

Do not use excessive force when seating the module, because this may damage the system or the module. If the module resists seating, remove it from the system, realign it, and try again. ⚡ E47



Caution

The power supply is not hot-swappable. It might be damaged if it is installed in the switch when powered on. Refer to Figure 25 on page 78.

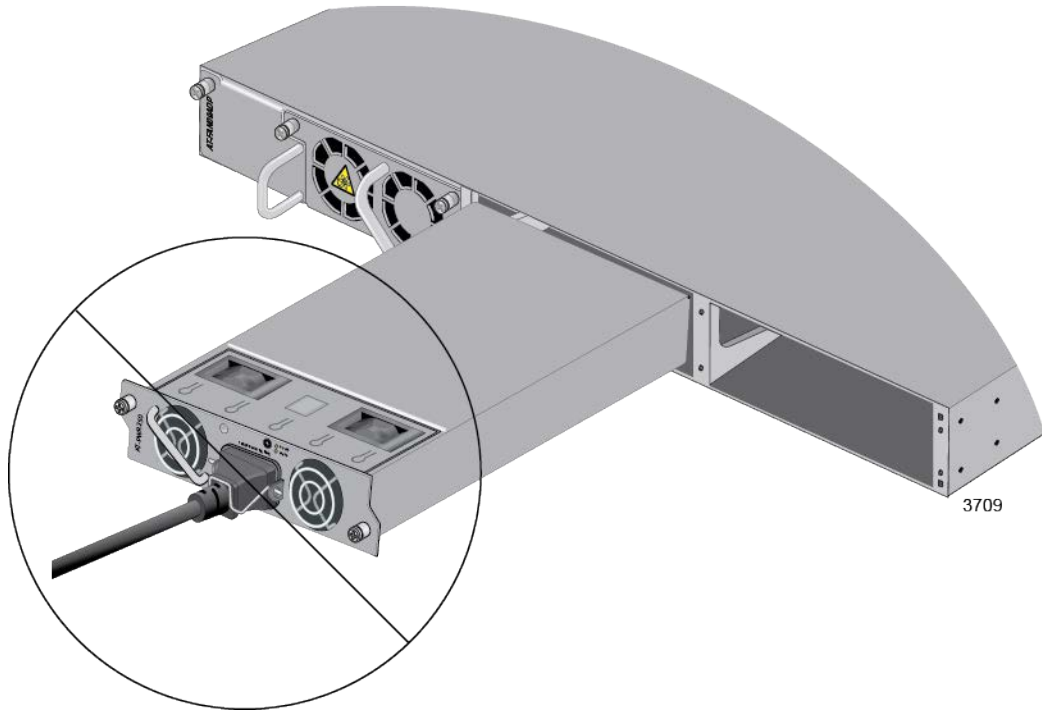


Figure 25. Improper Installation of a Power Supply

6. Secure the power supply to the switch by tightening the two captive screws with a cross-head screwdriver. Refer to Figure 26.

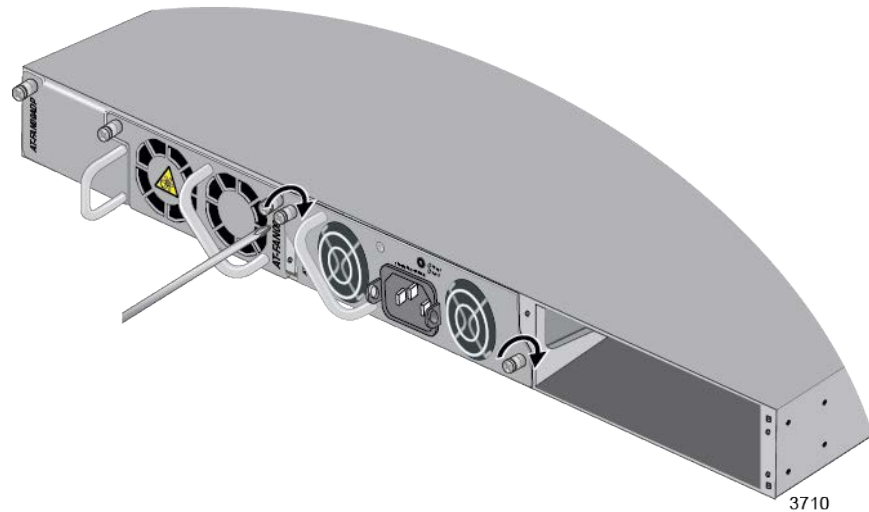


Figure 26. Tightening the Captive Screws on the Power Supply

7. If the power supply came with a power cord retaining clip, press the sides of the clip inward and insert the two ends into the holes on the AC socket. Refer to Figure 27.

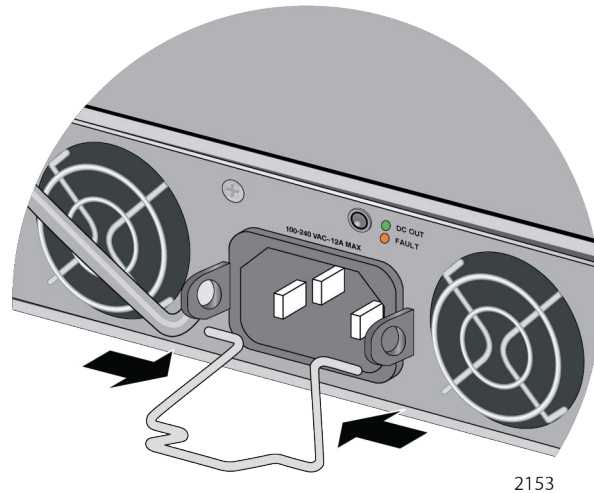


Figure 27. Installing the Power Cord Retaining Clip

8. To install a second power supply, repeat this procedure, starting with step 3.
9. If you installed only one power supply in the switch, perform the procedure in “Installing a Blank Power Supply Slot Cover” on page 80.
10. If you purchased an expansion module for the switch, refer to Chapter 4, “Installing AT-StackQS and AT-x9EM/XT4 Cards” on page 83.
11. Go one of the following installation chapters:
 - ❑ Chapter 5, “Installing the Switch on a Table” on page 93.
 - ❑ Chapter 6, “Installing the Switch in an Equipment Rack” on page 95.
 - ❑ Chapter 7, “Installing the Switch on a Wall” on page 101.

Installing a Blank Power Supply Slot Cover

If you installed only one power supply in the switch, perform this procedure to reinstall the blank panel over the empty power supply slot.

To install the blank cover, perform the following procedure:

1. Position the appropriate blank panel over the slot:
 - Use the AT-PNL250 Blank Panel if the switch has only one of these power supplies:
 - AT-PWR150
 - AT-PWR250 V2
 - AT-PWR250-80
 - AT-PWR800 V2
 - Use the AT-PNL800/1200 Blank Panel if the switch has only one of these power supplies:
 - AT-PWR800
 - AT-PWR1200
 - AT-PWR1200 V2

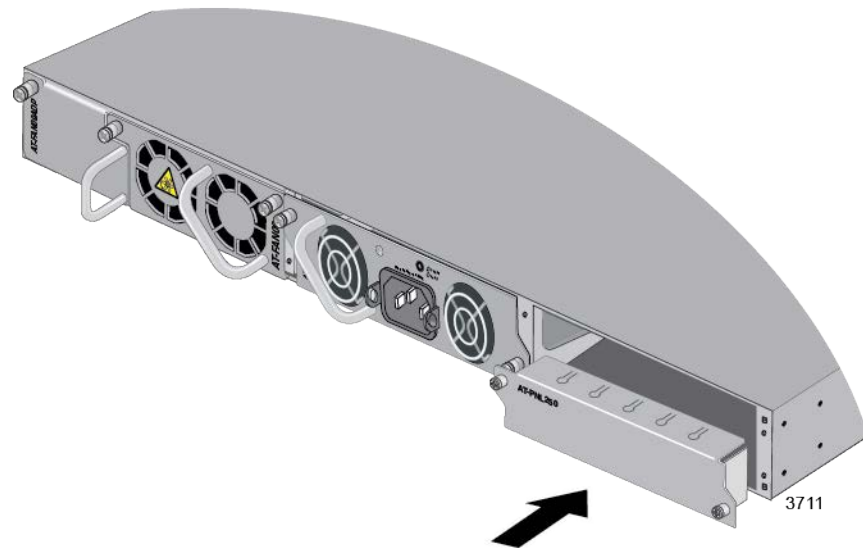


Figure 28. Installing the Blank Panel on a Power Supply Slot

2. Tighten the two captive screws with a cross-head screwdriver to secure the panel to the switch. Refer to Figure 29 on page 81.

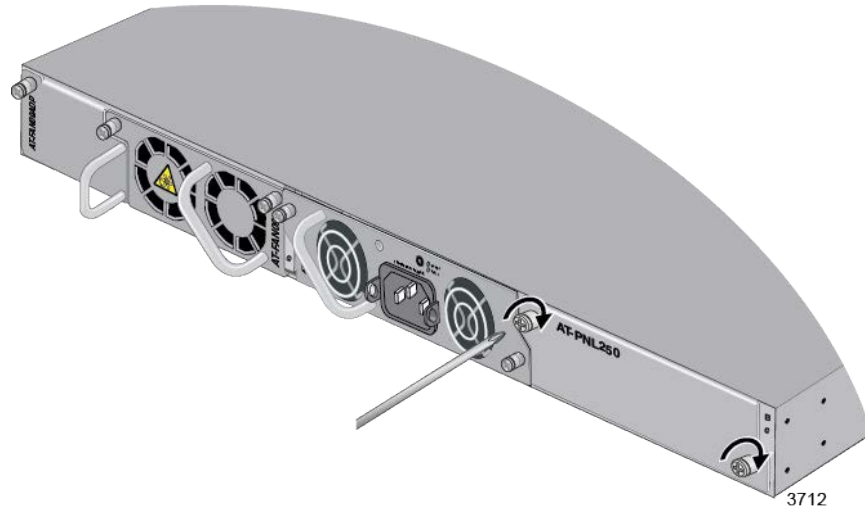


Figure 29. Tightening the Captive Screws on the Blank Panel for the Power Supply Slot

3. If you purchased an expansion module for the switch, refer to Chapter 4, “Installing AT-StackQS and AT-x9EM/XT4 Cards” on page 83.
4. Otherwise, go to one of the following installation chapters:
 - ❑ Chapter 5, “Installing the Switch on a Table” on page 93.
 - ❑ Chapter 6, “Installing the Switch in an Equipment Rack” on page 95.
 - ❑ Chapter 7, “Installing the Switch on a Wall” on page 101.

Chapter 4

Installing AT-StackQS and AT-x9EM/XT4 Cards

This chapter contains the installation instructions for AT-StackQS and AT-x9EM/XT4 Cards. For descriptions, refer to “AT-StackQS Card” on page 59 and “AT-x9EM/XT4 Card” on page 61. The sections are listed here:

- “Guidelines” on page 84
- “Installing the Card” on page 85

Guidelines

Please observe the following guidelines when handling AT-StackQS and AT-x9EM/XT4 Cards.

- Wear an anti-static device when handling the card.



Caution

The device can be damaged by electrostatic discharge (ESD). Be sure to follow standard ESD protections procedures, such as wearing a wrist or foot strap, when installing the device. *E106*

- Hold the card by its faceplate or edges.
- Never touch the electronic components on the top or bottom of the card.
- Do not remove the card from its anti-static bag until you are ready to install it in the switch.
- If you need to remove the card from the switch, immediately return it in its anti-static bag and packaging container.

Installing the Card

This section contains the procedure for installing AT-StackQS and AT-x9EM/XT4 Cards in x930 Switches. The illustrations show the AT-StackQS Card. The procedure is the same for the AT-x9EM/XT4 Card.

Note

The card is hot-swappable. However, Allied Telesis recommends powering off the switch before installing the card because the installation procedure requires temporarily removing the AT-FAN09 Fan Module.

Note

If the switch is powered on, power it off by performing step 1. If the switch is already powered off, start with step 2.

To install the AT-StackQS or AT-x9EM/XT4 Card, perform the following procedure:

1. If the switch is powered on, power it off by doing one of the following:
 - If the switch has AC power supplies, disconnect the power cords from the AC power sources.
 - If the switch has DC AT-PWR250-80 Power Supplies, either turn Off the power switches on the power supplies or power off the DC circuits.

**Warning**

This unit might have more than one power cord. To reduce the risk of electric shock, disconnect all power cords before servicing the unit. ⚡
E30

2. Place the switch on a table, with the back panel facing you.

3. Loosen the two captive screws on the AT-FAN09 Fan Module with a cross-head screwdriver. Refer to Figure 30.

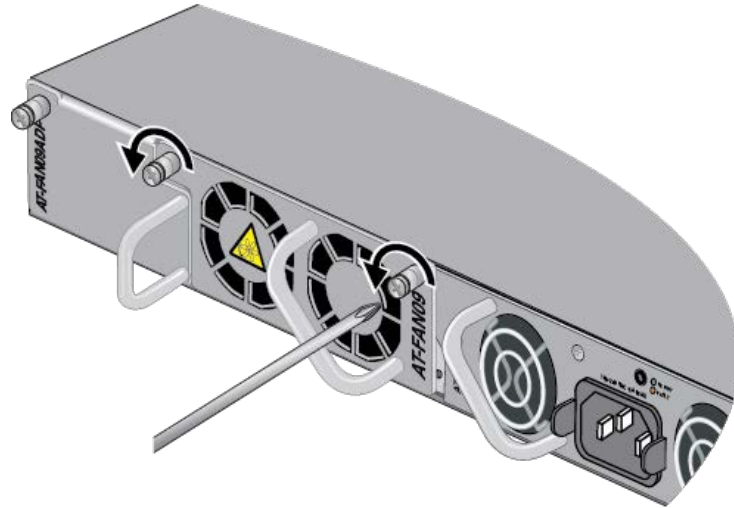


Figure 30. Loosening the Two Captive Screws on the AT-FAN09 Module

4. Carefully remove the AT-FAN09 Module from the switch. Refer to Figure 31.

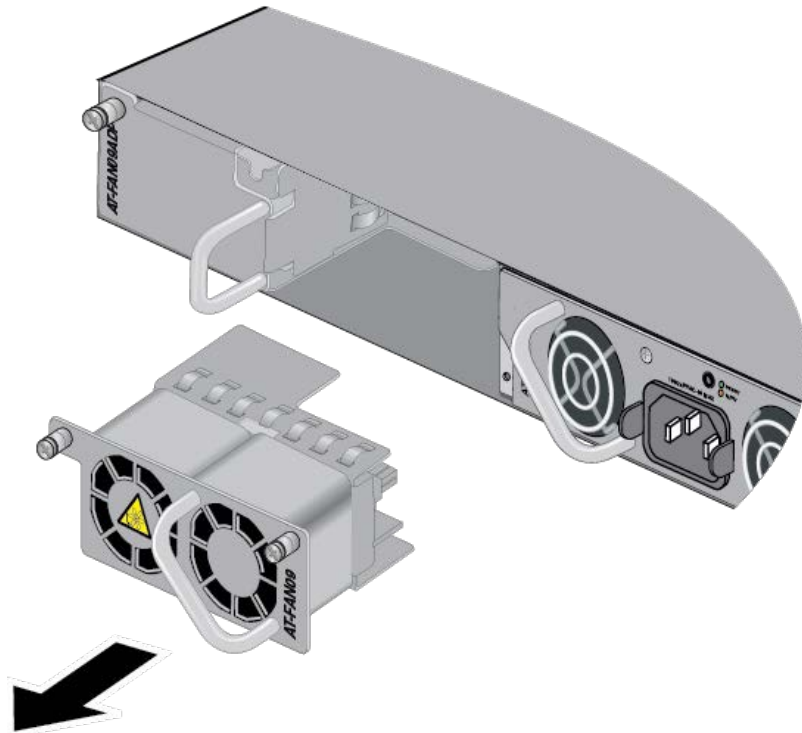


Figure 31. Removing the AT-FAN09 Module

5. Use a cross-head screwdriver to loosen the captive screw on the AT-FAN09ADP Module. Refer to Figure 32.

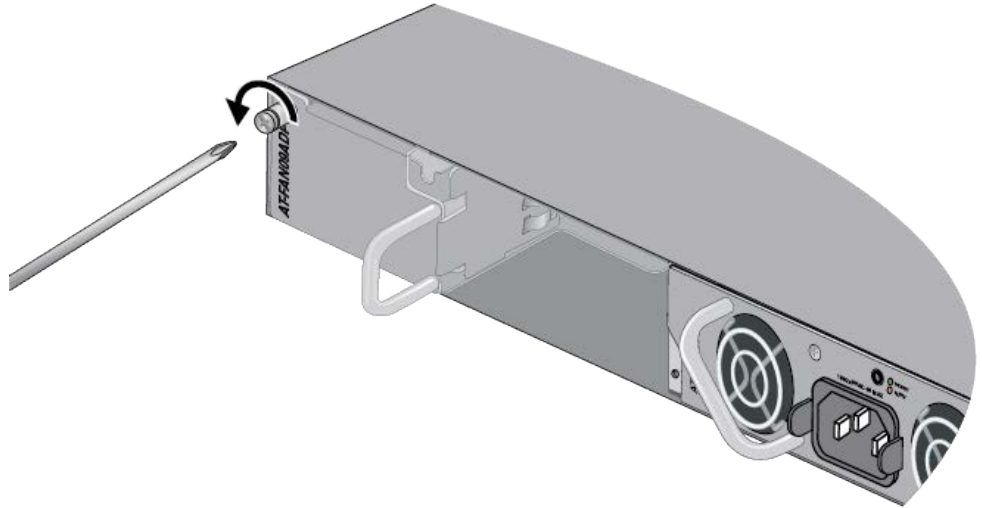


Figure 32. Loosening the Captive Screw on the AT-FAN09ADP Module

6. Carefully remove the AT-FAN09ADP Module from the switch. Refer to Figure 33.

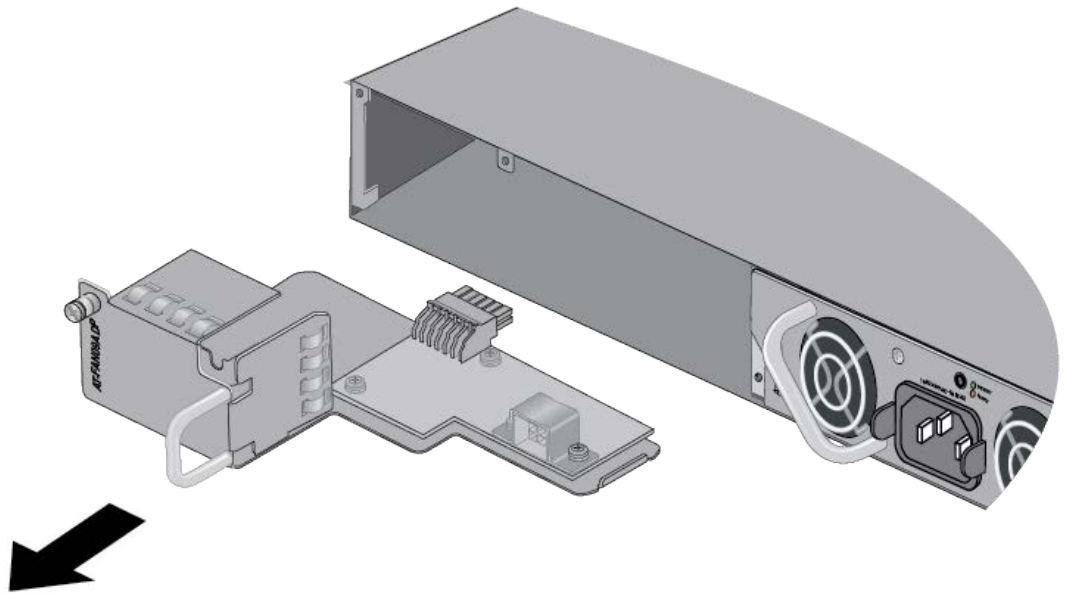


Figure 33. Removing the AT-FAN09ADP Module

7. Remove the AT-StackQS or AT-x9EM/XT4 Card from its anti-static bag. Refer to Figure 34 on page 88.



Figure 34. Removing the Card from the Anti-static Bag

8. Carefully align the card in the slot and slide it into the switch. The left edge of the card fits into the slot in the bottom corner of the switch. Refer to Figure 35 on page 89.

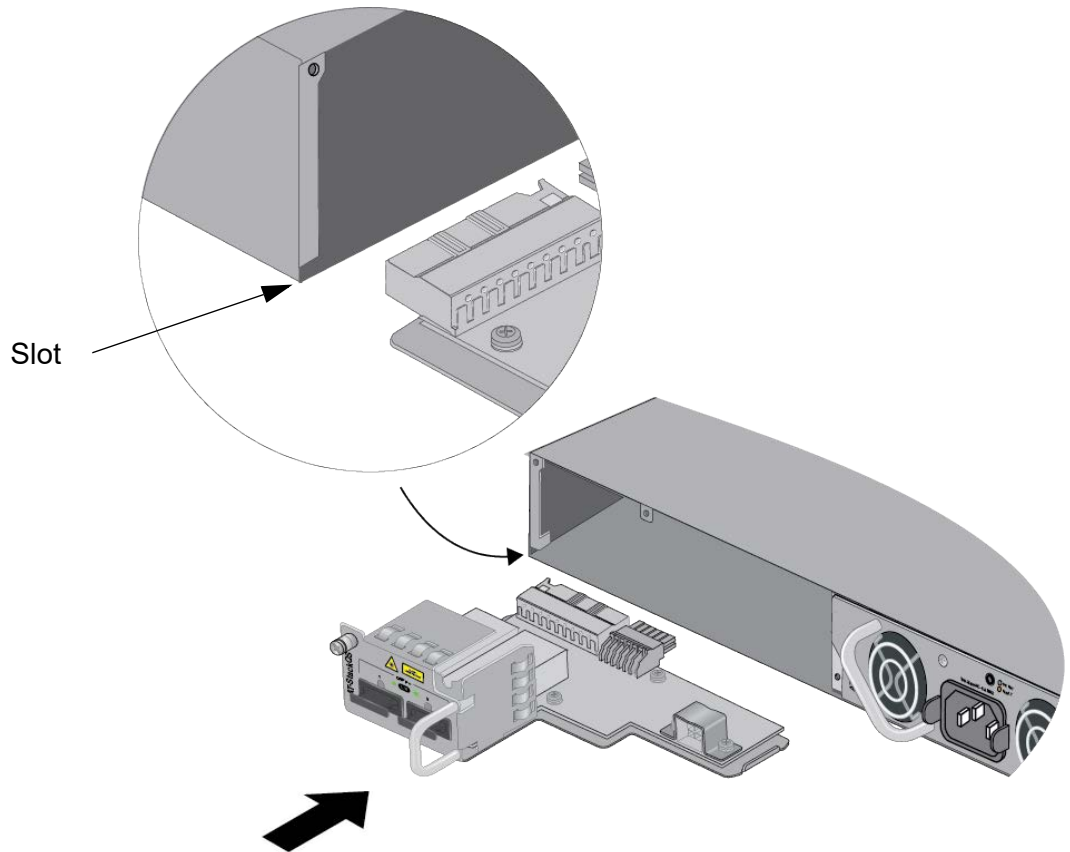


Figure 35. Aligning the Card in the Slot

9. When you feel the card make contact with the connector inside the switch, gently press on the handle to seat it on the connector. Refer to Figure 36.

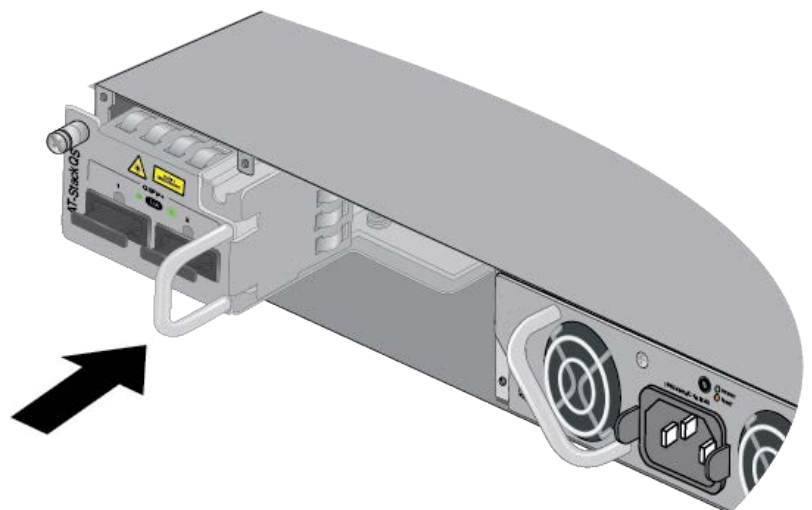


Figure 36. Seating the Card in the Switch

10. Tighten the captive screw to secure the card in the switch. Refer to Figure 37.

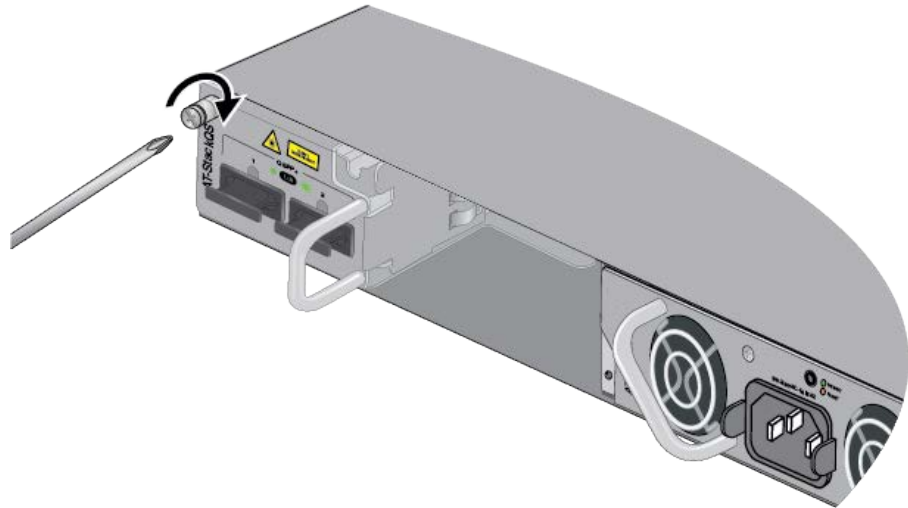


Figure 37. Tightening the Captive Screw on the Card

11. Align the AT-FAN09 Module in the slot and carefully slide it into the switch. Refer to Figure 38.

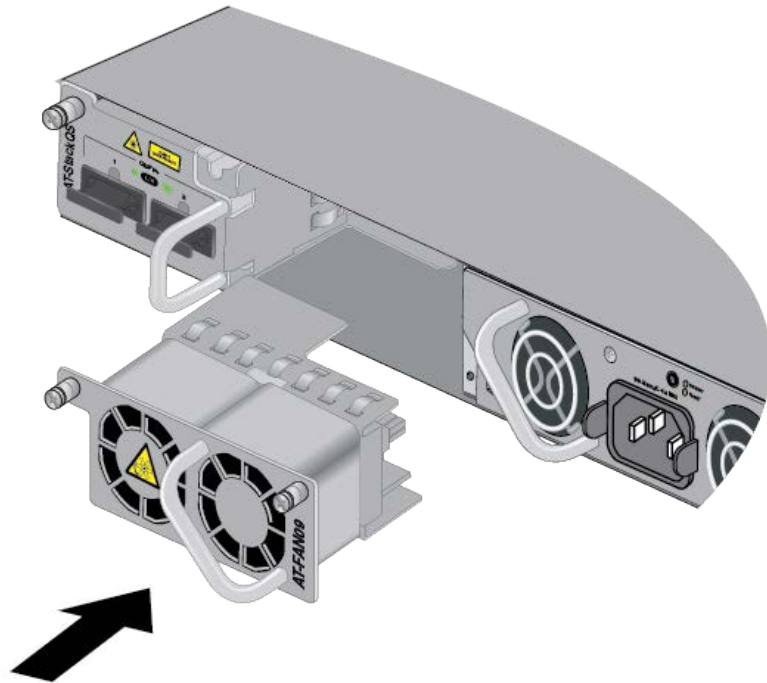


Figure 38. Aligning the AT-FAN09 Module in the Slot

12. Tighten the two captive screws on the AT-FAN09 Module to secure it in the switch. Refer to Figure 39 on page 91.

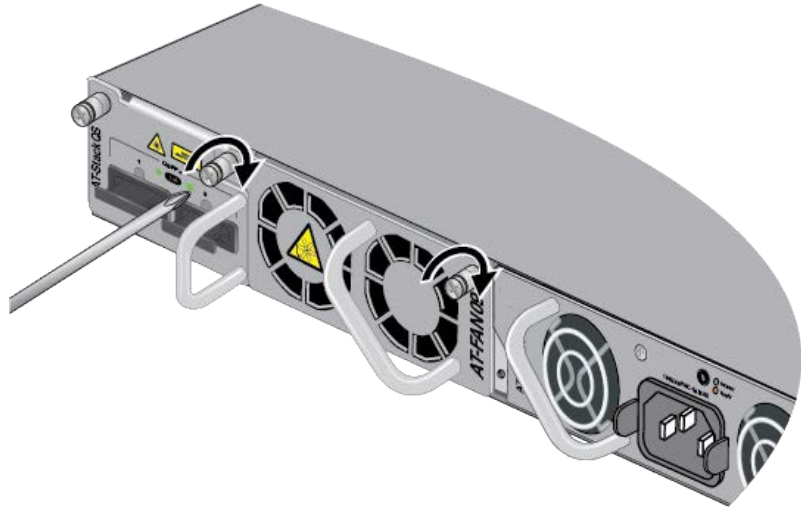


Figure 39. Tightening the Two Captive Screws on the AT-FAN09 Module

13. Store the AT-FAN09ADP Module in an anti-static bag and place it in a safe location. Refer to Figure 40.

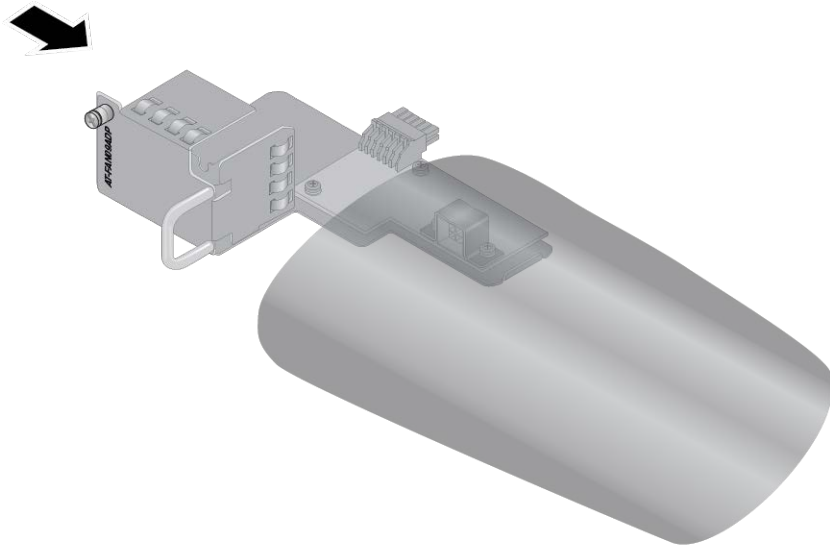


Figure 40. Storing the AT-FAN09ADP Module in an Anti-static Bag

14. Perform one of the following installation procedures:

- Chapter 5, “Installing the Switch on a Table” on page 93.
- Chapter 6, “Installing the Switch in an Equipment Rack” on page 95.
- Chapter 7, “Installing the Switch on a Wall” on page 101.

Chapter 5

Installing the Switch on a Table

To install the switch on a table, perform the following procedure:



Warning

Switches should not be stacked on a table or desktop because that could present a personal safety hazard if you need to move or replace switches. *See* E91




Warning

The switch is heavy. Always ask for assistance when moving or lifting the device so as to avoid injuring yourself or damaging the equipment.

1. Review the procedure in “Choosing a Site for the Switch” on page 69 to verify that the selected site is suitable for the unit.
2. Check to be sure that the table or desk is strong enough to support the weight of the switch.
3. Check to be sure that all of the appropriate components are included in the shipping container. Refer to “Unpacking the Switch” on page 70.
4. Place the switch upside down on a level, secure table or desk.
5. Install the seven bumper feet to the bottom of the switch, as shown in Figure 41.

Three bumper feet should be installed along the front edge of the bottom panel and four feet along the rear edge.

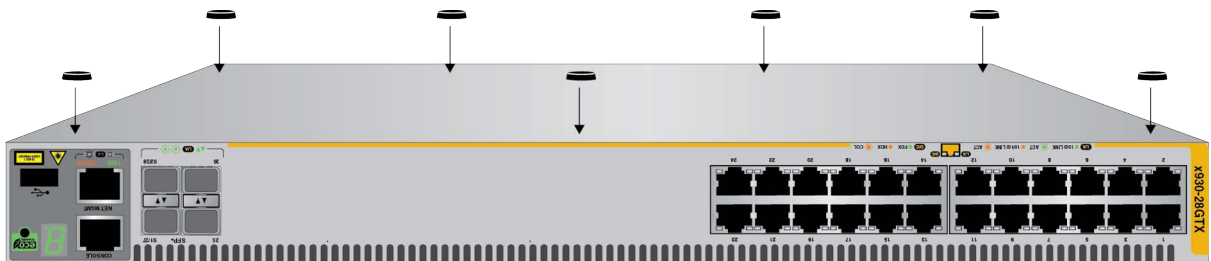

3706

Figure 41. Installing the Bumper Feet

Note

The bumper feet are only to be used if you are installing the switch on a table. Do not install the bumper feet if you are installing the switch in an equipment rack or on a wall.

6. Turn the chassis over.
7. Do one of the following:
 - ❑ If you have not installed the power supplies, go to Chapter 3, “Installing the Power Supplies” on page 73.
 - ❑ If the switch contains the AT-PWR250-80 DC Power Supply, go to Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.
 - ❑ If you are installing the switch as a standalone device, go to Chapter 9, “Powering On the Switch” on page 123.
 - ❑ If you are installing two or more switches as a VCStack, physically install the other switches by repeating the installation chapters in this section, and then go to Chapter 12, “Virtual Chassis Stacking Overview” on page 157.

Chapter 6

Installing the Switch in an Equipment Rack

This chapter contains the instructions for installing the switch in an equipment rack. The procedures in this chapter are listed here:

- “Required Items” on page 96
- “Installing the Switch in an Equipment Rack” on page 97

Required Items

This procedure requires the following items:

- Two equipment rack brackets (included with the switch)
- Eight bracket screws (included with the switch)
- Cross-head screwdriver (not provided)
- Four standard equipment rack screws (not provided)

Note

The switch comes with four equipment rack brackets and sixteen screws. Two brackets and eight screws are used to install the unit in an equipment rack. The extra brackets and screws are for installing the device on a wall.

Installing the Switch in an Equipment Rack

To install the switch in a 19-inch equipment rack, perform the following procedure:

Installation guidelines may be found in “Choosing a Site for the Switch” on page 69. Here is the procedure for installing the switch in a 19-inch equipment rack.



Caution

The chassis may be heavy and awkward to lift. Allied Telesis recommends that you get assistance when mounting the chassis in an equipment rack. *See* E28

Note

The x930 Series can be installed in an equipment rack with the AT-RKMT-SL01 Sliding Rack Mount Kit. For instructions, refer to the AT-RKMT-SL01 Sliding Rack Mount Kit Installation Guide.

1. Place the unit on a level, secure surface.
2. Attach two of the rack mount brackets to the sides of the switch using eight of the bracket screws included with the unit. Figure 42 on page 98 and Figure 43 on page 99 illustrate the four possible bracket positions.



Figure 42. Attaching the Equipment Rack Brackets

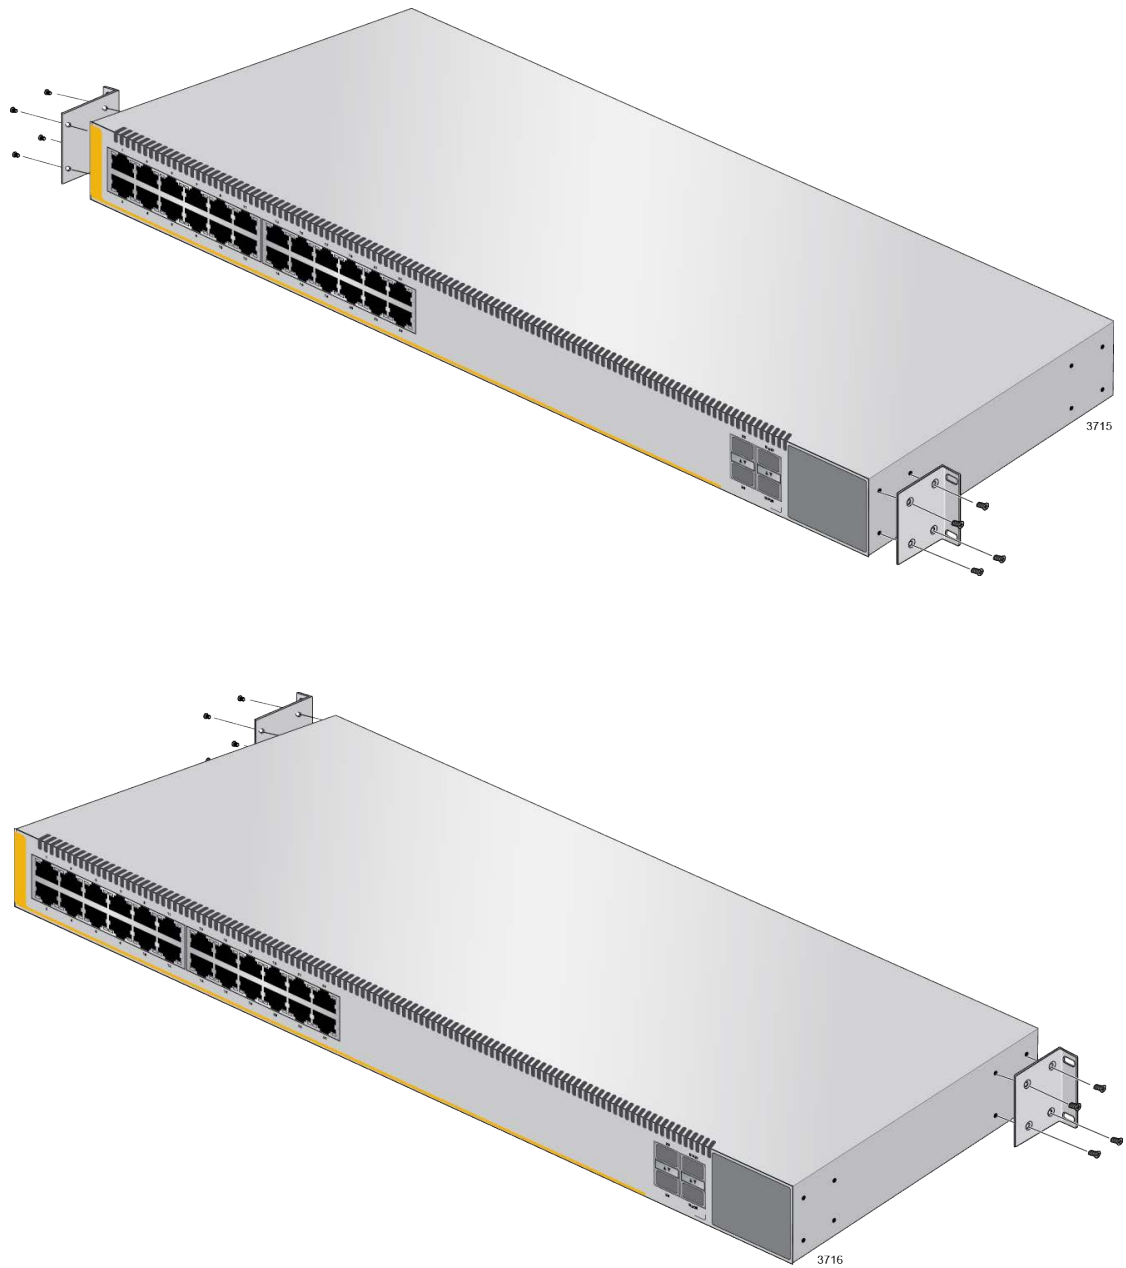


Figure 43. Attaching the Equipment Rack Brackets (Continued)

3. Have two people hold the switch in the equipment rack while you secure it using standard equipment rack screws (not provided). Refer to Figure 44 on page 100.



Figure 44. Installing the Switch in an Equipment Rack

4. Do one of the following:
 - ❑ If you have not installed the power supplies, go to Chapter 3, “Installing the Power Supplies” on page 73.
 - ❑ If the switch contains the AT-PWR250-80 DC Power Supply, go to Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.
 - ❑ If you are installing the switch as a standalone device, go to Chapter 9, “Powering On the Switch” on page 123.
 - ❑ If you are installing two or more switches as a VCStack, physically install the other switches by repeating the installation chapters in this section, and then go to Chapter 12, “Virtual Chassis Stacking Overview” on page 157.

Chapter 7

Installing the Switch on a Wall

The procedures in this chapter are listed here:

- ❑ “Switch Orientation on the Wall” on page 102
- ❑ “Recommended Minimum Wall Area Dimensions” on page 103
- ❑ “Plywood Base for a Wall with Wooden Studs” on page 105
- ❑ “Installation Guidelines” on page 107
- ❑ “Installing the Plywood Base” on page 109
- ❑ “Installing the Switch on the Plywood Base” on page 110
- ❑ “Installing the Switch on a Concrete Wall” on page 113

Switch Orientation on the Wall

You may install the switch on a wall with the front panel facing to the left or right, as shown in Figure 45. Do not install it with the front panel facing to the top or bottom.

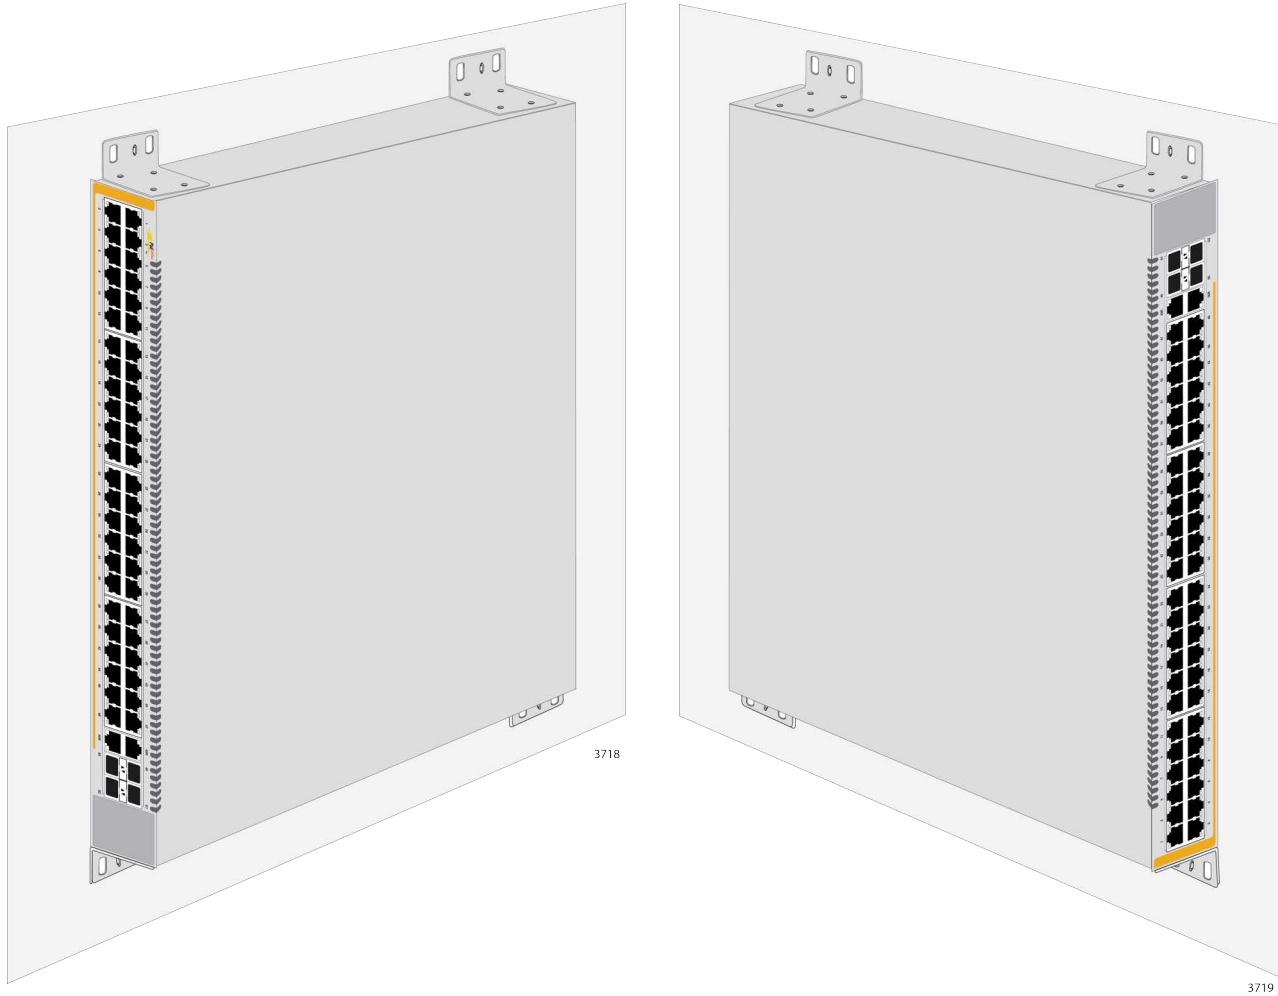



Figure 45. Positions of the Switch on the Wall

Recommended Minimum Wall Area Dimensions

The recommended minimum dimensions for the reserved wall area for the switch are listed here:


- Width: 68.0 centimeters (27 inches)
- Height: 58.4 centimeters (23 inches)

You should position the switch in the reserved wall area such that the front panel has more space than the rear panel. This may make it easier for you to service and maintain the unit. Figure 46 and Figure 47 on page 104 illustrate the recommended positions of the switch in the reserved area when the front panel is on the left and right, respectively.

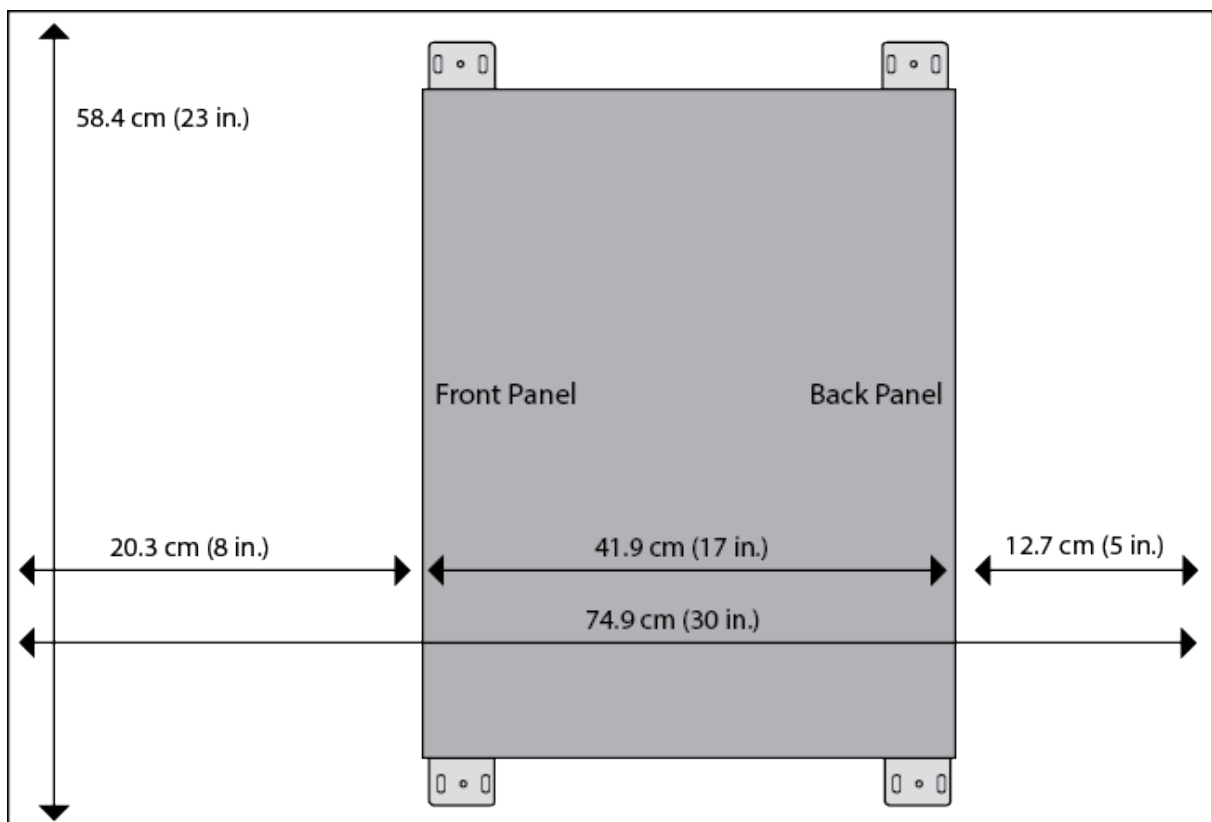

3720

Figure 46. Minimum Wall Area Dimensions with the Front Panel on the Left

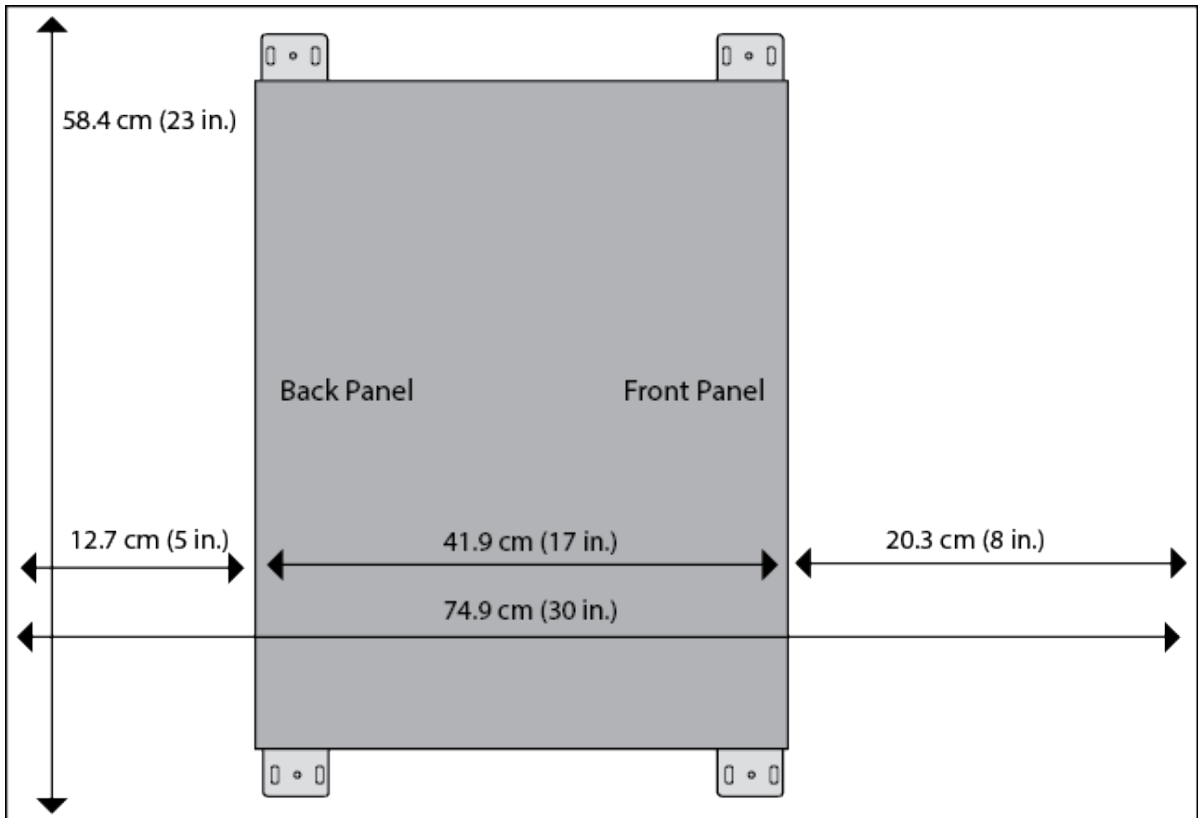

3721

Figure 47. Minimum Wall Area Dimensions with the Front Panel on the Right

Plywood Base for a Wall with Wooden Studs

If you are installing the switch on a wall that has wooden studs, Allied Telesis recommends using a plywood base to attach the device to the wall. (A plywood base is not required for a concrete wall.) Refer to Figure 48.

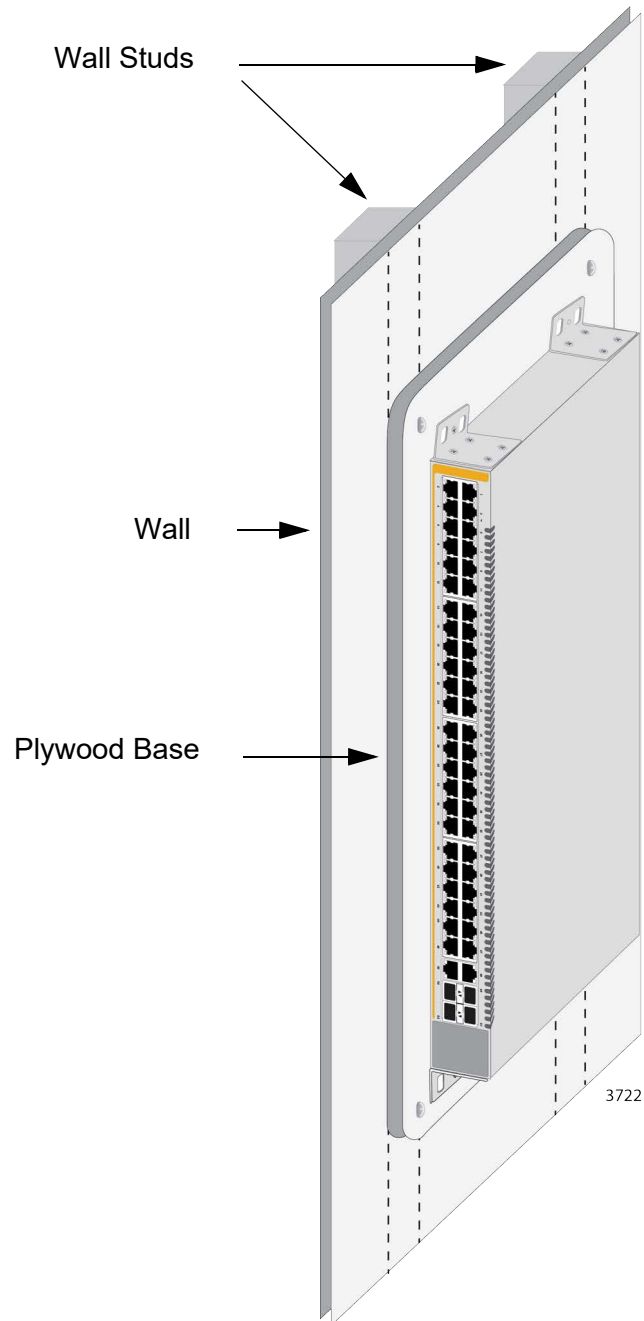


Figure 48. Switch on the Wall with a Plywood Base

The plywood base allows you to mount the switch on two wall studs. If you install the switch without the base, only one side of it would be attached to a stud. This is because the standard distance between two studs in a wall is 41 centimeters (16 inches) while the distance between the left and right brackets on the switch is 36.2 centimeters (14 1/4 inches).

The recommended minimum dimensions of the plywood base are listed here:

- ❑ Width: 58.4 centimeters (23 inches)
- ❑ Height: 55.9 centimeters (22 inches)
- ❑ Thickness: 5.1 centimeters (2 inches)

The dimensions assume the wall studs are 41 centimeters (16 inches) apart. You may need to adjust the width of the base if the distance between the studs in your wall is different than the industry standard.

You should install the plywood base to the wall and then install the switch on the base. Refer to Figure 49.

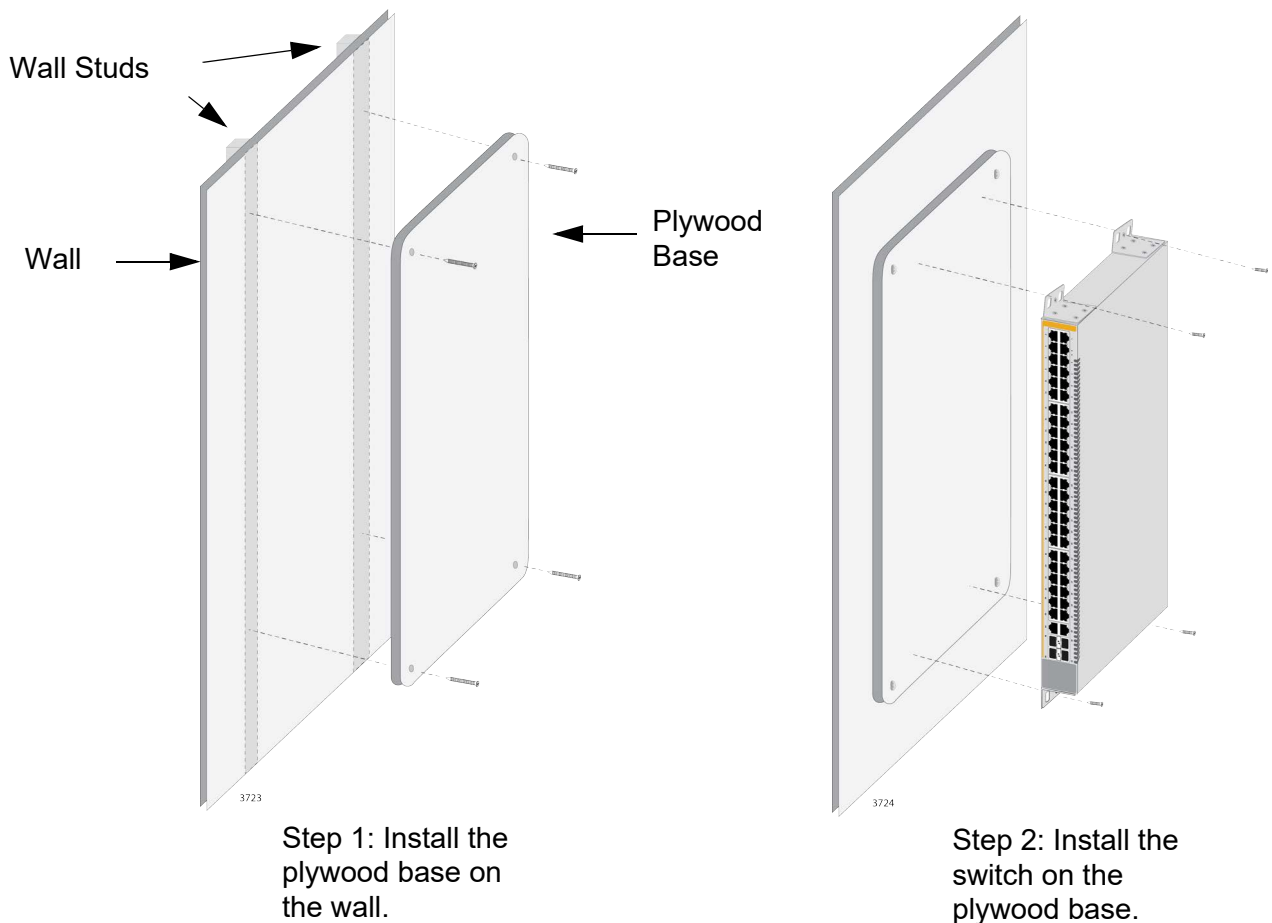


Figure 49. Steps to Installing the Switch with a Plywood Base

Installation Guidelines

Here are the guidelines to installing the switch on a wall:

- You may install the switch on a wall that has wooden studs.
- You may install it on a concrete wall.
- If you are installing the switch on a wall with wooden studs, you should use a plywood base to support the switch. For more information, refer to “Plywood Base for a Wall with Wooden Studs” on page 105. A plywood base is not required for a concrete wall.
- You should not install the switch on a wall that has metal studs. Metal studs may not be strong enough to safely support the device.
- You should not install the switch only on sheetrock or similar material. Sheetrock is not strong enough to safely support the device.
- You should install the power supplies before installing the switch on the wall. For instructions, refer to Chapter 3, “Installing the Power Supplies” on page 73.



Warning

The device is heavy. Always ask for assistance before moving or lifting it to avoid injuring yourself or damaging the equipment.



Warning

The device should be installed on a wall by a qualified building contractor. Serious injury to yourself or others or damage to the equipment may result if it is not properly fastened to the wall. ⚡ E105

Tools and Material

Here are the required tools and material for installing the switch on a wall:

- Sixteen bracket screws (included with the switch)
- Four wall or equipment rack brackets (included with the switch)
- Four wall screws (included with the switch)
- Four anchors for a concrete wall (included with the switch)
- Cross-head screwdriver (not provided)
- Stud finder for a wooden wall, capable of identifying the middle of wall studs and hot electrical wiring (not provided)
- Drill and 1/4” carbide drill bit for a concrete wall (not provided)

- ❑ Plywood base if you are installing the switch on a wall with wooden studs (not provided.) Refer to “Plywood Base for a Wall with Wooden Studs” on page 105 for illustrations.
- ❑ Four screws and anchors for attaching the plywood base to the wall (not provided)



Caution

The supplied screws and anchors may not be appropriate for all walls. A qualified building contractor should determine the proper hardware requirements for your wall prior to installing the switch. *GE* E88

Installing the Plywood Base

A plywood base is recommended when installing the switch on a wall that has wooden studs. Refer to “Plywood Base for a Wall with Wooden Studs” on page 105. Consult a qualified building contractor for installation instructions for the plywood base. The installation guidelines are listed here:

- ❑ You should use a stud finder to identify the middle of studs and hot electrical wiring in the wall.
- ❑ You should attach the base to two wall studs with a minimum of four screws.
- ❑ The selected wall location for the base should adhere to the recommendations in “Choosing a Site for the Switch” on page 69 and “Recommended Minimum Wall Area Dimensions” on page 103.

Installing the Switch on the Plywood Base

This procedure assumes that the plywood base for the switch is already installed on the wall. Please review “Reviewing Safety Precautions” on page 64 and “Choosing a Site for the Switch” on page 69 before performing this procedure. Allied Telesis recommends a minimum of three people for this procedure.



Warning

The device is heavy. Always ask for assistance before moving or lifting it to avoid injuring yourself or damaging the equipment.



Warning

The device should be installed on the wall by a qualified building contractor. Serious injury to yourself or others or damage to the equipment may result if it is not properly fastened to the wall. ⚠ E105

To install the switch on the plywood base, perform the following procedure:

1. Place the switch in a table.
2. Install the four brackets with the sixteen screws that come with the switch to the sides of the unit, as shown in Figure 50.



Figure 50. Installing the Brackets to the Switch for Wall Installation

The sides of the switch have two sets of holes. One set is for installing the switch on a wall with the brackets and the other set is for the AT-RKMT-SL01 Rack Mounting Kit. The holes for the brackets are identified in Figure 51.

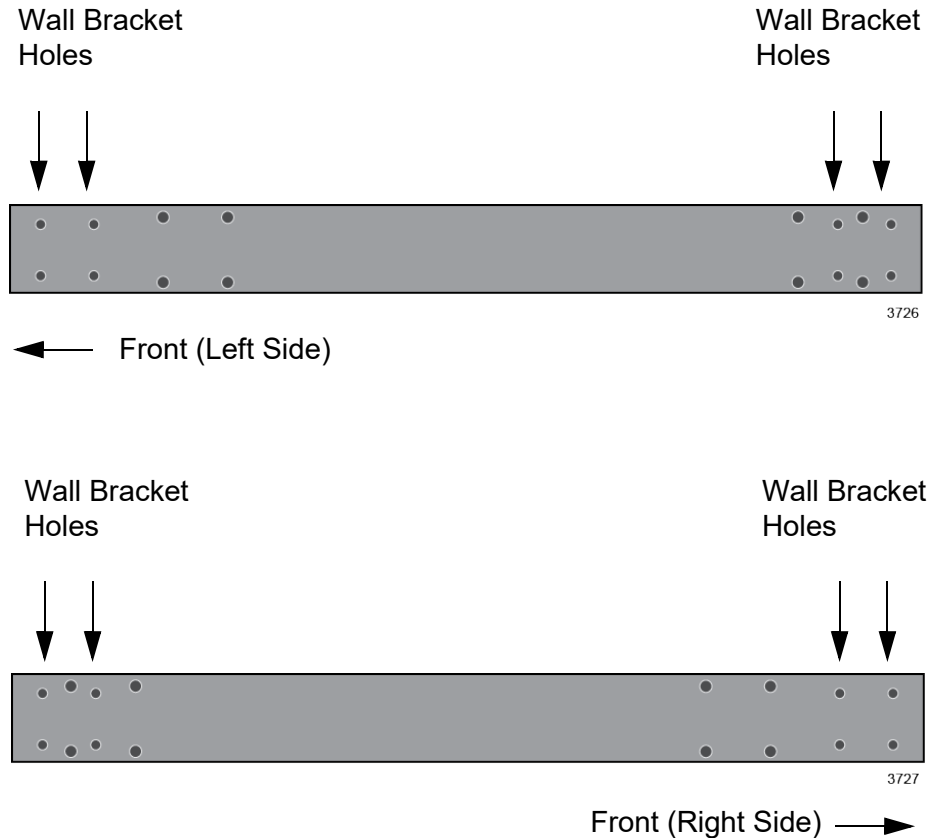


Figure 51. Mounting Holes

3. After attaching the brackets to the side of the switch, have two people hold the switch on the plywood base on the wall while you secure it with the four provided screws. Refer to Figure 52 on page 112.

Please follow these guidelines as you position the switch on the wall:

- Position the switch so that the front panel is either on the left or the right. Refer to Figure 45 on page 102. You may not install the switch with the front panel facing up or down.
- Leave sufficient space from other devices or walls so that you can access the front and back panels. Refer to “Recommended Minimum Wall Area Dimensions” on page 103.

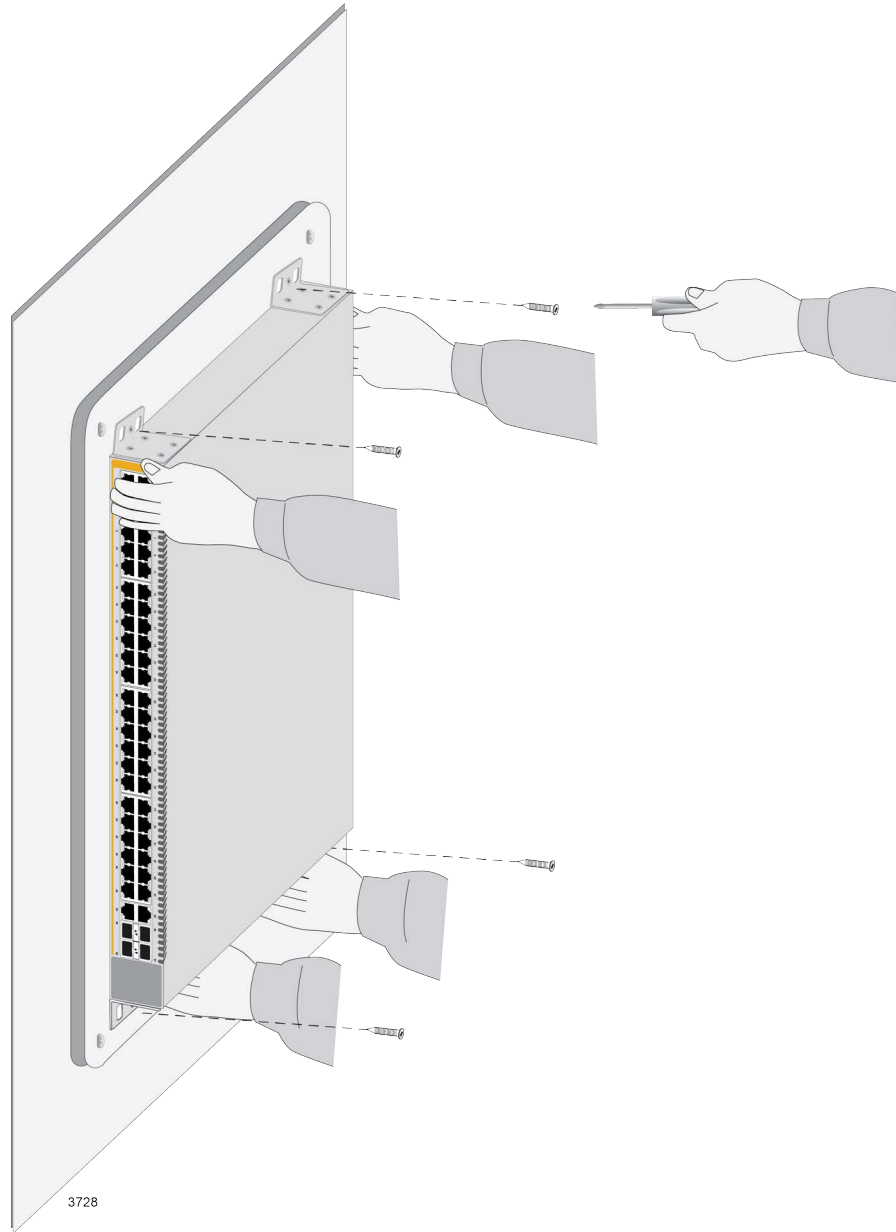


Figure 52. Securing the Switch to the Plywood Base

4. Do one of the following:
 - ❑ If the switch contains the AT-PWR250-80 DC Power Supply, go to Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.
 - ❑ Otherwise, go to Chapter 9, “Powering On the Switch” on page 123.

Installing the Switch on a Concrete Wall

Allied Telesis recommends a minimum of three people for this procedure. To install the switch on a concrete wall, perform the following procedure:

**Warning**

The device is heavy. Always ask for assistance before moving or lifting the device so as to avoid injuring yourself or damaging the equipment.

**Warning**

The device should be installed on a wall by a qualified building contractor. Serious injury to yourself or others or damage to the equipment may result if the switch is not properly fastened to the wall. *ES* E105

1. Place the switch in a table.
2. Install the four brackets with sixteen screws that come with the switch to the sides of the unit, as shown in Figure 50 on page 110 and Figure 51 on page 111.
3. Have two people hold the switch on the concrete wall at the selected location for the device while you use a pencil or pen to mark the wall with the locations of the four screw holes in the four brackets. Refer to Figure 53 on page 114.

Please follow these guidelines as you position the switch on the wall:

- Position the switch so that the front panel faces the left or the right. Refer to Figure 45 on page 102. You may not install the switch with the front panel facing up or down.
- Leave sufficient space from other devices or walls so that you can access the front and back panels. Refer to “Recommended Minimum Wall Area Dimensions” on page 103.

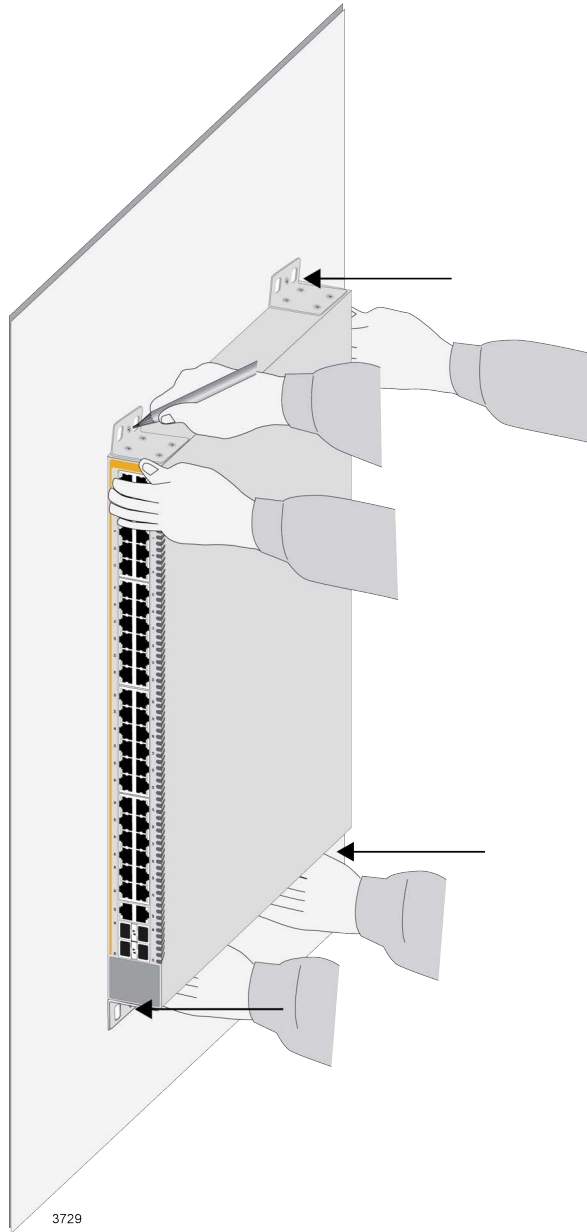


Figure 53. Marking the Locations of the Bracket Holes on a Concrete Wall

4. Place the switch on a table or desk.
5. Use a drill and 1/4" carbide drill bit to pre-drill the four holes you marked in step 3. Please review the following guidelines:
 - ❑ Prior to drilling, set the drill to hammer and rotation mode. The modes break up the concrete and clean out the hole.
 - ❑ Allied Telesis recommends cleaning out the holes with a brush or compressed air.

6. Insert the four anchors into the holes.
7. Have two people hold the switch at the selected wall location while you secure it with the four provided screws. Refer to Figure 54.

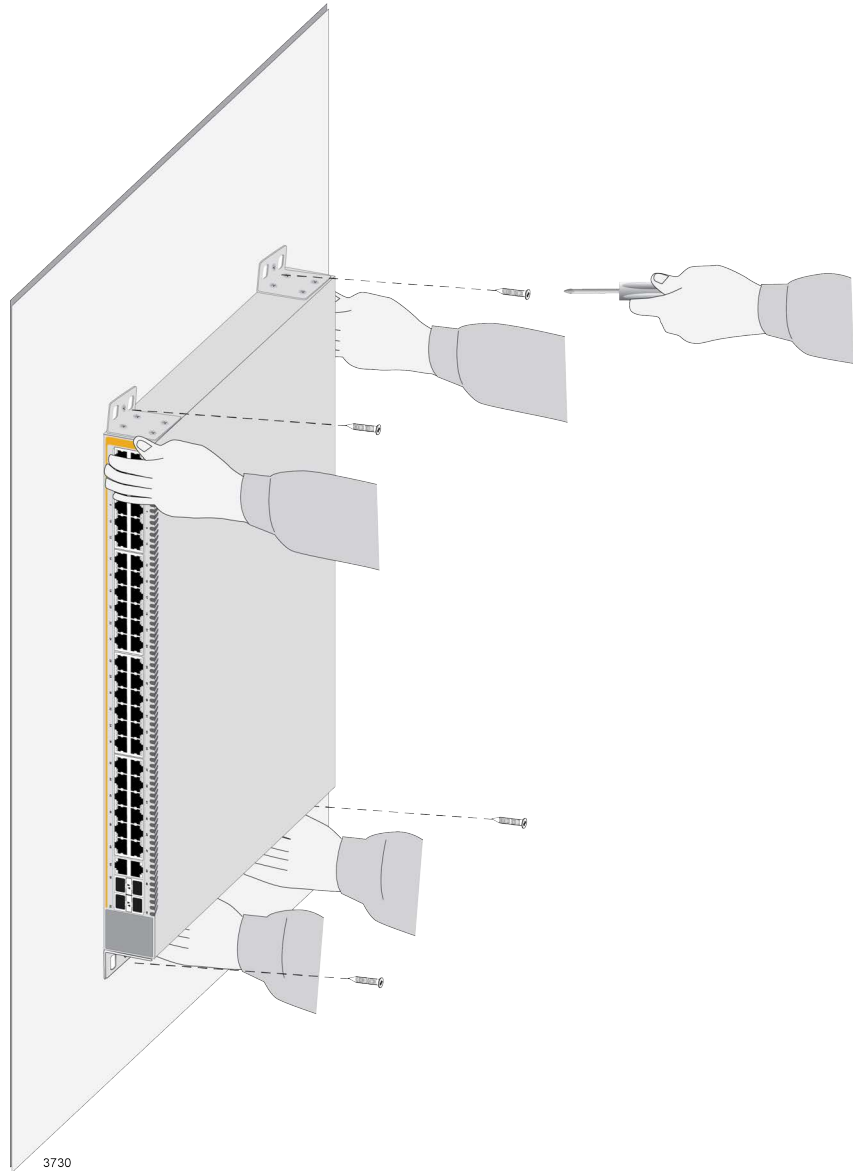


Figure 54. Installing the Switch on a Concrete Wall

8. Do one of the following:
 - If you have not installed the power supplies, go to Chapter 3, “Installing the Power Supplies” on page 73.
 - If the switch contains the AT-PWR250-80 DC Power Supply, go to Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.

- ❑ If you are installing the switch as a standalone device, go to Chapter 9, “Powering On the Switch” on page 123.
- ❑ If you are installing two or more switches as a VCStack, physically install the other switches by repeating the installation chapters in this section, and then go to Chapter 12, “Virtual Chassis Stacking Overview” on page 157.

Chapter 8

Wiring the DC Connector on the AT-PWR250-80 Power Supply

This chapter contains the procedure for wiring the DC connector on the AT-PWR250-80 DC power supply.



Warning

As a safety precaution, install a circuit breaker with a minimum value of 15 Amps between the equipment and the DC power source.

↪ E9



Warning

Always connect the wires to the LAN equipment first before connecting them to the circuit breaker. Do not work with HOT feeds to avoid the danger of physical injury from electrical shock. Always verify that the circuit breaker is in the OFF position before connecting the wires to the circuit breaker. *↪* E9



Warning

For centralized DC power connection, install only in a restricted access area. *↪* E23



Warning

This equipment must be installed in a Restricted Access location. *↪* E45

Note

A tray cable is required to connect the power source if the unit is powered by centralized DC power. The tray cable must be a UL listed Type TC tray cable and rated at 600 V and 90 degrees C, with three conductors, minimum 14 AWG. *↪* E24

To wire the DC connector on the AT-PWR250-80 DC Power Supply, perform the following procedure:

1. Power off the DC circuit to which the switch will be connected.

2. Verify that the On/Off switch on the power supply is in the Off position. Refer to Figure 55.

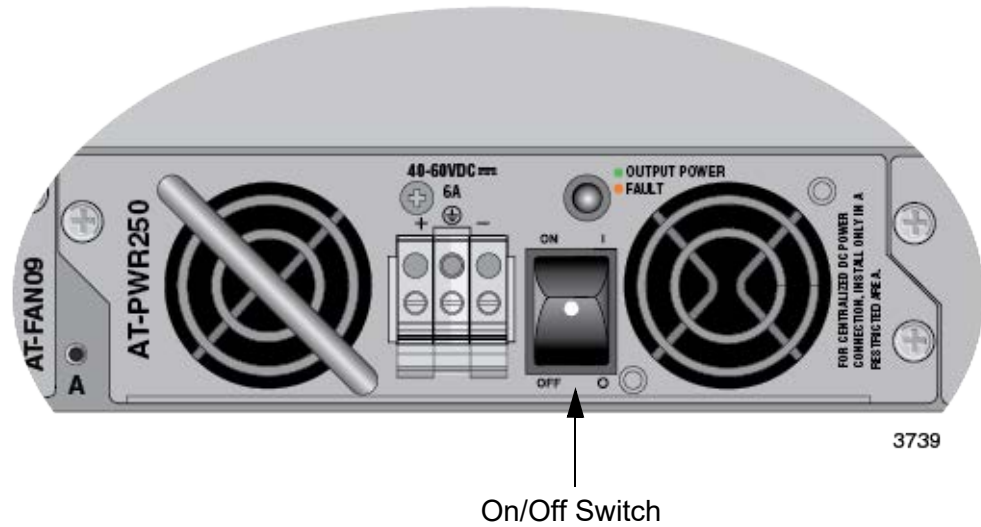


Figure 55. On/Off Switch on AT-PWR250-80 Power Supply

3. Use the legend above the terminal block to identify the terminals. The terminals are **positive**, **power supply ground** and **negative**, from left to right, as shown in Figure 56.

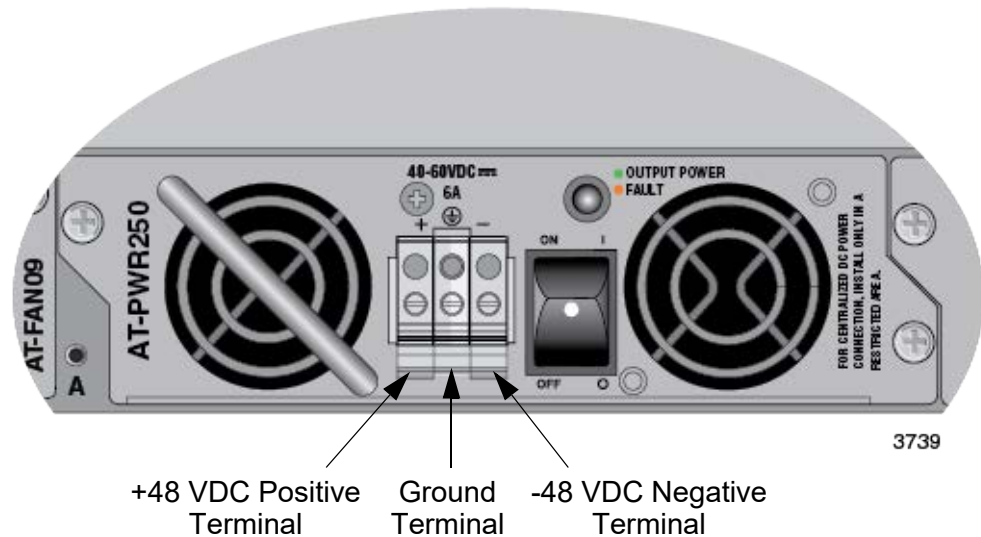



Figure 56. DC Terminal Block

4. With a 14-gauge wire-stripping tool, strip the three wires in the tray cable coming from the DC input power source to $8\text{mm} \pm 1\text{mm}$ ($0.31\text{ in.} \pm 0.039\text{ in.}$), as shown in Figure 57 on page 119.

**Warning**

Do not strip more than the recommended amount of wire. Stripping more than the recommended amount can create a safety hazard by leaving exposed wire on the terminal block after installation.  E10

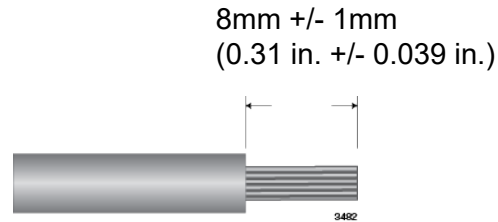


Figure 57. Stripped Wire

5. Insert the power supply ground wire into the middle connector of the DC terminal and tighten the connection with a flathead screwdriver. Refer to Figure 58.

**Warning**


When installing this equipment, always ensure that the power supply ground connection is installed first and disconnected last.  E11



Figure 58. Connecting the Ground Wire to the DC Terminal Block

6. Connect the +48 VDC (RTN) feed wire to the terminal block marked + (plus).
7. Connect the -48 VDC feed wire to the terminal block marked - (minus).



Warning

Check to see if there are any exposed copper strands coming from the installed wires. When this installation is done correctly there should be no exposed copper wire strands extending from the terminal block. Any exposed wiring can conduct harmful levels of electricity to persons touching the wires. *↪* E12

8. Secure the tray cable near the rack framework using multiple cable ties to minimize the chance of the connections being disturbed by casual contact with the wiring. Use at least four cable ties, separated four inches apart. Locate the first one within six inches of the terminal block.

Note

This system will work with a positive grounded or negative grounded DC system. *↪* E13

9. Verify that the circuit breaker is in the OFF position.
10. Connect the supply-cable wires to the circuit breaker

Note

Connect the supply-cable wires to the circuit breaker. Do not power on the switch at this time.

11. If the switch has two AT-PWR250-80 Power Supplies, repeat this procedure to wire the second DC connector.
 - If you are installing the switch as a standalone device, go to Chapter 9, “Powering On the Switch” on page 123.
 - If you are installing two or more switches as a VCStack, physically install the other switches by repeating the installation chapters in this section, and then go to Chapter 12, “Virtual Chassis Stacking Overview” on page 157.



Warning

This unit might have more than one power source. To reduce the risk of electric shock, disconnect all power cords before servicing the unit. *↪* E30

Section II

Powering On and Verifying a Standalone Switch

The chapters in this section are:

- ❑ Chapter 9, “Powering On the Switch” on page 123
- ❑ Chapter 10, “Configuring the Switch for Standalone Operations” on page 133
- ❑ Chapter 11, “Cabling the Networking Ports” on page 141

Section II:

Chapter 9

Powering On the Switch

This chapter contains the following procedures:

- ❑ “Powering On AC Power Supplies” on page 124
- ❑ “Powering On the AT-PWR250-80 DC Power Supply” on page 127
- ❑ “Monitoring the Initialization Processes” on page 129

Powering On AC Power Supplies

This section contains the procedure for powering on the AC power supplies. Please review the following items before you power on the device:

- ❑ Connecting the power cords of the switch with two power supplies to different circuits can protect the unit from a power circuit failure.
- ❑ If the switch has two power supplies, you may power them on at the same time or individually.
- ❑ Refer to “Power Specifications” on page 235 for the power specifications of the switches.



Warning


Power cord is used as a disconnection device. To de-energize equipment, disconnect the power cord. *GE* E3

Note

Pluggable Equipment. The socket outlet shall be installed near the equipment and shall be easily accessible. *GE* E5

To power on the switch, perform the following procedure:

1. Raise the power cord retaining clip on the power supply. Refer to Figure 59. (The AT-PWR1200 and AT-PWR1200 V2 Power Supplies do not come with a retaining clip.)

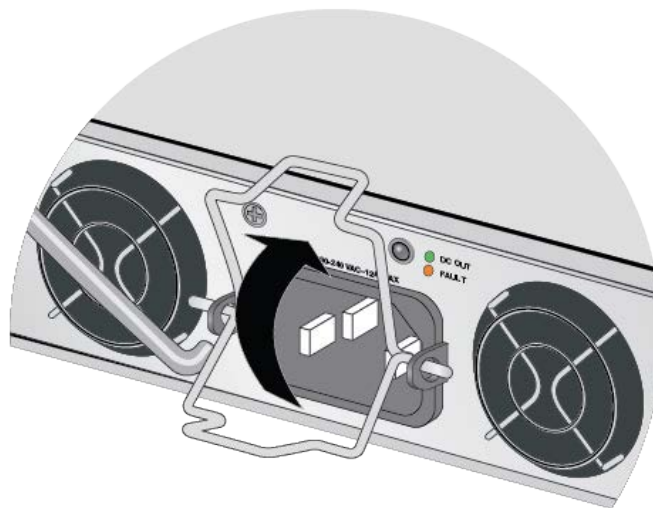

3736

Figure 59. Raising the Power Cord Retaining Clip

2. Connect the AC power cord to the connector on the power supply and to an appropriate power source. Refer to Figure 60.

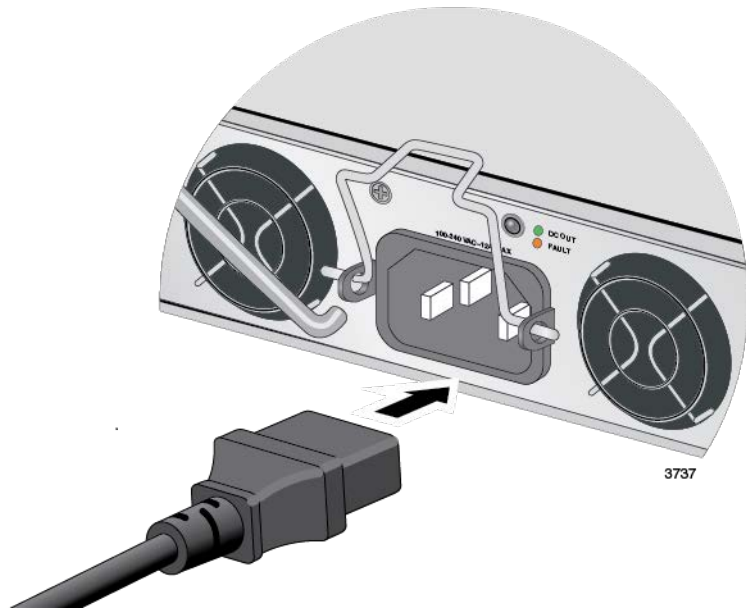


Figure 60. Connecting the AC Power Cord

3. Lower the power cord retaining clip to secure the cord to the switch. Refer to Figure 61.

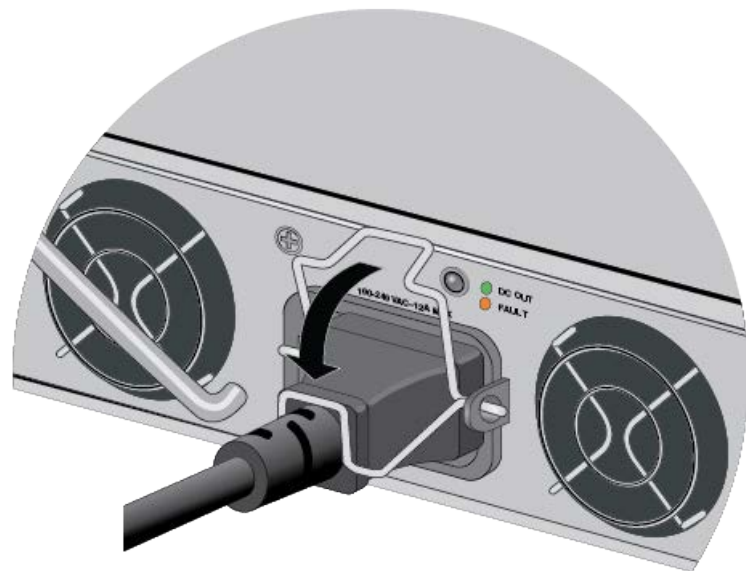


Figure 61. Lowering the Power Cord Retaining Clip

4. Examine the DC OUT/FAULT LED on the power supply. The module is operating normally when the LED is green. If the LED is amber or off, refer to Chapter 17, “Troubleshooting” on page 223 for troubleshooting suggestions.
5. If the switch has two AC power supplies, repeat this procedure to power on the second power supply.
6. Do one of the following:
 - ❑ To monitor the switch as it initializes the management software, go to “Monitoring the Initialization Processes” on page 129.
 - ❑ If you do not want to monitor the initialization process, wait two minutes for the switch to initialize its management software and then go to Chapter 10, “Configuring the Switch for Standalone Operations” on page 133.

Powering On the AT-PWR250-80 DC Power Supply

This section contains the procedure for powering on the AT-PWR250-80 DC Power Supply. Please review the following items before powering on the device:

- ❑ This procedure assumes you have already wired the DC connector on the AT-PWR250-80 DC Power Supply. For instructions, refer to Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.
- ❑ If the switch has two power supplies, you may power them on at the same time or individually.
- ❑ Refer to “Power Specifications” on page 235 for the power specifications of the switches.

To power on the AT-PWR250-80 Power Supply, perform the following procedure:

1. Power on the DC circuit to which the power supply is connected.
2. Set the On/Off switch on the power supply to On. Refer to Figure 62.

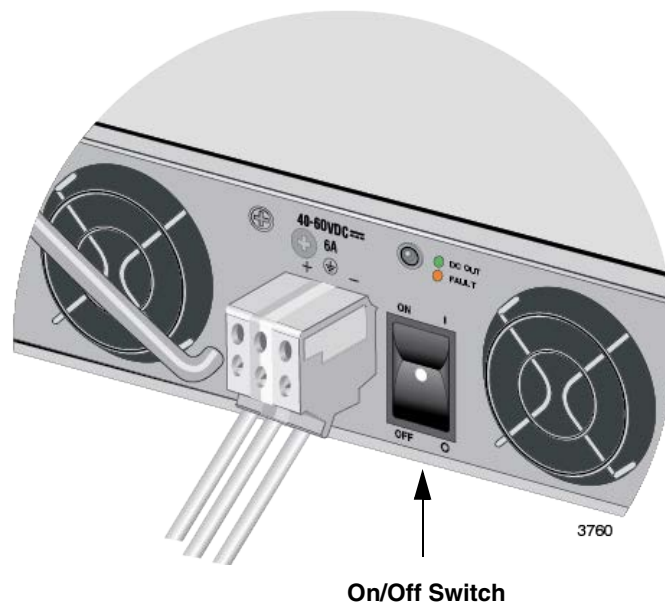


Figure 62. On/Off Switch on the AT-PWR250-80 DC Power Supply

3. Examine the DC OUT/FAULT LED on the power supply module. The module is operating normally when the LED is green. If the LED is amber or off, refer to Chapter 17, “Troubleshooting” on page 223 for troubleshooting suggestions.

4. If the switch has two AT-PWR250-80 Power Supplies, repeat this procedure to power on the second power supply.
5. Do one of the following:
 - ❑ To monitor the switch as it initializes the management software, go to “Monitoring the Initialization Processes” on page 129.
 - ❑ If you do not want to monitor the initialization process, wait two minutes for the switch to initialize its management software and then go to Chapter 10, “Configuring the Switch for Standalone Operations” on page 133.

Monitoring the Initialization Processes

It takes about two minutes for the switch to initialize its management software programs and features, and load the default configuration. You may monitor the bootup sequence by connecting a terminal or computer that has a terminal emulator program, to the Console port on the master switch. You will see the messages in Figure 63 here to Figure 65 on page 131.

```

Bootloader 3.0.6 loaded
Press <Ctrl+B> for the Boot Menu

Reading filesystem...
Loading flash:x930-broadcomdev-20140626-1.rel...
Verifying release... OK
Booting...
Starting base/first...           [ OK ]
Mounting virtual filesystems...  [ OK ]

      _____
     /         \
    /           \
   /             \
  /               \
 /                 \
/                   \
/_____ \
 \         /
  \       /
   \     /
    \   /
     \ /
      /

Allied Telesis Inc.
Alliedware Plus (TM) v0.0.0
Current release filename: x930-broadcomdev-20140626-1.rel
Original release filename: x930-broadcomdev-20140626-1.rel
Built: Thu Jun 26 01:44:29 NZST 2014
Mounting static filesystems...   [ OK ]
Checking flash filesystem...     [ OK ]
Mounting flash filesystem...     [ OK ]
Checking for last gasp debug output... [ OK ]
Checking NVS filesystem...       [ OK ]
Mounting NVS filesystem...       [ OK ]
Starting base/dbus...            [ OK ]
Starting base/syslog...          [ OK ]
Starting base/loopback...        [ OK ]

```

Figure 63. Switch Initialization Messages

```

Starting base/poe_done... [ OK ]
Starting base/sysctl... [ OK ]
Received event poefw.done
Starting base/portmapper... [ OK ]
Received event syslog.done
Starting base/reboot-stability... [ OK ]
Checking system reboot stability... [ OK ]
Starting base/cron... [ OK ]
Starting base/appmond... [ OK ]
Starting hardware/openhpi... [ OK ]
Starting hardware/timeout... [ OK ]
Starting base/inet... [ OK ]
Starting base/modules... [ OK ]
Received event modules.done
Received event board.inserted
Received event hardware.done
Starting network/startup... [ OK ]
Starting base/external-mdeia... [ OK ]
Starting network/stackd... [ OK ]
Starting network/election.timeout... [ OK ]
Received event network.enabled

Initializing HA processes:
atmfd, auth, bgpd, cntrd, epsr, hostd, hsl
imiproxyd, irdpd, lacp, lldpd, loopprot, mstp, nsm
ospf6d, ospfd, pdmd, pim6d, ripd, ripngd
rmon, sflowd, udldd, vrrpd, imi

Received event network.initialized
17:50:25 awplus-1 VCS[2119]: No neighboring members found, unit may be in a
stand alone configuration
Received event vcs.elected-master
17:50:25 awplus-1 VCS[2119]: Startup speed can be improved by adding 'no
stack 1 enable' to configuration
03:44:11 awplus-1 VCS[2119]: Member 1 (eccd.edd1.64ab) has become the Active
Master
Assigning Active workload to HA processes:
hsl, authd, epsrd, irdpd, lacpd, loopprot
mstpd, nsm, ospfd, ripd, rmond, sflowd, vrrpd
imi, imiproxyd

```

Figure 64. Switch Initialization Messages (Continued)

```
Received event network.activated

Loading default configuration
warning: flash:/default.cfg does not exist, loading factory defaults.
..
done!
Received event network.configured

awplus login:
```

Figure 65. Switch Initialization Messages (Continued)

After the switch has initialized its management software, go to Chapter 10, “Configuring the Switch for Standalone Operations” on page 133.

Chapter 10

Configuring the Switch for Standalone Operations

This chapter contains the following procedures:

- ❑ “Determining the Status of the Switch” on page 134
- ❑ “Starting a Local Management Session” on page 135
- ❑ “Disabling VCStack” on page 137
- ❑ “Viewing the AlliedWare Plus Version Number” on page 140

Determining the Status of the Switch

After the switch has initialized its management software, examine the switch ID LED on the front panel and do one of the following:

- If the LED is displaying “0”, the VCStack feature is already disabled and the switch is operating as a standalone unit. Do one of the following:
 - If the switch contains the optional AT-StackQS or AT-x9EM/XT4 Card, go to “Viewing the AlliedWare Plus Version Number” on page 140.
 - If the switch does not contain the optional AT-StackQS or AT-x9EM/XT4 Card, go to Chapter 11, “Cabling the Networking Ports” on page 141.
- If the LED is displaying the number “1” or higher, the VCStack feature is enabled on the unit. You need to disable it to use the unit as a standalone device. For instructions, begin with “Starting a Local Management Session,” next.



Caution

You have to reset the switch to disable the VCStack feature. Some network traffic may be lost if the device is already connected to a live network. ⚡ E89

Note

The initial management session of the switch must be from the Console port.

Starting a Local Management Session

This procedure explains how to start a local management session with the switch through the Console port on the front panel. As explained in “Console Port” on page 57, local management requires a terminal or computer with a terminal emulator program, and a management cable. To start a local management session on the switch, perform the following procedure:

Note

If you are using the VT-Kit3 management cable, the procedure assumes you have already installed the driver software for the cable on your computer. For instructions, refer to the *VT-Kit3 Management Cable Installation Guide* on the Allied Telesis web site at www.alliedtelesis.com.

1. Configure the terminal or terminal emulator program as follows:
 - Baud rate: 9600 bps (The baud rate of the Console Port is adjustable from 1200 to 115200 bps. The default is 9600 bps.)
 - Data bits: 8
 - Parity: None
 - Stop bits: 1
 - Flow control: None

Note

The port settings are for a DEC VT100 or ANSI terminal, or an equivalent terminal emulator program.

2. Connect the terminal or PC computer to the Console port with a management cable:
 - If you are using a dumb terminal, use a straight-through Ethernet cable with RJ-45 connectors on both ends.
 - If you are using the VT-Kit3 management cable, connect the RJ-45 port on the management cable to the Console port on the switch with a straight-through Ethernet cable. Connect the USB connector on the cable to a USB port on the management workstation. Refer to Figure 66 on page 136.



Figure 66. Connecting the VT-Kit3 Management Cable to the Console Port

3. Start the terminal emulator program.
4. Press Enter. You are prompted for a user name and password.
5. Enter a user name and password to log on the switch. If this is the initial management session of the switch, enter “manager” as the user name and “friend” as the password. The user name and password are case sensitive.

The local management session starts when the User Exec mode prompt, shown in Figure 67. is displayed.

```
awp1us>
```

Figure 67. User Exec Mode Prompt

Note

The User Exec mode is the first level in the command mode interface. For complete information on the modes and commands, refer to the *Software Reference for x930 Series Switches, AlliedWare Plus Operating System* at www.alliedtelesis.com.

6. Go to “Disabling VCStack” on page 137.

Disabling VCStack

To disable the VCStack feature to use the switch as a standalone unit, perform the following procedure:



Caution

You have to reset the switch to disable the VCStack feature. Some network traffic may be lost if the device is already connected to a live network. *E89*

1. Start a local management session on the switch. For instructions, refer to “Starting a Local Management Session” on page 135.
2. Enter the SHOW STACK command to display the status of the VCStack feature. Figure 68 is an example of the command.

```
awplus> show stack
Virtual Chassis Stacking summary information
ID      Pending ID  MAC address      Priority  Status  Role
1       -            eccd:6dd1:64a2  128     Ready   Active Master
Operational Status      Standalone Unit
Stack MAC address      eccd:6dd1:64a2
awplus>
```

Figure 68. SHOW STACK Command

3. Review the following items:
 - ❑ If the Operational Status is “Stacking Hardware Disabled,” the VCStack feature is already disabled on the switch and the SFP+ S1 and S2 stacking slots may be used with regular SFP or SFP+ transceivers. Do one of the following:
 - If the switch contains the optional AT-StackQS or AT-x9EM/XT4 Card, go to “Viewing the AlliedWare Plus Version Number” on page 140.
 - If the switch does not contain the optional AT-StackQS or AT-x9EM/XT4 Card, go to Chapter 11, “Cabling the Networking Ports” on page 141.
 - ❑ If the Operational Status is “Standalone Unit,” as shown in Figure 68 on page 137, the VCStack feature is active on the unit. To disable it, perform the steps in the rest of this procedure. The reason the status says “standalone” is because the switch is functioning as a stack of one switch.

4. Move to the Global Configuration mode by entering the ENABLE and CONFIGURE TERMINAL commands, as shown in Figure 69.

```
awplus> enable
awplus# configure terminal
Enter configuration commands, one per line. End with CNTL/Z
awplus#
```

Figure 69. Moving to the Global Configuration Mode

5. To disable the VCStack feature on the switch, enter the NO STACK ENABLE command, which has this format:

```
no stack id enable
```

The ID parameter is the ID number of the switch, displayed on the ID LED. Replace the parameter with whatever number is on the ID LED. For example, if the ID number of the switch is 1, the default value, enter the command as follows:

```
awplus(config)# no stack 1 enable
```

This confirmation prompt in Figure 70 is displayed.

```
Warning; This will disable the stacking hardware on member-1.
Are you sure you want to continue? (y/n):
```

Figure 70. Confirmation Prompt for the NO STACK ENABLE Command

6. Type Y to disable VCStack on the switch or N to cancel the procedure.

The switch displays the message in Figure 71.

```
awplus(config)#18:04:12 awplus VCS[2119]: Deactivating
Stacking Ports on stack member 1.
```

Figure 71. Disabling VCStack.

7. Press the Return key to re-display the Global Configuration mode prompt.
8. Enter the EXIT command to return to the Privileged Exec mode, as shown in Figure 72.

```
awplus(config)# exit
awplus#
```

Figure 72. Returning to the Privileged Exec Mode

9. Enter the WRITE command to save your change in the configuration file. The switch displays the confirmation prompt in Figure 73.

```
awplus# write
Building configuration ...
[OK]
awplus#
```

Figure 73. Saving the Changes with the WRITE Command

If this is the initial management session, the switch automatically creates the Default.cfg configuration file and stores your change in the file.

10. Enter the REBOOT command to reboot the switch.
11. At the confirmation prompt, type “Y” for yes.
12. Wait two minutes for the switch to initialize its management software and afterwards examine the Switch ID LED again. The switch is ready for normal network operations as a standalone unit when its ID number is “0.” If the number is not “0,” repeat this procedure. Be sure to save the configuration change with the WRITE command in step 10.
13. Do one of the following:
 - ❑ If the switch contains the optional AT-StackQS or AT-x9EM/XT4 Card, go to “Viewing the AlliedWare Plus Version Number” on page 140.
 - ❑ If the switch does not contain the optional AT-StackQS or AT-x9EM/XT4 Card, go to Chapter 11, “Cabling the Networking Ports” on page 141.

Viewing the AlliedWare Plus Version Number

This section contains the procedure for viewing the version number of the management software on the switch. Allied Telesis recommends performing this procedure if you installed the optional AT-StackQS or AT-x9EM/XT4 Module. The modules require version 5.4.5-2 or later of the management software. You should also view the version number if you are building a VCStack.

To view the version number of the AlliedWare Plus software, perform the following procedure. If the switch is powered off, start with step 1. If the switch is already powered on, start with step 3:

1. Power on one of the switches by doing one of the following:
 - ❑ If the switch has an AC power supply, connect the AC power cord to the power supply on the back panel and to an AC power source. If the switch has two power supplies, you need to power on only one of them for this procedure.
 - ❑ If the switch has the DC AT-PWR250-80 Power Supply, power on the DC circuit and the On/Off switch on the power supply. (If you have not yet wired the DC connector on the power supply, refer to Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.)
2. Wait one minute for the switch to initialize the management software.
3. Start a local management session on the switch. For instructions, refer to “Starting a Local Management Session” on page 135.
4. In the User Exec mode, enter either the `SHOW SYSTEM` or `SHOW VERSION` command.
5. Examine the Software Version field in the information the command displays on your screen and do one of the following:
 - ❑ If the field says “545-2” or later, the management software on the switch supports the AT-x9EM/XT4 Module. Go to Chapter 11, “Cabling the Networking Ports” on page 141.
 - ❑ If the field says “545” or “545-1”, the management software does not support the optional module. You must update the operating software on the switch to the latest release before using the module. For upgrade instructions, refer to the *Software Reference for x930 Series Switches, AlliedWare Operating System* from www.alliedtelesis.com.

Chapter 11

Cabling the Networking Ports

This chapter contains the following procedures:

- ❑ “Cabling Copper Ports” on page 142
- ❑ “Installing SFP or SFP+ Transceivers” on page 144
- ❑ “Specifying Ports in the Command Line Interface for Standalone Switches” on page 148
- ❑ “Installing AT-SP10TW Direct Connect Cables” on page 150
- ❑ “Cabling the AT-StackQS Card with AT-QSFPICU Cables” on page 152
- ❑ “Cabling the AT-StackQS Card with Fiber Optic Transceivers” on page 154

Cabling Copper Ports

Here are the guidelines to cabling the 10/100/1000Base-T copper ports:

- ❑ The cable specifications for the ports are listed in “Cable Requirements” on page 37.
- ❑ The connectors on the cables should fit snugly into the ports, and the tabs should lock the connectors into place.
- ❑ The default setting for the wiring configurations is auto-MDI/MDI-X. The default setting is appropriate for switch ports that are connected to 10/100Base-TX network devices that also support auto-MDI/MDI-X.
- ❑ The default auto-MDI/MDI-X setting is not appropriate for switch ports that are connected to 10/100Base-TX network devices that do not support auto-MDI/MDI-X and have a fixed wiring configuration. For switch ports connected to those types of network devices, you should disable auto-MDI/MDI-X and set the wiring configurations manually.
- ❑ The appropriate MDI/MDI-X setting for a switch port connected to a 10/100Base-TX network device with a fixed wiring configuration depends on the setting of the network device and whether the switch and network device are connected with straight-through or crossover cable. If you are using straight-through copper cable, the wiring configurations of a port on the switch and a port on a network device must be opposite each other, such that one port uses MDI and the other MDI-X. For example, if a network device has a fixed wiring configuration of MDI, you must disable auto-MDI/MDI-X on the corresponding switch port and manually set it to MDI-X. If you are using crossover copper cable, the wiring configurations of a port on the switch and a port on a network device must be the same.
- ❑ The default speed setting for the ports is Auto-Negotiation. This setting is appropriate for ports connected to network devices that also support Auto-Negotiation.
- ❑ The default speed setting of Auto-Negotiation is not appropriate for ports connected to 10/100Base-TX network devices that do not support Auto-Negotiation and have fixed speeds. For those switch ports, you should disable Auto-Negotiation and set the port’s speed manually to match the speeds of the network devices.
- ❑ The 10/100/1000Base-T ports must be set to Auto-Negotiation, the default setting, to operate at 1000Mbps.
- ❑ The default duplex mode setting for the ports is Auto-Negotiation. This setting is appropriate for ports connected to network devices that also support Auto-Negotiation for duplex modes.

- ❑ The default duplex mode setting of Auto-Negotiation is not appropriate for ports connected to network devices that do not support Auto-Negotiation and have a fixed duplex mode. You should disable Auto-Negotiation on those ports and set their duplex modes manually to avoid the possibility of duplex mode mismatches. A switch port using Auto-Negotiation defaults to half-duplex if it detects that the end node is not using Auto-Negotiation, which can result in a mismatch if the end node is operating at a fixed duplex mode of full-duplex.
- ❑ Do not attach cables to ports of static or LACP port trunks until after you have configured the trunks on the switch. Otherwise, the ports will form network loops that can adversely affect network performance.

Installing SFP or SFP+ Transceivers

Please review the following guidelines before installing SFP or SFP+ transceivers in the switches:

Note


Refer to the product's data sheet on the Allied Telesis web site for a list of supported transceivers.

Here are the guidelines:

- ❑ Ports 25 to 28 on 28-port x930 switches and ports 49 to 52 on 52-port switches support 1000Mbps SFP and 10Gbps SFP+ transceivers. They do not support 100Mbps SFP transceivers.
- ❑ Ports 1 to 24 on the AT-x930-28GSTX Switch support 100/1000Mbps SFP transceivers. They do not support 10Gbps SFP+ transceivers.
- ❑ If you are using SFP+ ports S1 and S2 as the VCStack trunk, review the guidelines in "Trunks of Ports S1 and S2" on page 160 before performing this procedure.
- ❑ SFP and SFP+ transceivers are hot-swappable. You may install them while the switch is powered on.
- ❑ The operational specifications and fiber optic cable requirements of the transceivers are provided in the documents included with the devices.
- ❑ You should install a transceiver before connecting its fiber optic cable.
- ❑ Fiber optic transceivers are dust sensitive. Always keep the plug in the optical bores when a fiber optic cable is not installed, or when you store the transceiver. When you do remove the plug, keep it for future use.
- ❑ Unnecessary removal and insertion of a transceiver can lead to premature failure.



Warning

Transceivers can be damaged by static electricity. Be sure to observe all standard electrostatic discharge (ESD) precautions, such as wearing an antistatic wrist strap, to avoid damaging the devices.  E92

Note

For switches without AT-StackQS Cards, SFP+ slots 27/S1 and 28/S2 on the 28-port switches and slots 51/S1 and 52/S2 on the 52-port switches are initially configured as trunk ports for the VCStack feature. To use the ports as regular networking ports, you must disable the VCStack feature or designate other ports as the trunk ports. To disable VCStack, refer to Chapter 9, “Powering On the Switch” on page 123.

The illustrations in the procedure show the installation of a transceiver in port 25 of a 28-port switch. The procedure is the same for all SFP and SFP+ ports. The transceiver in the illustrations has a duplex LC connector. Your transceivers may have different connectors.

To install transceivers, perform the following procedure:

1. If the transceiver port has a dust plug, remove it. Refer to Figure 74.



Figure 74. Removing the Dust Plug from an SFP Slot

2. Remove the transceiver from its shipping container and store the packaging material in a safe location.
3. If you are installing the transceiver in a top slot, position the transceiver with the Allied Telesis label facing up. If you are installing the transceiver in a bottom slot, position the transceiver with the label facing down.
4. Slide the transceiver into the port until it clicks into place, as shown in Figure 75 on page 146.

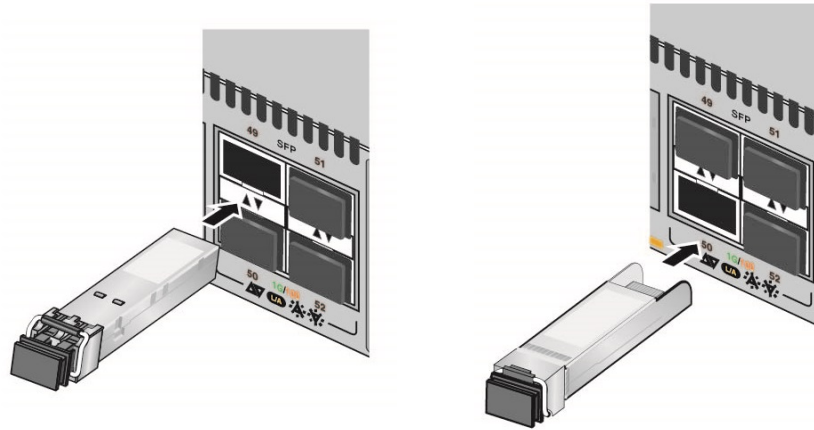


Figure 75. Installing an SFP+ Transceiver

Note

If you are ready to attach the fiber optic cable to the transceiver, continue with the next step. Otherwise, repeat steps 1 to 4 to install the remaining transceivers in the switch.

5. Remove the dust cover from the transceiver, as shown in Figure 76.

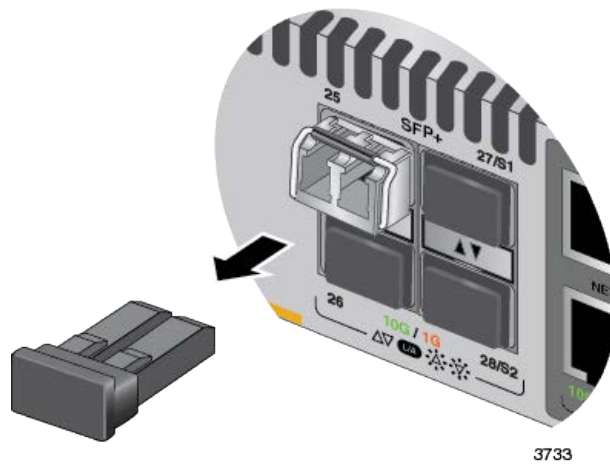


Figure 76. Removing the Dust Cover from an SFP or SFP+ Transceiver

6. Verify the position of the handle on the transceiver. If the transceiver is in a top slot, the handle should be in the upright position, as shown in Figure 77 on page 147. If the transceiver is in a bottom slot, the handle should be in the down position.

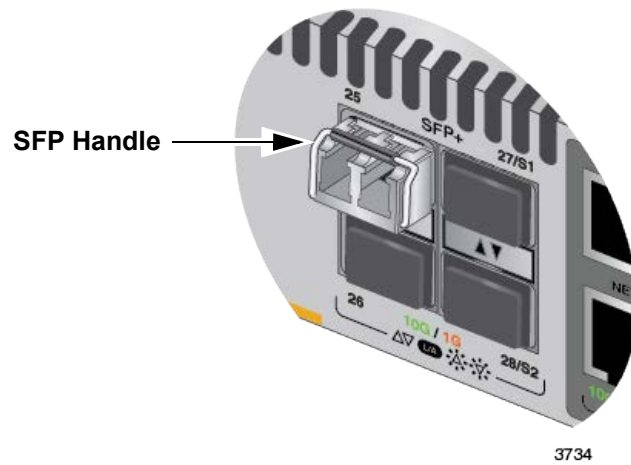


Figure 77. Positioning the SFP or SFP+ Handle in the Upright Position

7. Connect the fiber optic cable to the transceiver, as shown in Figure 78. The connector on the cable should fit snugly into the port, and the tab should lock the connector into place.

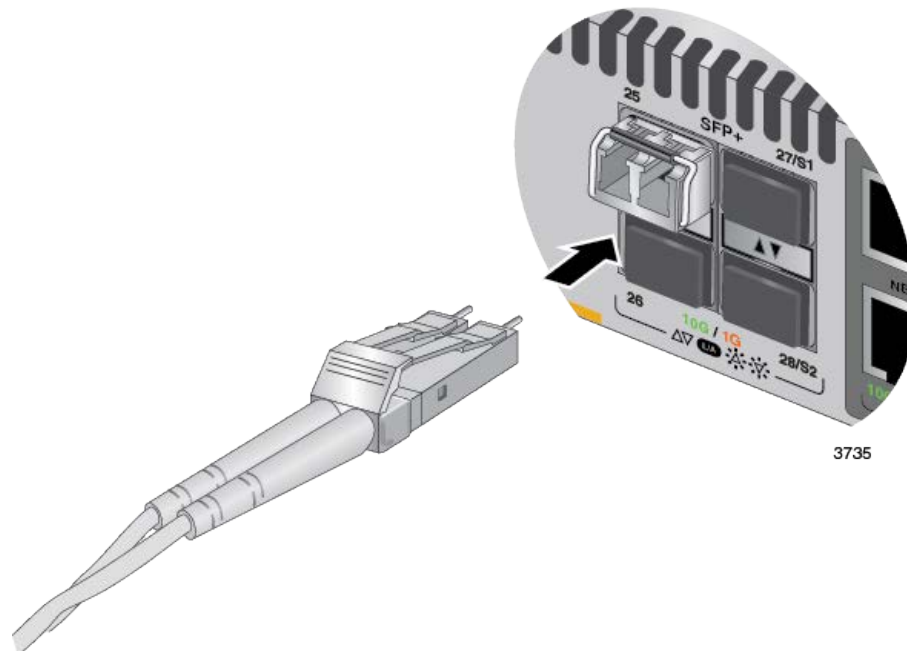


Figure 78. Connecting a Fiber Optic Cable to an SFP or SFP+ Transceiver

8. Repeat this procedure to install additional transceivers.

Specifying Ports in the Command Line Interface for Standalone Switches

The individual ports on the switches of the stack are specified in the command line interface with the PORT parameter. The format of the parameter is shown in Figure 79.

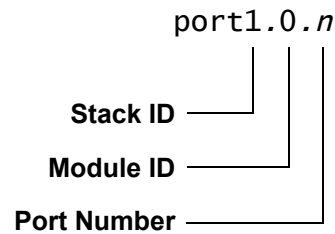


Figure 79. PORT Parameter in the Command Line Interface

The three parts of the PORT parameter are described in Table 17.

Table 17. PORT Parameter Format

Number	Description
Stack ID	Designates the switch's ID number. You must always enter 1 for this value for a standalone switch. Do not enter 0 for the stack ID of a standalone switch even though that is the value on the Switch ID LED.
Module ID	Designates the module number of a port. The possible values are listed here: <ul style="list-style-type: none"> - Enter 0 for the module ID to designate a port on the front panel of the switch. - Enter 1 to designate a port on the optional AT-x9EM/XT4 or AT-StackQS Card.
Port Number	Designates a port number.

Here is an example of the PORT parameter on a standalone switch. It uses the INTERFACE command to enter the Port Interface mode for ports 15 and 17 on the front panel of the switch:

```
awplus> enable
awplus# configure terminal
awplus(config)# interface port1.0.15,port1.0.17
```

This example enters the Port Interface mode for ports 1 and 2 on the optional AT-x9EM/XT4 Card:

```
awplus> enable
awplus# configure terminal
awplus(config)# interface port1.1.1-port1.1.2
```

For instructions on the command line interface and the PORT parameter, refer to the *Software Reference for x930 Series Switches, AlliedWare Plus Operating System*.

Installing AT-SP10TW Direct Connect Cables

This section contains the procedure for installing AT-SP10TW direct connect cables in SFP+ ports. Here are the guidelines:

- ❑ The cables are supported in ports 25 to 28 on 28-port x930 Switches and ports 49 to 52 on 52-port switches.
- ❑ The cables are hot-swappable. You may install them while the switch is powered on.



Warning

A transceiver can be damaged by static electricity. Be sure to observe all standard electrostatic discharge (ESD) precautions, such as wearing an anti-static wrist strap, to avoid damaging the device. *E92*

To install AT-SP10TW direct connect cables, perform the following procedure:

1. If the SFP+ port has a dust cover, remove it. Refer to Figure 76 on page 146.
2. Remove the AT-SP10TW direct connect cable from its shipping container and store the packaging material in a safe location.
3. Remove the dust cap from a connector on the cable. Refer to Figure 80.

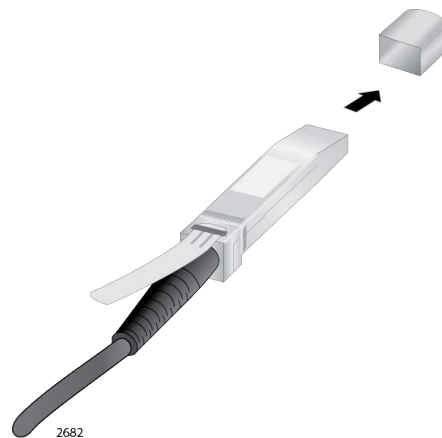


Figure 80. Removing the Dust Cover from the AT-SP10TW Cable

4. Slide the connector into the port. The release tab on the connector must be on top when installed in a top SFP+ port and on the bottom when installed it in a bottom SFP+ port. Refer to Figure 81.



Figure 81. Installing AT-SP10TW Cables

5. Install the other end of the cable in a compatible port on another network device. To use SFP+ ports as the VCStack trunk, the connections must crossover on the switches. The connection on port S1 in one switch must crossover to port S2 in the next switch.
6. Repeat this procedure to cable other SFP+ ports.

Cabling the AT-StackQS Card with AT-QSFPICU Cables

This section contains the procedure for cabling AT-StackQS Cards with copper AT-QSFPICU Cables. For installation instructions on installing the card, refer to Chapter 4, “Installing AT-StackQS and AT-x9EM/XT4 Cards” on page 83

To cable AT-StackQS Cards with AT-QSFPICU Cables, perform the following procedure:

1. Remove the dust cover from a port on the AT-StackQS Card. Refer to Figure 82.

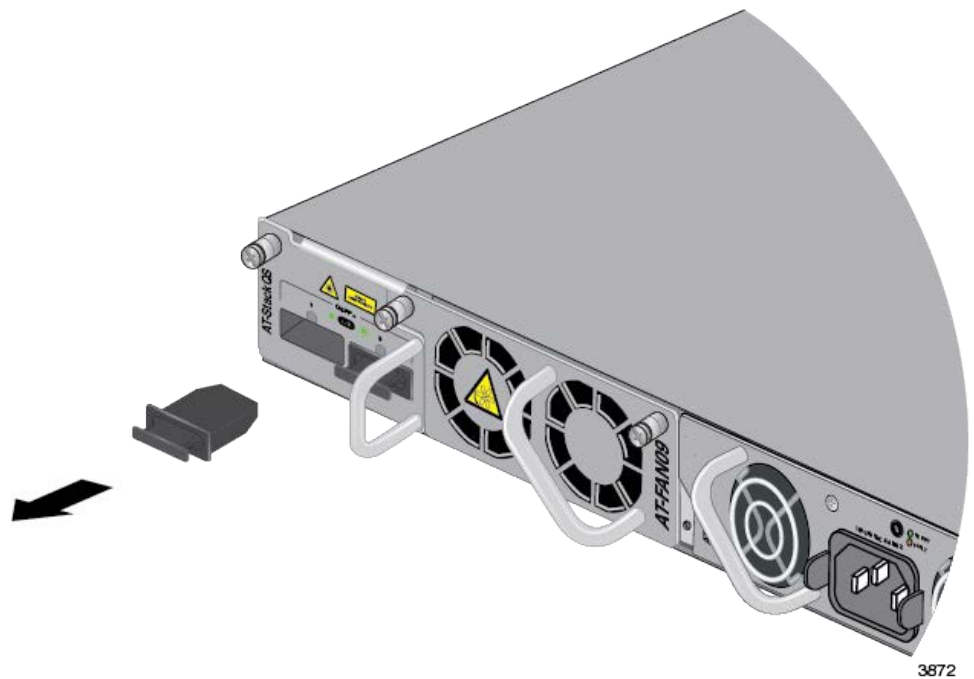


Figure 82. Removing the Dust Cover from Port 1

2. Slide the connector on the AT-QSFPICU Cable into the port until it clicks into place. Refer to Figure 83 on page 153.

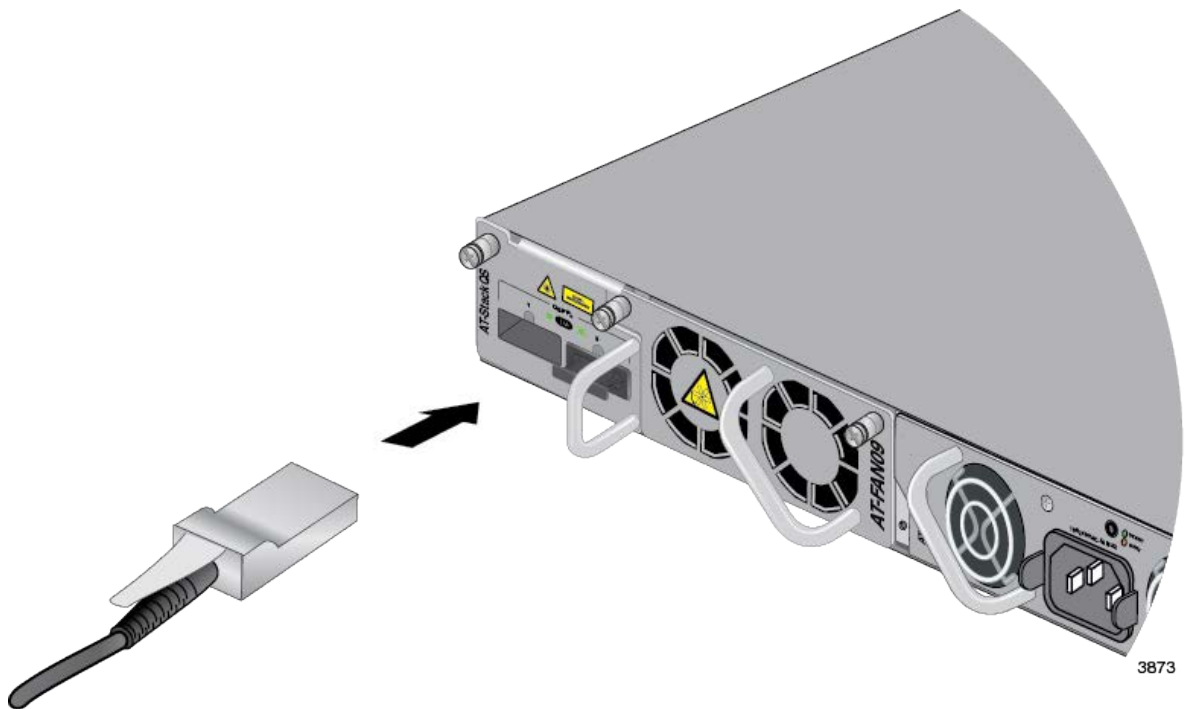


Figure 83. Installing the AT-QSFICU Cable in Port 1

3. Install the other end of the cable into a compatible port on another networking device. If you are using the cards for the VCStack trunk, the connections must crossover on the switches. Port 1 on the card in one switch must be connected to port 2 in the next switch.
4. Repeat this procedure to install and cable a transceiver in the second port.
5. If you are using the cards for the VCStack trunk, install and cable cards in the other switches of the stack.
6. If you are using the AT-StackQS Cards for the VCStack trunk, go to Chapter 14, "Building a Stack with AT-StackQS Cards" on page 193 after cabling the trunk ports on all the switches.

Cabling the AT-StackQS Card with Fiber Optic Transceivers

This section contains the procedure for cabling AT-StackQS Cards with AT-QSFPSR and AT-QSFPLR4 Transceivers. For instructions on installing the cards in switches, refer to Chapter 4, “Installing AT-StackQS and AT-x9EM/XT4 Cards” on page 83.

For the maximum operating distances and cable requirements of the transceivers, refer to the *x930 Data Sheet* on the Allied Telesis website for the list of supported transceivers for the AT-StackQS card.

The transceivers are hot-swappable. You can install them while the switches are powered on.

To cable the AT-StackQS Cards with fiber optic transceivers, perform the following procedure:

1. Remove the dust cover from one of the ports on the AT-StackQS Card.
2. Slide a transceivers into the port until it clicks into place.
3. Attach a fiber optic cable to the transceiver.
4. Repeat this procedure to install and cable a transceiver in the second port.
5. If you are using AT-StackQS Cards for the VCStack trunk, install and cable cards in the other switches of the stack. The connections must crossover on the switches. Port 1 on the card in one switch must be connected to port 2 in the next switch.
6. If you are using AT-StackQS Cards for the VCStack trunk, go to Chapter 14, “Building a Stack with AT-StackQS Cards” on page 193 after cabling all the switches.

Section III

Building a VCStack

The chapters in this section contain an overview of the VCStack feature, as well as the various procedures for forming a stack of x930 Switches:

- ❑ Chapter 12, “Virtual Chassis Stacking Overview” on page 157
- ❑ Chapter 13, “Building a Stack with SFP+ Ports S1 and S2” on page 187
- ❑ Chapter 14, “Building a Stack with AT-StackQS Cards” on page 193
- ❑ Chapter 15, “Building a Stack with Copper or SFP Gigabit Ports” on page 195
- ❑ Chapter 16, “Powering On and Verifying the Stack” on page 213

Section III:

Chapter 12

Virtual Chassis Stacking Overview

The sections in this chapter are listed here:

- “Overview” on page 158
- “Stack Trunks” on page 159
- “Trunks of Ports S1 and S2” on page 160
- “Trunks of AT-StackQS Cards” on page 164
- “Trunks of Copper 10/100/1000Mbps Ports” on page 167
- “Trunks of SFP Ports on AT-x930-28GSTX Switches” on page 169
- “General Stacking Guidelines” on page 172
- “Master and Member Switches” on page 173
- “Switch ID Numbers” on page 174
- “Feature Licenses” on page 175
- “Specifying Ports in the Command Line Interface” on page 176
- “Stack Worksheet” on page 178
- “VCStack Command Summary” on page 182
- “Displaying the Hardware Status and AlliedWare Plus Version Numbers” on page 185

Note

For more information on VCStack, refer to the *Stacking Introduction and Stacking Commands* chapters in the *Software Reference for x930 Series Switches, AlliedWare Operating System* at www.alliedtelesis.com.

Overview

The Virtual Chassis Stacking (VCStack) feature allows multiple x930 Switches to function as a single networking unit, with the following benefits:

- ❑ Simplifies management - You can manage the devices of the stack as a single unit, rather than individually. Your local and remote management sessions automatically give you management access to all the devices.
- ❑ Reduces IP addresses - A stack requires only one IP address for remote management access, thereby reducing the number of IP addresses you have to assign to network devices. The one address gives you management access to all the units.
- ❑ Adds network redundancy - You can add redundancy to your network topology by distributing functions across multiple switches. For instance, static port trunks on standalone switches have to consist of ports from the same switch. In contrast, static port trunks in a stack can have ports from different switches.
- ❑ Reduces protocol requirements - Creating a stack might eliminate your need to configure some protocols, such as the Virtual Router Redundancy Protocol and Spanning Tree Protocol.

Stack Trunks

The switches in a stack are connected by a trunk that consists of two or more ports on each device. The x930 Switches support the following four types of trunks:

- ❑ “Trunks of Ports S1 and S2” on page 160
- ❑ “Trunks of AT-StackQS Cards” on page 164
- ❑ “Trunks of Copper 10/100/1000Mbps Ports” on page 167
- ❑ “Trunks of SFP Ports on AT-x930-28GSTX Switches” on page 169

Note

The front-panel ports S1 and S2 are the default trunk ports, except if the switches contain AT-StackQS Cards, in which case their ports are the default trunk ports.

Trunks of Ports S1 and S2

Front-panel ports S1 and S2 are the default trunk ports on x930 Switches, except for switches containing AT-StackQS Cards, in which case those ports are the default trunk ports. The ports are 27/S1 and 28/S2 on 28-port switches and 52/S1 and 52/S2 on 52-port x930 Switches. Here are the guidelines:

- ❑ Stacks with trunks of ports S1 and S2 can have up to eight x930 Switches.
- ❑ Stacks can have both 28- and 52-port switches.
- ❑ Ports S1 and S2 support a variety of short and long distance fiber optic SFP+ transceivers and direct connect cables. You may use any of the supported transceivers for the trunk. Refer to the product's data sheet on the Allied Telesis web site for a list of supported transceivers. Transceivers are purchased separately.
- ❑ The SFP+ transceivers or direct connect cables must be from Allied Telesis. Switches with transceivers from other network equipment providers might not form the stack.
- ❑ The cables must crossover to different ports in the switches of the stack. Port S1 in one switch has to crossover to port S2 in the next switch. Additionally, the ports on the cards in the first and last switches of the stack have to be connected together to form a loop in the trunk.
- ❑ You can use ports S1 and S2 as regular networking ports by disabling VCStack or selecting other ports as the stack trunk.
- ❑ For switches that have AT-StackQS Cards, you have to perform the `STACK ENABLE BUILTIN PORTS` command to use ports S1 and S2 as the trunk ports.
- ❑ The bandwidth of the trunk is 40Gbps.

For instructions, refer to Chapter 13, “Building a Stack with SFP+ Ports S1 and S2” on page 187.

An example of a stack trunk of ports S1 and S2 for two switches is illustrated in Figure 84 on page 161.

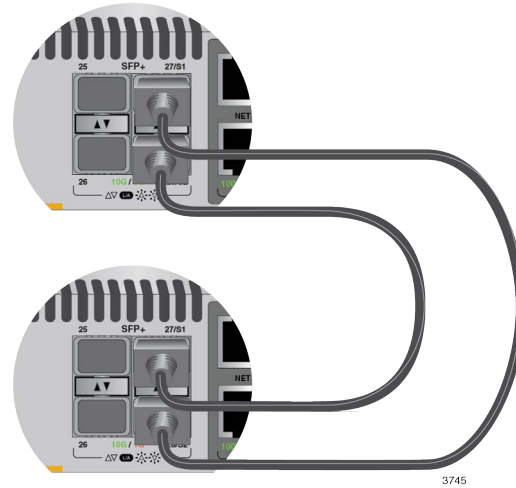


Figure 84. Trunk of Ports S1 and S2 for a Stack of Two Switches



Caution

The stack will not function if the connections to ports S1 and S2 do not crossover on the switches. The switches will instead operate as standalone devices. *E78*

An example of a stack trunk for four switches is illustrated in Figure 85.

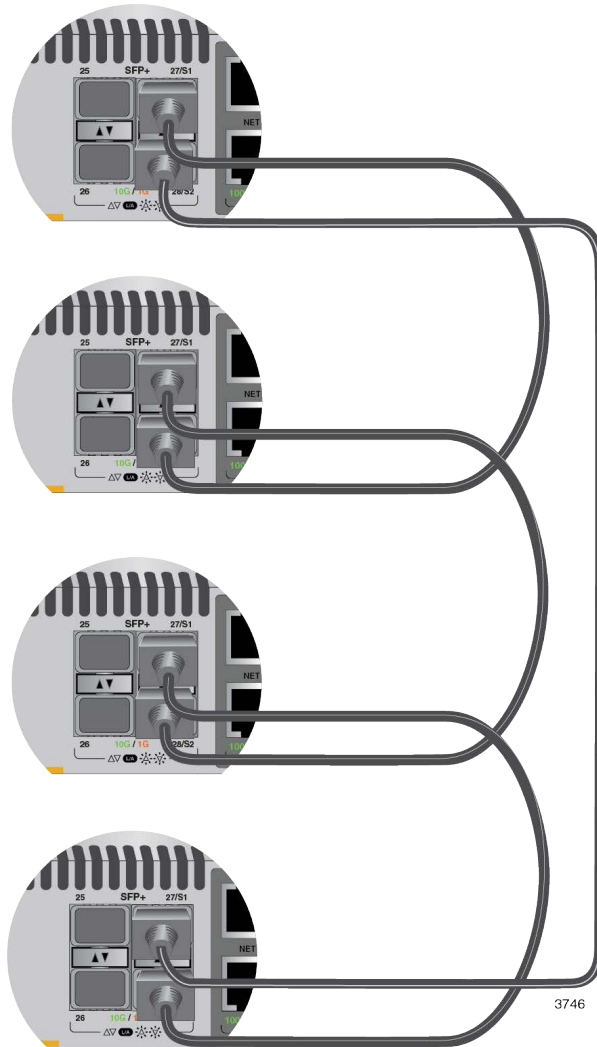


Figure 85. Trunk of Ports S1 and S2 for a Stack of Four Switches

A stack of eight switches is shown in Figure 86.

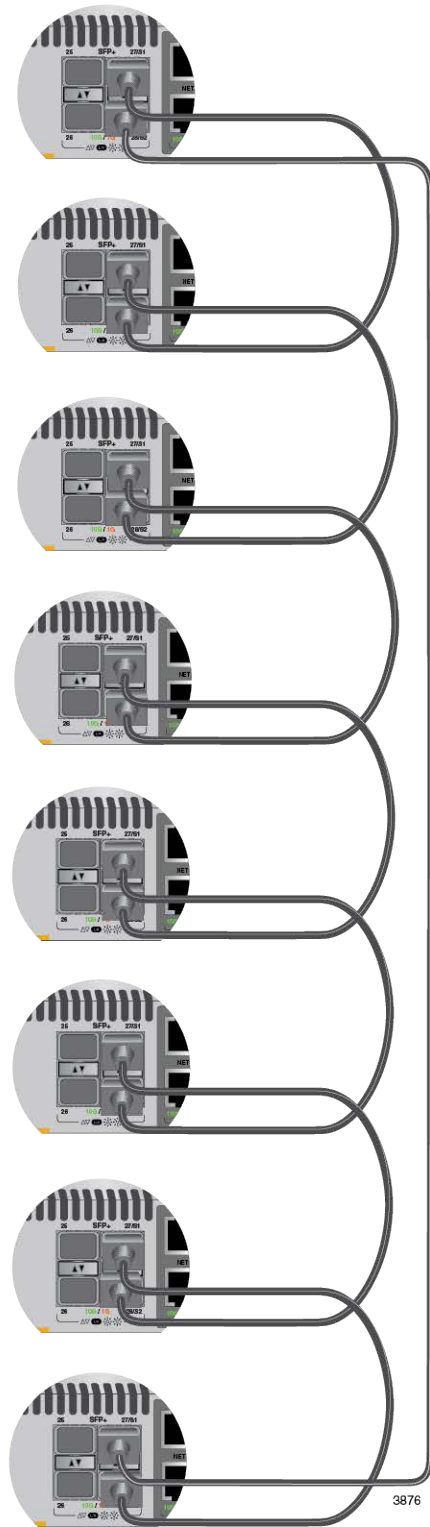


Figure 86. Trunk of Ports S1 and S2 for a Stack of Eight Switches

Trunks of AT-StackQS Cards

If you want to reserve ports S1 and S2 on the x930 Switches for other network functions or need a faster trunk for the stack, you can build a trunk with AT-StackQS Cards. They support 40Gbps QSFP+ transceivers in their two ports. Refer to Figure 17 on page 59. Here are the guidelines for a trunk of AT-StackQS Cards:

- ❑ Stacks can have up to eight x930 Switches.
- ❑ Stacks can have both 28- and 52-port switches.
- ❑ You must install AT-StackQS Cards in all the switches of the stack.
- ❑ You must use QSFP+ transceivers from Allied Telesis. Switches with transceivers from other network equipment providers might not form the stack. For a list of supported transceivers, refer to the product's data sheet on the Allied Telesis web site. Transceivers are purchased separately.
- ❑ The two ports on the AT-StackQS Cards are the default trunk ports. (For switches without AT-StackQS Cards, ports S1 and S2 are the default trunk ports.)
- ❑ The cables have to crossover to different ports on the cards in the switches of the stack. Port 1 on the card in one switch has to crossover to port 2 on the card in the next switch. Additionally, the ports on the cards in the first and last switches of the stack have to be connected together to form a loop in the trunk.
- ❑ To use the ports on AT-StackQS Cards as regular networking ports, you can disable VCStack or select other ports as the trunk.
- ❑ The bandwidth of the trunk is 160Gbps.

For instructions, refer to Chapter 14, "Building a Stack with AT-StackQS Cards" on page 193.

Here are examples of stack trunks of AT-StackQS Cards. Figure 87 on page 165 illustrates a stack of two x930 Switches.

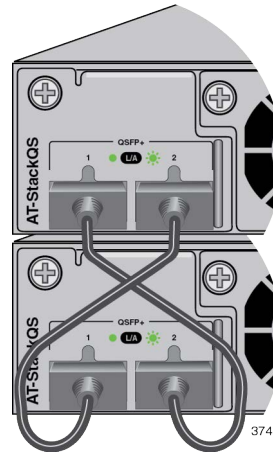


Figure 87. Trunk of AT-StackQS Cards for a Stack of Two Switches

The stack in Figure 88 has four switches.

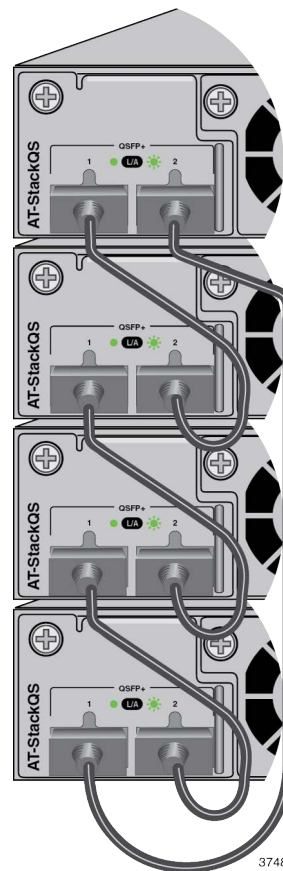


Figure 88. Trunk of AT-StackQS Cards for a Stack of Four Switches

Figure 89 is a stack of eight switches.

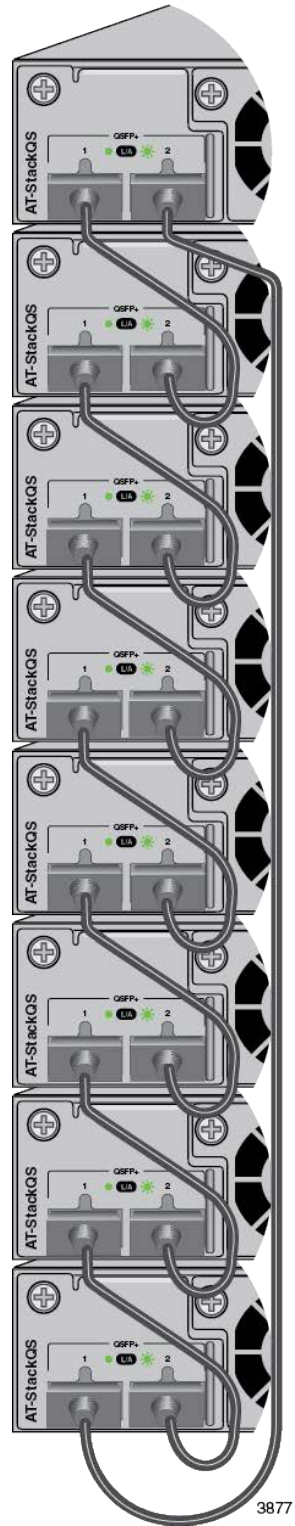


Figure 89. Trunk of AT-StackQS Cards for a Stack of Eight Switches

Trunks of Copper 10/100/1000Mbps Ports

You can use the copper Gigabit ports on the front panels as the trunks for stacks of x930 Switches. Here are the guidelines:

- ❑ Stacks can have up to four switches.
- ❑ Stacks can have both 28-port and 52-port x930 Switches.
- ❑ Trunks can have up to eight copper Gigabit ports per switch.
- ❑ For 52-port switches, You must use only ports in the range 1 to 24 for the trunk ports.
- ❑ You should try to use the same Gigabit ports as the trunk on all the switches in the stack. This can make managing and troubleshooting stacks easier.
- ❑ You have to configure the master and member switches of the stack by designating the Gigabit ports of the trunk with the `STACK ENABLE FRONT-PANEL-PORTS` and `STACKPORT` commands, and adding the members switches to the master switch as provisioned switches.
- ❑ The Gigabit ports of the trunk have to be at their default settings. You cannot change the settings of trunk ports.

Note

Trunks of copper Gigabit ports require AlliedWare Plus version 5.5.1-2.1 or later.

For instructions, refer to Chapter 15, “Building a Stack with Copper or SFP Gigabit Ports” on page 195

Here are examples of stacks with trunks of copper Gigabit ports. Figure 90 is of a stack of two switches. The trunk uses ports 1 to 4 on both switches. (The maximum is eight ports per switch.) This is not a requirement, but managing the stack will be easier if you select the same ports as the trunk on all the switches and connect the same ports together, when possible.

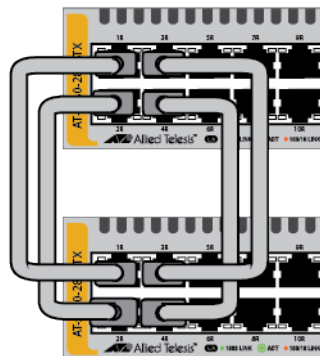


Figure 90. Trunk of Copper Gigabit Ports for a Stack of Two Switches

Trunks of SFP Ports on AT-x930-28GSTX Switches

AT-x930-28GSTX Switches have 24 Gigabit copper ports numbered 1R to 24R and 24 SFP ports numbered 1 to 24 on the front panels. As explained in “SFP Ports” on page 43, the ports are paired together. Copper port 1R and SFP port 1 are one pair, copper port 2R and SFP port 2 are another pair, and so on. Only one port in a pair can be active at a time. The copper Gigabit port is the active port when its companion SFP port is unused. The SFP port is the active port when an SFP transceiver is installed and linked to a network device.

You can use the copper ports or SFP Gigabit ports on AT-x930-28GSTX Switches as trunk ports. For directions on using copper Gigabit ports, refer to “Trunks of Copper 10/100/1000Mbps Ports” on page 167. Here are the guidelines to using SFP Gigabit ports as trunks:

- Stacks can have up to four switches.
- Trunks can have up to eight SFP ports per switch.
- Trunks can have both copper Gigabit ports and Gigabit SFP ports.
- Stacks can have both 28- and 52-port switches.
- You have to configure the master and member switches of the stack by designating the Gigabit ports of the trunk with the `STACK ENABLE FRONT-PANEL-PORTS` and `STACKPORT` commands, and adding the members switches to the master switch as provisioned switches.
- The SFP ports of the trunk have to be at their default settings. You cannot change the settings of trunk ports.
- The SFP transceivers must be from Allied Telesis. Switches might not form the stack with SFP transceivers from other network equipment providers. For a list of supported transceivers, refer to the product’s data sheet on the Allied Telesis web site.

Note

Trunks of SFP transceivers require AlliedWare Plus version 5.5.1-2.1 or later.

For instructions, refer to Chapter 15, “Building a Stack with Copper or SFP Gigabit Ports” on page 195.

Here are examples of trunks of SFP Gigabit ports for stacks of AT-x930-28GSTX Switches. The example in Figure 93 on page 170 is a stack of two AT-x930-28GSTX Switches. The trunk consists of SFP ports 1 to 4 on both switches. (The maximum number of trunk ports per switch is eight ports.) As with trunks of copper Gigabit ports, managing the stack will be easier if you select the same ports as the trunk on all the switches and connect the same ports together, when possible.

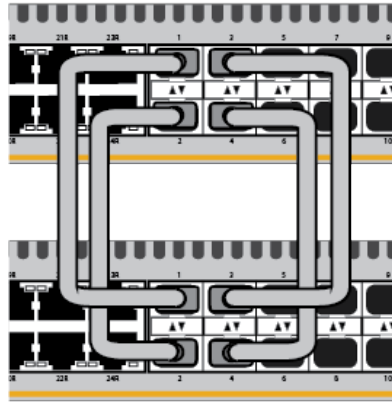


Figure 93. Trunk of SFP Gigabit Ports for a Stack of Two AT-x930-28GSTX Switches

The example in Figure 94 is a stack of three AT-x930-28GSTX Switches. As in the previous example, the trunk consists of SFP Gigabit ports 1 to 4.

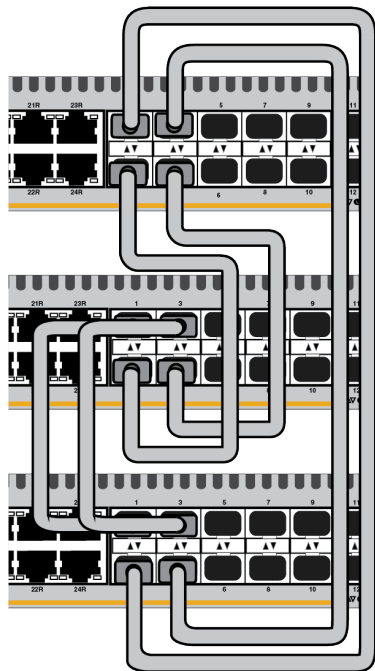


Figure 94. Trunk of SFP Gigabit Ports for a Stack of Three AT-x930-28GSTX Switches

For mixed stacks of AT-x930-28GSTX Switches and other x930 Switches, trunks can have both Gigabit copper ports and SFP ports. In Figure 95 on page 171, the trunk for the stack of two AT-x930-28GSTX Switches and two other x930 Switches has both Gigabit copper and SFP ports. The trunk ports on the AT-x930-28GSTX Switches are copper ports 21R and 22R, and SFP ports 1 and 2. The trunk ports on the other switches are copper ports 21 to 24.

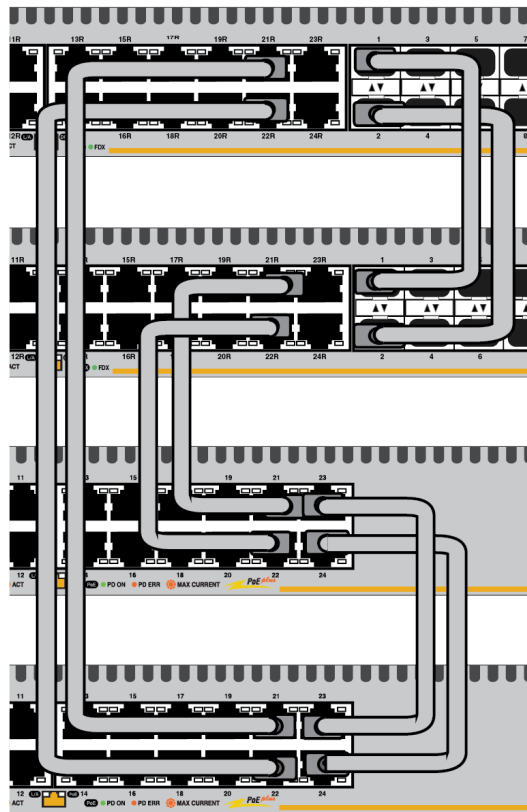


Figure 95. Trunk of SFP and Copper Gigabit Ports for a Mixed Stack of Four Switches

General Stacking Guidelines

Here are additional stacking guidelines:

- ❑ Stacking is enabled by default on x930 Switches.
- ❑ VCStack comes standard with the AlliedWare Plus software for x930 Switches. No additional software or licenses are required.
- ❑ The switches must all have the same version of AlliedWare Plus software.
- ❑ The switches can be the same or different x930 models.
- ❑ Any x930 Switch can be the master switch of a stack.
- ❑ A stack of x930 Switches cannot contain other stacking switches, such as x600 or x610 Switches.
- ❑ In stacks of three or more switches, all the switches must have the same number of trunk ports.
- ❑ Do not configure switch features, such as virtual LANs and routing protocols, before building the stack. Switches might discard the settings when the stack is powered on for the first time.
- ❑ Trunk ports must be directly linked together. There cannot be any intermediary devices, such as media converters, routers, or other switches, between trunk ports.
- ❑ Trunks cannot have different types of trunk ports. For example, a trunk cannot have both Gigabit copper ports and ports S1 and S2.

Master and Member Switches

Stacks have a master switch. Some of its functions include:

- Coordinate and monitor stack operations.
- Verify that the switches are using the same version of management software.
- Verify that the switches have different ID numbers. It automatically assigns new ID numbers to resolve situations where two or more switches have the same ID number.
- Verify that the stacking transceivers that connect the switches together are cabled correctly.

The other switches are called member switches. A member switch can automatically transition to the master role if the current master switch is removed from the stack or powered off. This ensures continued operations of the stack even if the master switch stops operating.

Selection of the Master Switch

The switches of the stack designate the master switch during the initialization process that they perform whenever they are powered on or reset. They select the master switch based on the following parameters:

- Stack priority numbers
- MAC addresses

The stack priority number is an adjustable value of 0 to 255, where the lower the number, the higher the priority. Typically, the switch with the lowest priority number (highest priority) becomes the master switch of a stack. The default priority value is 128.

If the switches have the same priority values, they select the master switch based on their MAC addresses. As with the priority value, the lower the MAC address, the higher the priority. The switch with the lowest MAC address becomes the master switch.

If you power on the switches of the stack simultaneously without adjusting the priority values, they select the master switch based on their MAC addresses. If you power on the switches one at a time, the master switch is the first switch to be powered on.

After the stack is established and operating, you may change the priority settings on the individual units and so control which switch will be the master switch the next time you reboot or power on the stack.

Switch ID Numbers

Each switch must be assigned an ID number. The range is 1 to 8 for a stack with a trunk of AT-StackQS modules or the S1 and S2 ports. The range is 1 to 4 when the stack trunk consists of the 1Gbps front panel ports. The default is 1. The ID numbers are displayed on the ID LEDs on the front panels of the units. You may assign the numbers yourself or let the master switch assign the numbers automatically when you initially power on the stack.

You use the ID numbers to identify the individual ports and switches when you configure the devices with the commands in the management software. For further information, refer to “Specifying Ports in the Command Line Interface” on page 176.

The ID numbers are also used to identify the parameter settings that are stored in the configuration file. When the stack is reset or power cycled, the ID numbers identify the devices to which the parameter settings belong.



Caution

You should not change the ID numbers of the switches after you start to configure the parameter settings. Otherwise, the parameter settings might be applied to the wrong devices when you reset or power cycle the stack. *E79*

The switches do not use their ID numbers to select the master switch. The selection of the master switch is based on their priority numbers and MAC addresses, as previously explained.

Feature Licenses

The x930 Switches comes with the AlliedWare Plus operating system and a base set of features that are available as soon as you install the devices. Allied Telesis provides additional features in the AlliedWare Plus software for the switches, but they have to be unlocked before you can use them. They are unlocked with feature licenses from Allied Telesis. Refer to the product's data sheet on the Allied Telesis web site for the list of licenses.

Here are the guidelines to feature licenses for a stack of x930 Series switches:

- ❑ The VCStack feature is part of the base features of the switches. It does not require a feature license.
- ❑ You may install feature licenses while the switches are operating as stand-alone units or as a stack.
- ❑ Depending on the feature license, you might have to order one license for each switch or one license for the entire stack.
- ❑ The switches will form a stack even if they have different feature licenses. However, the additional features are only available on those switches that have the necessary licenses. The stack generates a warning message if it detects that the switches do not have the same optional feature licenses.

Specifying Ports in the Command Line Interface

The individual ports on the switches of the stack are specified in the command line interface with the PORT parameter. The format of the parameter is shown in Figure 96.

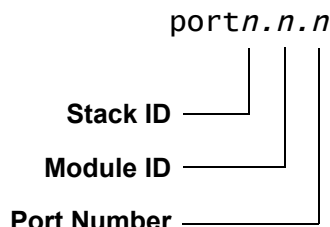


Figure 96. PORT Parameter in the Command Line Interface

The three parts of the PORT parameter are described in Table 18.

Table 18. PORT Parameter Format

Number	Description
Stack ID	Designates a switch's ID number. This number designates a switch in the stack. The switches display their ID numbers on their Switch ID LEDs. You can also view the ID numbers with the SHOW STACK command in the command line interface. You may specify only one ID number in the PORT parameter.
Module ID	Designates the module number of a port. The possible values are listed here: - Enter 0 for the module ID to designate a port on the front panel of a switch. - Enter 1 to designate a port on an optional AT-StackQS or AT-x9EM/XT4 Card.
Port Number	Designates a port number.

This example of the PORT parameter uses the INTERFACE command to enter the Port Interface mode for ports 15 and 17 on the switch with the ID number 1:

```
awplus> enable
awplus# configure terminal
awplus(config)# interface port1.0.15,port1.0.17
```

This example enters the Port Interface mode for ports 1 and 2 on the optional AT-x9EM/XT4 Card on the switch with the ID number 3:

```
awplus> enable
awplus# configure terminal
awplus(config)# interface port3.1.1-port3.1.2
```

For instructions on the command line interface and the PORT parameter, refer to the *Software Reference for x930 Series Switches, AlliedWare Operating System*.

Stack Worksheet

The worksheet in Table 19 can assist you in configuring and maintaining a stack.

Table 19. Stack Worksheet

	Switch/ Location	Switch ID	Prior- ity	Firmware Version Number ¹	Trunk Ports	Transceiver	StackQS or x9EM/XT4 Card
Master		1	1			25 49: 26 50 27 /S1 51/S1 28 /S2 52/S2	
Member		2	2			25 49: 26 50 27 /S1 51/S1 28 /S2 52/S2	
Member		3	3			25 49: 26 50 27 /S1 51/S1 28 /S2 52/S2	
Member		4	4			25 49: 26 50 27 /S1 51/S1 28 /S2 52/S2	

Table 19. Stack Worksheet

	Switch/ Location	Switch ID	Prior- ity	Firmware Version Number ¹	Trunk Ports	Transceiver	StackQS or x9EM/XT4 Card
Member		5	5			25 49: 26 50 27 /S1 51/S1 28 /S2 52/S2	
Member		6	6			25 49: 26 50 27 /S1 51/S1 28 /S2 52/S2	
Member		7	7			25 49: 26 50 27 /S1 51/S1 28 /S2 52/S2	
Member		8	8			25 49: 26 50 27 /S1 51/S1 28 /S2 52/S2	

1. AlliedWare Plus version number.

The worksheet columns are described in Table 20.

Table 20. Stacking Worksheet Columns

Column	Description
Switch/Location	Use this column to record the model names and physical locations of the switches, such as their buildings or equipment rooms. The information can be useful in identifying and locating the switches if they are in different locations.
Switch ID	Each switch in a stack has to have a unique ID number, in the range of 1 to 4. They display the numbers on the ID LEDs on the front panels and you use the numbers to configure the individual ports. Allied Telesis recommends assigning the ID 1, the default value, to the master switch. You should decide on the ID assignments of the switches before beginning the configuration procedures.
Priority	<p>When the switches of a stack are reset or powered on, they perform an initialization process that involves, in part, choosing the master switch. The selection is based on their priority numbers and MAC addresses. The former is an adjustable parameter with a range of 0 to 255 and a default value of 128. The lower the value, the higher the priority. Thus, the switch with the lowest value becomes the stack master.</p> <p>If switches have the same priority number, the master is selected based on their MAC addresses. Again, as with priority numbers, the lower the MAC address, the higher the priority.</p> <p>Allied Telesis recommends setting each switch's priority value to match its ID value. This is to ensure that the switch you have chosen to be the master unit will indeed function in that role. It will also make it possible for you to know the order in which the switches assume the master role if the primary master should fail or be powered off.</p>

Table 20. Stacking Worksheet Columns (Continued)

Column	Description
Firmware Version Number	Use this column to record the version numbers of the AlliedWare Plus management software on the switches. The switches might not be able to form the stack if they have different versions. Switches that have different versions should be updated to the most recent release before you build the stack. The configuration instructions explain how to view the version numbers.
Trunk Ports	Use this column to enter the trunk ports. You should choose the ports before beginning the configuration procedures. Refer to “Stack Trunks” on page 159.
Transceivers	Used this column to record the types of transceivers in ports 25, 26, 27/S1, and 28/S2 of 28-port switches and ports 49, 50, 51/S1, and 52/S2 of 52-port switches.
AT-x9EM/XT4 or AT-StackQS Card	Use this column to enter the names of expansion cards in the switches.

VCStack Command Summary

This section reviews the AlliedWare Plus commands for configuring master and member switches for VCStack. For further instructions, refer to the *Software Reference for x930 Switch, AlliedWare Plus Operating System*.

STACK ENABLE Command

You use this command in the Global Configuration mode of the AlliedWare Plus software to enable or disable the VCStack feature on the switch, and to designate the trunk ports. It has four formats:

- ❑ **STACK ENABLE BUILTIN-PORTS:** This command enables VCStack on the switch and designates the SFP+ S1 and S2 ports as the stack trunk. This is the default setting for x930 Switches that do not have AT-StackQS Cards.
- ❑ **STACK ENABLE EXPANSION-PORTS:** This command enables VCStack on the switch and designates the ports on AT-StackQS Cards as the stack trunk. This is the default setting for x930 Switches that have AT-StackQS Cards.
- ❑ **STACK ENABLE FRONT-PANEL-PORTS:** This command enables VCStack on switches and designates Gigabit ports on the front panels as the stack trunk.
- ❑ **NO STACK ENABLE:** This command disables VCStack. You can use the switch as a standalone unit when the feature is disabled.

STACKPORT Command

You use this command in the port interface modes of the AlliedWare Plus software to add and remove ports from the stack trunk. Here are its two forms:

- ❑ **STACKPORT:** You use this command to add ports to the stack trunk.
- ❑ **NO STACKPORT:** You use this command to remove ports from the stack trunk and return them to regular Ethernet networking ports.

STACK PRIORITY Command

This command is used to set a switch's priority value. Every switch in a stack has a priority value. The range is 0 to 255. The default is 128. The lower the number, the higher the priority. Switches use their priority settings for the following functions:

- ❑ Select the master switch when the switches are powered on or rebooted simultaneously.

- ❑ Designate the order in which they become the master switch if the active master switch stops responding. If the switches have the same priority value, they use their MAC addresses to select the master. The lower the MAC address, the higher the priority.

Allied Telesis recommends setting the priority numbers to match the switch ID numbers. For example, the switch with ID 1 should be assigned priority 1, switch with ID 2 should be assigned priority 2, and so on. This is not a requirement, but it can make managing and troubleshooting the stack easier.

You can set the priority number on the master switch before building the stack, but you have to wait until the member switches are part of the stack before setting their priority values.

Note

Setting the priority values can protect the stack's configuration if you later add a new switch that has a lower MAC address than the active master while the stack is powered off. If the priority values of the switches are at the default value when you power on the stack, the new switch might become the master, possibly resulting in the loss of the stack's configuration.

The command has this format:

```
stack switch_ID priority priority_number
```

The variables are defined here:

- ❑ *switch_ID* - This is the ID number of the switch. The ID number is displayed on the ID LED on the front panel. The range is 1 to 6. You can specify only one ID number.
- ❑ *priority_number* - This is the new priority number for the switch. The range is 0 to 255. The default is 128. You can specify only one number.

This example assigns the priority 1 to the switch with ID 1:

```
awplus(config)# stack 1 priority 1
```

This example assigns the priority 2 to the switch with ID 2:

```
awplus(config)# stack 2 priority 2
```

STACK RENUMBER Command

Every switch in the stack must have a unique ID number. They display their numbers on the ID LEDs on the front panels. The range is 1 to 8 or 1 to 4, depending on the stack trunk. The default is 1. You use the numbers to identify switches in the command line interface of the AlliedWare Plus software. Refer to “Switch ID Numbers” on page 174.

The master switch can assign the ID numbers automatically during the first power-on of the stack, or you can use this command to set them either before or immediately after building the stack. The command, which is found in the Global Configuration mode, has this format.

```
stack current_switch_ID renumber new_switch_ID
```

The variables are defined here:

- *current_switch_ID* - This is the current ID number of the switch. You can specify only one ID number.
- *new_switch_ID* - This is the new ID number for the switch. The range is 1 to 6. The default is 1. You can specify only one number.

Changing the ID number requires resetting the switch.

This example changes a switch’s current ID from 1, the default, to 2:

```
awplus(config)# stack 1 renumber 2
```

Note

Switches use their priority numbers and MAC addresses, not their ID numbers, to select the master switch. Consequently, the master switch of the stack might not have the ID number 1.

SWITCH PROVISION Command

You use this command to add member switches to the configuration of the master switch before powering on the stack for the first time. Here is the format of the command:

```
switch switch_ID provision x930
```

This example adds a provisioned member switch with the ID 2 to the master switch:

```
awplus(config)# switch 2 provision x930
```

You can add one member switch at a time with the command.

Displaying the Hardware Status and AlliedWare Plus Version Numbers

This section contains the procedure for displaying the version numbers of the AlliedWare Plus software on the switches. This procedure is important if the switches contain the AT-StackQS or AT-x9EM/XT4 Card, or if you plan to use copper or SFP gigabit ports for the trunk. The procedure verifies that the AlliedWare Plus versions on the switches supports the hardware features, and that all switches have the same version.

To verify support for the hardware features, perform the following procedure:

1. Power on one of the switches by doing one of the following:
 - ❑ If the switch has an AC power supply, connect the AC power cord to the power supply on the back panel and to an AC power source. If the switch has two power supplies, you need to power on only one of them for this procedure.
 - ❑ If the switch has the DC AT-PWR250-80 Power Supply, power on the DC circuit and the On/Off switch on the power supply. (If you have not yet wired the DC connector on the power supply, refer to Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.)
2. Wait one minute for the switch to initialize its management software.
3. Start a local management session on the switch. For instructions, refer to “Starting a Local Management Session” on page 135.
4. In the User Exec or Privileged Exec mode, enter the `SHOW SYSTEM ENVIRONMENT` command to display hardware status. Check the Status column. All components should have the “OK” status.
5. In the User Exec mode, enter either the `SHOW SYSTEM` or `SHOW VERSION` command.
6. Compare the Software Version field in the command with the information in Table 18 on page 176 to determine whether the switch supports the hardware options and whether you need to update its software. For example, if you are building a VCStack with AT-StackQS Cards and AT-QSFPSR Transceivers, you will need to update the software if it is earlier than 5.4.5-1.

Table 21. Hardware Options and Management Software Versions

Optional Hardware	Minimum Version of Operating System
AT-StackQS Card and AT-QSFPICU Cables	5.4.5
AT-StackQS Card and AT-QSFPSR Transceivers	5.4.5-1
AT-StackQS Card and AT-QSFPLR4 Transceivers	5.4.5-2
AT-x9EM/XT4 Card	5.4.5-2
Stack trunks of copper or SFP Gigabit ports	5.5.1-2.1

7. Do one of the following:
 - If you need to upgrade the AlliedWare Plus software on the switch, refer to the *Software Reference for x930 Series Switches, AlliedWare Operating System* from www.alliedtelesis.com for instructions.
 - If you do not have to update the software, repeat the procedures in this chapter on the remaining switches of the stack.
 - If you are using the “Stack Worksheet” on page 178, you should write down the version number in the entry for the switch.
8. If there are no further switches, power off all the switches.
9. Go to one of the following chapters:
 - Chapter 13, “Building a Stack with SFP+ Ports S1 and S2” on page 187
 - Chapter 14, “Building a Stack with AT-StackQS Cards” on page 193
 - Chapter 15, “Building a Stack with Copper or SFP Gigabit Ports” on page 195

Chapter 13

Building a Stack with SFP+ Ports S1 and S2

This chapter explains how to build a stack of x930 Switches using the SFP+ ports S1 and S2 as the trunk. The chapter contains the following procedures:

- ❑ “Introduction” on page 188
- ❑ “Designating SFP+ Ports S1 and S2 as the Stack Trunk” on page 190

Introduction

This chapter contains instructions on how to build a stack of up to eight x930 Switches with SFP+ ports S1 and S2 as the stack trunk. Review the following information before performing the procedures:

- ❑ No configuration procedures are required if the x930 Switches are at their default settings and do not contain AT-StackQS Cards. VCStack is enabled by default and the SFP+ ports S1 and S2 are the default trunk ports. You can power on the switches of the stack either individually to control the assignment of the switch ID numbers yourself or simultaneously to allow the switches to assign the numbers automatically. Refer to “Powering On the Switches Sequentially” on page 215 or “Powering On the Switches Simultaneously” on page 217.
- ❑ For x930 Switches containing AT-StackQS Cards, you must perform “Designating SFP+ Ports S1 and S2 as the Stack Trunk” on page 190 before cabling the trunk ports and building the stack. As explained in the procedure, you have to explicitly set the SFP+ ports S1 and S2 as the stack trunk with the STACK ENABLE BUILTIN PORTS command on switches containing AT-StackQS Cards.

For background information on switch ID numbers, refer to “Switch ID Numbers” on page 174.

Here are the basic steps to building a stack of up to eight x930 Switches with the SFP+ ports S1 and S2 as the stack trunk:

1. Fill in the “Stack Worksheet” on page 178.
2. Install the power supplies in the switches. Refer to Chapter 3, “Installing the Power Supplies” on page 73.
3. Install the switches at their respective sites: Here are the instructions:
 - ❑ Chapter 5, “Installing the Switch on a Table” on page 93
 - ❑ Chapter 6, “Installing the Switch in an Equipment Rack” on page 95
 - ❑ Chapter 7, “Installing the Switch on a Wall” on page 101
4. If any of the switches have the AT-PWR250-80 DC Power Supply, perform the procedure in Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.
5. Perform the procedure in “Viewing the AlliedWare Plus Version Number” on page 140 on each switch individually to confirm they all have the same version of the AlliedWare Plus software.

6. If any of the switches have the AT-StackQS Card, perform “Designating SFP+ Ports S1 and S2 as the Stack Trunk” on page 190 on those switches.
7. Install and cable SFP+ transceivers in the S1 and S2 ports. For instructions, refer to “Installing SFP or SFP+ Transceivers” on page 144. For cabling examples of the S1 and S2 ports as the stack trunk, refer to “Trunks of Ports S1 and S2” on page 160.
8. Power on all the switches of the stack:
 - Refer to “Powering On the Switches Sequentially” on page 215 to assign the stack ID numbers yourself, or:
 - “Powering On the Switches Simultaneously” on page 217 to have the switches assign the numbers.

Note

Refer to “Power Specifications” on page 235 for the power specifications of the switches.

9. Perform “Verifying the Stack and Assigning Priority Numbers” on page 219.

**Caution**

Do not change switch ID numbers after beginning to configure the parameter settings of the stack. Otherwise, the stack might assign configuration settings to the wrong switches the next time you reboot or power on the stack.

Designating SFP+ Ports S1 and S2 as the Stack Trunk

The following procedure designates the SFP+ ports S1 and S2 ports as the trunk ports on switches containing AT-StackQS Cards. Review the following information before performing the procedure:

- ❑ The SFP+ ports S1 and S2 are the default trunk ports in switches that are at the default settings and do not contain AT-StackQS Cards. If none of the switches contains the AT-StackQS Card, you can skip this procedure and go to “Powering On the Switches Sequentially” on page 215 or “Powering On the Switches Simultaneously” on page 217.
- ❑ For switches containing AT-StackQS Cards, the default trunk ports are the two 40Gbps ports on the cards. To use the front panel SFP+ ports S1 and S2 as the stack trunk instead, you have perform the STACK ENABLE BUILTIN-PORTS command, as explained in the following procedure. The command designates the SFP+ ports S1 and S2 as the trunk ports and redefines the 40Gbps ports on the AT-StackQS Cards as regular networking ports.
- ❑ You must also perform this command if you designated front panel Gigabit ports as the trunk, but later decide to use the SFP+ ports S1 and S2 instead.
- ❑ You should disconnect all cables from the SFP+ ports S1 and S2 and AT-StackQS Cards before performing the procedure.

This procedure assumes the following:

- ❑ You performed the procedures in “Displaying the Hardware Status and AlliedWare Plus Version Numbers” on page 185.
- ❑ There are no cables connected to the SFP+ ports S1 and S2.
- ❑ For switches with DC AT-PWR250-80 Power Supplies, you have already wired the DC connectors. For instructions, refer to Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.

To designate the SFP+ ports S1 and S2 ports as the trunk ports in switches containing AT-StackQS Cards, perform the procedure in Table 22.

Table 22. Designating SFP+ Ports S1 and S2 as the Stack Trunk in Switches Containing AT-StackQS Cards

Step	Description and Command
1	Power on the switch and start a local management session. Refer to “Starting a Local Management Session” on page 135.

Table 22. Designating SFP+ Ports S1 and S2 as the Stack Trunk in Switches Containing AT-StackQS Cards (Continued)

Step	Description and Command
2	Enter the ENABLE and CONFIGURE TERMINAL commands to move to the Global Configuration mode. <pre>awplus> enable awplus# configure terminal</pre> Enter configuration commands, one per line. End with CNTL/Z.
3	Enter the STACK ENABLE BUILTIN PORTS command to designate the SFP+ ports S1 and S2 as the trunk ports for the switch: <pre>awplus(config)# stack enable builtin-ports</pre>
4	Enter the EXIT command to return to the Privileged Exec mode. <pre>awplus(config)# exit</pre>
5	Enter the WRITE command to save your change. <pre>awplus# write Building configuration ... [OK]</pre>
6	Restart the switch with the REBOOT command. <pre>awplus# reboot reboot system? (y/n):</pre>
7	Type "Y" for yes.
8	Wait one minute for the switch to start the AlliedWare Plus software.
9	Start a new local management session on the switch.
10	Enter the SHOW RUNNING-CONFIG command to display the switch's configuration. Check the configuration for the STACK ENABLE BUILTIN PORTS command. If the command is present in the configuration, go to the next step. Otherwise, repeat this procedure: <pre>awplus> show running-config</pre>
11	Enter the exit command to end your management session. <pre>awplus> exit</pre>
12	Power off the switch.
13	Repeat this procedure on all x930 Switches containing AT-StackQS Cards.

Table 22. Designating SFP+ Ports S1 and S2 as the Stack Trunk in Switches Containing AT-StackQS Cards (Continued)

Step	Description and Command
14	Cable the SFP+ ports S1 and S2 for the trunk. Refer to “Installing SFP or SFP+ Transceivers” on page 144 or “Installing AT-SP10TW Direct Connect Cables” on page 150
15	Power on the switches of the stack either individually to control the assignment of the ID numbers yourself or simultaneously to allow the switches to assign the numbers automatically. Refer to “Powering On the Switches Sequentially” on page 215 or “Powering On the Switches Simultaneously” on page 217.
16	Verify the stack by performing “Verifying the Stack and Assigning Priority Numbers” on page 219.

After performing the previous procedure on all switches containing AT-StackQS Cards, do the following to complete building the stack:

1. Power off all the switches to be in the stack.
2. Cable the SFP+ ports S1 and S2 for the trunk. Refer to “Installing SFP or SFP+ Transceivers” on page 144 and “Installing AT-SP10TW Direct Connect Cables” on page 150.
3. Power on the switches of the stack either individually to control the assignment of the ID numbers yourself or simultaneously to allow the switches to assign the numbers automatically. Refer to “Powering On the Switches Sequentially” on page 215 or “Powering On the Switches Simultaneously” on page 217.
4. Verify the operations of the stack by performing “Verifying the Stack and Assigning Priority Numbers” on page 219.

Building a Stack with AT-StackQS Cards

This chapter explains how to build a stack of up to eight x930 Switches with a stack trunk of 40Gbps transceivers in AT-StackQS Cards. There are no configuration procedures. The stacking feature is enabled by default on the switches and the ports on the AT-StackQS Cards, if present, are the default trunk ports.

Here are the basic steps to building a stack of up to eight x930 Switches with the ports on AT-StackQS Cards as the trunk ports:

1. Fill in the “Stack Worksheet” on page 178.
2. Install AT-StackQS Cards in the switches. Refer to Chapter 4, “Installing AT-StackQS and AT-x9EM/XT4 Cards” on page 83.
3. Install the power supplies. Refer to Chapter 3, “Installing the Power Supplies” on page 73.
4. Install the switches at their respective sites: Here are the instructions:
 - ❑ Chapter 5, “Installing the Switch on a Table” on page 93
 - ❑ Chapter 6, “Installing the Switch in an Equipment Rack” on page 95
 - ❑ Chapter 7, “Installing the Switch on a Wall” on page 101
5. If any of the switches have the AT-PWR250-80 DC Power Supply, perform the procedure in Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117
6. Perform the procedure in “Viewing the AlliedWare Plus Version Number” on page 140 on each switch individually to confirm that all they all have the same version of the AlliedWare Plus software.
7. Cable the AT-StackQS Cards with 40Gbps transceivers as the stack trunk. Refer to “Trunks of AT-StackQS Cards” on page 164 for examples of cabling the ports as a stack trunk. For cabling instructions, refer to the following sections:
 - ❑ “Cabling the AT-StackQS Card with AT-QSFPICU Cables” on page 152
 - ❑ “Cabling the AT-StackQS Card with Fiber Optic Transceivers” on page 154.

8. Power on all the switches of the stack with one of these procedures:
 - ❑ Refer to “Powering On the Switches Sequentially” on page 215 to assign the stack ID numbers yourself, or:
 - ❑ “Powering On the Switches Simultaneously” on page 217 to have the switches assign the numbers.

Note

Refer to “Power Specifications” on page 235 for the power specifications of the switches.

9. Perform “Verifying the Stack and Assigning Priority Numbers” on page 219.



Caution

Do not change switch ID numbers after beginning to configure the parameter settings of the stack. Otherwise, the stack might assign configuration settings to the wrong switches the next time you reboot or power on the stack.

Chapter 15

Building a Stack with Copper or SFP Gigabit Ports

This chapter explains how to build a stack of x930 Switches using front panel copper or SFP Gigabit ports as the trunk. The chapter contains the following sections:

- ❑ “Introduction” on page 196
- ❑ “Configuring the Master Switch” on page 198
- ❑ “Configuring the Member Switches” on page 205

Introduction

This chapter contains instructions on how to build a stack with a trunk of Gigabit ports on the front panels of the x930 Switches. For background information and examples, refer to “Trunks of Copper 10/100/1000Mbps Ports” on page 167 and “Trunks of SFP Ports on AT-x930-28GSTX Switches” on page 169. Here are the main steps:

1. Fill in the “Stack Worksheet” on page 178.
2. Install the power supplies in the switches. Refer to Chapter 3, “Installing the Power Supplies” on page 73.
3. Install the switches at their respective sites: Here are the instructions:
 - ❑ Chapter 5, “Installing the Switch on a Table” on page 93
 - ❑ Chapter 6, “Installing the Switch in an Equipment Rack” on page 95
 - ❑ Chapter 7, “Installing the Switch on a Wall” on page 101
4. If any of the switches have the AT-PWR250-80 DC Power Supply, perform the procedure in Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.
5. Perform the procedure in “Viewing the AlliedWare Plus Version Number” on page 140 on each switch individually to confirm they all have the same version of the AlliedWare Plus software.
6. Review “VCStack Command Summary” on page 182.
7. Perform “Configuring the Master Switch” on page 198.
8. Perform “Configuring the Member Switches” on page 205.
9. Cable the Gigabit ports of the trunk:
 - ❑ “Cabling Copper Ports” on page 142
 - ❑ “Installing SFP or SFP+ Transceivers” on page 144
10. Power on all the switches of the stack:
 - ❑ Refer to “Powering On the Switches Sequentially” on page 215 to assign the stack ID numbers yourself, or:
 - ❑ “Powering On the Switches Simultaneously” on page 217 to have the switches assign the numbers.

Note

Refer to “Power Specifications” on page 235 for the power specifications of the switches.

11. Perform “Verifying the Stack and Assigning Priority Numbers” on page 219.



Caution

Do not change switch ID numbers after beginning to configure the parameter settings of the stack. Otherwise, the stack might assign configuration settings to the wrong switches the next time you reboot or power on the stack.

Review the following information before performing the instructions:

- The procedures should be performed in the order presented here.
- The master switch can be any x930 Switch. Refer to “Master and Member Switches” on page 173.
- If network cables are connected to the Gigabit ports that will be the trunk, disconnect them before continuing. You should configure the switches before cabling the trunk ports.

Note

Cabling the ports of the stack trunk before configuring the switches may result in loops in your network topology, which can cause poor network performance.

Configuring the Master Switch

This section contains the procedures for configuring x930 Switches to be the master switch of a stack. The procedures designate the Gigabit ports of the trunk and add the member switches as provisioned switches to the configuration of the master switch.

Note

Any x930 Switch can be the master switch of the stack.

Here are the procedures:

- ❑ “General Steps for the Master Switch,” next
- ❑ “Configuring the Master Switch - Part I” on page 199
- ❑ “Configuring the Master Switch - Part II” on page 201
- ❑ “Verifying the Master Switch” on page 202
- ❑ “What to Do Next” on page 204

The procedures should be performed in the order presented here.

Note

The procedures require resetting the switch. Some network traffic will be lost if its ports are connected to active networks.

Allied Telesis recommends filling out the “Stack Worksheet” on page 178 before building the stack.

General Steps for the Master Switch

There are two parts to configuring the master switch for a stack trunk of Gigabit ports. Here are the main steps to Part I:

1. Start a local management session on the switch.
2. Designate Gigabit front panel ports to be trunk ports with the STACK ENABLE FRONT-PANEL-PORTS command in the Global Configuration mode. You have to perform this command before designating the actual Gigabit ports of the trunk.
3. Designate up to eight Gigabit ports to be the stack trunk with the STACKPORT command in the port interface modes.
4. Assign the master switch the priority 1 with the STACK PRIORITY command in the Global Configuration mode to designate it as master switch of the stack. This step is optional.

5. Save your changes with the WRITE command in the Privilege Exec mode.

Here are the main steps to Part II:

1. Add the member switches as provisioned units to the configuration of the master switch, with the SWITCH PROVISION command.
2. Designate up to eight Gigabit ports on the provisioned member switches to be the stack trunk with the STACKPORT command in the port interface modes.
3. Save your changes to the master switch with the WRITE command in the Privilege Exec mode.
4. Reboot the master switch with the REBOOT command.
5. Start a new local management session.
6. Verify the changes on the master switch with the SHOW STACK and SHOW RUNNING-CONFIG INTERFACE command.

Configuring the Master Switch - Part I

To configure Gigabit ports on the master switch as the stack trunk, start by performing the procedure in Table 23.

Table 23. Configuring the Master Switch to Use Gigabit Ports as the Stack Trunk - Part I

Step	Description and Command
1	Power on the switch to be the master switch and start a local management session. Any x930 Switch can be the master switch of a stack. Refer to “Starting a Local Management Session” on page 135.
2	Enter the ENABLE and CONFIGURE TERMINAL commands to move to the Global Configuration mode. awplus> enable awplus# configure terminal Enter configuration commands, one per line. End with CNTL/Z. awplus(config)#
Step 3 designates Gigabit ports as the stack trunk with the STACK ENABLE FRONT-PANEL-PORTS command.	
3	Enter the STACK ENABLE FRONT-PANEL-PORTS command in the Global Configuration mode to designate Gigabit ports as the stack trunk. You have to perform this command before designating the actual trunk ports: awplus(config)# stack enable front-panel-ports

Table 23. Configuring the Master Switch to Use Gigabit Ports as the Stack Trunk - Part I (Continued)

Step	Description and Command
Steps 4 and 5 designate the Gigabit ports of the trunk.	
4	Enter the port interface modes of the Gigabit ports to be the stack trunk. The trunk can have up to eight ports per switch. If you filled out the Stack Worksheet, refer there for the ports. This example assumes ports 1 to 8 will be the trunk: <pre>awplus(config)# interface port1.0.1-1.0.8 awplus(config-if)#</pre>
5	Enter the STACKPORT command to designate the Gigabit ports as the stack trunk: <pre>awplus(config-if)# stackport</pre> % Save the config and restart the system for this change to take effect.
Steps 6 and 7 assign the switch the priority 1 with the STACK PRIORITY command to designate it as the master unit of the stack. These steps are optional.	
6	Enter the EXIT command to return to the Global Configuration mode. <pre>awplus(config-if)# exit</pre>
7	Enter the STACK PRIORITY command to assign priority 1 to the switch. <pre>awplus(config)# stack 1 priority 1</pre>
The remaining steps save your changes.	
8	Enter the EXIT command to return to the Privileged Exec mode. <pre>awplus(config)# exit</pre>
9	Enter the WRITE command to save your changes. <pre>awplus# write Building configuration ... [OK]</pre>
10	Go to “Configuring the Master Switch - Part II,” next.

Configuring the Master Switch - Part II

In Part II you add the member switches to the configuration of the master switch and designate their Gigabit ports of the trunk. This is referred to as provisioning the master switch. The procedure assumes you are continuing directly from the previous procedure.

Table 24. Configuring the Master Switch to Use Gigabit Ports as the Stack Trunk - Part II

Step	Description and Command
Steps 1 to 2 add the member switches as provisioned switches to the master switch.	
1	<p>Enter the CONFIGURE TERMINAL command to move to the Global Configuration mode.</p> <pre>awplus# configure terminal Enter configuration commands, one per line. End with CNTL/Z. awplus(config)#</pre>
2	<p>Enter the SWITCH PROVISION command to add up to three member switches as provisioned switches to the configuration of the master switch. (A stack with a trunk of Gigabit ports can have up to four switches total.) Assign each unit a unique ID number in the range of 2 to 4. These examples add two 28-port switches and one 52-port switch as provisioned member switches on the master switch, with the IDs 2 to 4:</p> <pre>awplus(config)# switch 2 provision x930-28 awplus(config)# switch 3 provision x930-28 awplus(config)# switch 4 provision x930-52</pre>
Steps 3 and 4 designate the Gigabit ports that will be the trunk ports on the member switches.	
3	<p>Enter the port interface modes of the Gigabit ports on the provisioned member switches to be the stack trunk. The trunk can have up to eight ports per switch. If you filled out the Stack Worksheet, refer there for the ports. This example assumes the member switches will use Gigabit ports 1 to 8 as the stack trunk:</p> <pre>awplus(config)# interface port2.0.1-2.0.8,port3.0.1-3.0.8,port4.0.1-4.0.8 awplus(config-if)#</pre>
4	<p>Enter the STACKPORT command to designate the selected Gigabit ports as the stack trunk:</p> <pre>awplus(config-if)# stackport % Save the config and restart the system for this change to take effect.</pre>
The remaining steps save your changes and reboot the master switch.	
5	<p>Enter the EXIT command twice to return to the Privileged Exec mode.</p> <pre>awplus(config-if)# exit awplus(config)# exit</pre>

Table 24. Configuring the Master Switch to Use Gigabit Ports as the Stack Trunk - Part II

Step	Description and Command
6	Enter the WRITE command to save your changes. awplus# write Building configuration ... [OK]
7	Restart the switch with the REBOOT command. awplus# reboot reboot system? (y/n):
8	Type “Y” for yes.
9	Wait one minute for the switch to start the AlliedWare Plus software.
10	Go to “Verifying the Master Switch” on page 202.

Verifying the Master Switch

To confirm the configuration of the master switch, perform the following steps:

1. Start a new local management session on the master switch. Refer to “Starting a Local Management Session” on page 135.
2. Move to the Privileged Exec mode with the ENABLE command.

```
awplus> enable
awplus#
```

3. Enter the SHOW STACK command. Figure 97 is an example of a master switch with three provisioned member switches:

```
awplus# show stack
Virtual Chassis Stacking summary information
ID Pending ID MAC address Priority Status Role
1 - nnnn.nnnn.nnnn 1 Ready Active Master
2 - - - - - Provisioned
3 - - - - - Provisioned
4 - - - - - Provisioned
Operational Status Standalone unit
Stack MAC address nnnn.nnnn.nnnn
```

Figure 97. SHOW STACK Command on the Master Switch

4. Check the display for the following:
 - ❑ Switch ID 1 is the master switch.
 - ❑ The other ID entries are the provisioned member switches. There should be one entry for each member switch that will be in the stack. If the table does not include these fields, perform the SWITCH PROVISION command in “Configuring the Master Switch - Part II” on page 201.
 - ❑ The master switch should have the priority 1 if you performed the STACK PRIORITY command in “Configuring the Master Switch - Part I” on page 199.
5. Enter the SHOW RUNNING-CONFIG INTERFACE command to view the port configurations on the master switch and provisioned member switches. Confirm that the correct Gigabit ports have the STACKPORT command, designating them as the stack trunk:

```

awplus# show running-config interface
interface port1.0.1-1.0.23
  switchport
  switchport mode access

stack enable front-panel-ports
!
interface port1.0.1-1.0.8  Trunk ports on the
  stackport                master switch
!
interface port1.0.27-1.0.28
  switchport
  switchport mode access
!
interface port2.0.1-2.0.23
  switchport
  switchport mode access
!
interface port2.0.1-2.0.8  Trunk ports on a
  stackport                provisioned member
                          switch
!
interface port2.0.27-2.0.28
  switchport
  switchport mode access
.
.

```

Figure 98. SHOW RUNNING-CONFIG INTERFACE Command on the Master Switch

6. Go to “What to Do Next,” next.

What to Do Next After configuring the master switch, do the following:

1. Power off the switch. For AC power supplies, disconnect the AC power cords from the AC power sources. For DC power supplies, turn off the ON/OFF switch on the power supplies or power off the DC power circuits.
2. Configure the member switches. Refer to “Configuring the Member Switches” on page 205.
3. After configuring the master switch and all member switches, cable the trunk Gigabit ports on the switches. Refer to “Cabling Copper Ports” on page 142 or “Installing SFP or SFP+ Transceivers” on page 144.
4. Power on the switches and verify the stack. Refer to Chapter 16, “Powering On and Verifying the Stack” on page 213.
5. Cable the networking ports. Refer to Chapter 11, “Cabling the Networking Ports” on page 141.

Configuring the Member Switches

This section contains the procedures for configuring the member switches of the stack by assigning them ID numbers and designating Gigabit ports as the stack trunk: Here are the procedures:

- ❑ “General Steps for the Member Switches” on page 205
- ❑ “Configuring Member Switches - Part I” on page 206
- ❑ “Configuring Member Switches - Part II” on page 207
- ❑ “Verifying Member Switches” on page 209
- ❑ “What to Do Next for Member Switches” on page 211

You have to perform the procedures on each member switch individually, before connecting the trunk Gigabit ports. The procedures should be performed in the order presented here.

Note

The procedures require resetting member switches. Some network traffic will be lost if the ports are connected to an active network.

General Steps for the Member Switches

Configuring the member switches has two parts. Part I has these main steps:

1. Start a local management session on the switch.
2. Assign an ID number in the range of 2 to 4 to the member switch with the SWITCH RENUMBER command in the Global Configuration mode.
3. Save your changes with the WRITE command in the Privilege Exec mode.
4. Restart the switch with the REBOOT command.

Part II has these main steps:

1. Start a new local management session with the switch.
2. Designate Gigabit front panel ports to be the trunk ports with the STACK ENABLE FRONT-PANEL-PORTS command in the Global Configuration mode. You have to perform this command before designating the actual Gigabit ports of the trunk.
3. Designate up to eight Gigabit ports to be the stack trunk with the STACKPORT command in the port interface modes.

4. Save your changes with the WRITE command in the Privilege Exec mode.
5. Restart the switch with the REBOOT command.
6. Start a new local management session.
7. Verify your changes with the SHOW STACK and SHOW RUNNING-CONFIG INTERFACE commands.

Configuring Member Switches - Part I

Perform Part I in Table 25 to configure a member switch.

Table 25. Configuring Member Switches - Part I

Step	Description and Command
1	Power on a member switch and start a local management session. Refer to “Starting a Local Management Session” on page 135.
2	Enter the ENABLE and CONFIGURE TERMINAL commands to move to the Global Configuration mode: <pre>awplus> enable awplus# configure terminal</pre> Enter configuration commands, one per line. End with CNTL/Z. <pre>awplus(config)#</pre>
Step 3 sets the member switch’s ID number.	
3	Set the ID number of the member switch with the STACK RENUMBER command. Each switch must have a unique ID number. The default value is 1. The range is 1 to 4. If you are using the worksheet on “Stack Worksheet” on page 178, refer there for the ID numbers. This example changes the switch’s ID number from the default value 1 to the new value 2. <pre>awplus(config)# stack 1 renumber 2 % warning: the new ID will not become effective until the stack-member reboots. % warning: the boot configuration may now be invalid.</pre>
The remaining steps reboot the unit. (You do not have to update the configuration file with the WRITE command after changing a switch’s ID number.)	
4	Enter the EXIT command to return to the Privileged Exec mode. <pre>awplus(config)# exit</pre>

Table 25. Configuring Member Switches - Part I (Continued)

Step	Description and Command
5	Restart the switch with the REBOOT command. awplus# reboot reboot system? (y/n): awplus#
6	Type "Y" for yes.
7	Wait one minute for the switch to start the AlliedWare Plus software.
8	Check the ID LED on the front panel. Do one of the following: - If the ID LED is displaying the switch's new ID number, go to "Configuring Member Switches - Part II," next. - If the ID LED is displaying the wrong number, repeat this procedure.

Configuring Member Switches - Part II

Part II has these actions:

- Designate the trunk type to be Gigabit front panel ports with the STACK ENABLE FRONT-PANEL-PORTS command in the Global Configuration mode.
- Designate the Gigabit ports of the trunk with the STACKPORT command in the port interface modes.
- Reboot the switch.

Perform the procedure in Table 26.

Table 26. Configuring Member Switches - Part II

Step	Description and Command
1	Start a new local management session on the member switch. Refer to "Starting a Local Management Session" on page 135.
2	Enter the ENABLE and CONFIGURE TERMINAL commands to move to the Global Configuration mode. awplus> enable awplus# configure terminal Enter configuration commands, one per line. End with CNTL/Z. awplus(config)#

Table 26. Configuring Member Switches - Part II (Continued)

Step	Description and Command
Step 3 identifies the trunk type to be Gigabit ports.	
3	Enter the STACK ENABLE FRONT-PANEL-PORTS command in the Global Configuration mode to indicate that the trunk will be Gigabit ports. You have to perform this command before designating the Gigabit ports: <pre>awplus(config)# stack enable front-panel-ports</pre>
Steps 4 and 5 designate the Gigabit ports of the trunk on the member switch.	
4	Enter the port Interface modes of the Gigabit ports that are to be the trunk on the member switch. This example assumes the member switch has the ID 2 and the trunk will have ports 1 to 8. Remember to change the switch ID number in the PORT parameter as you configure each member switch: <pre>awplus(config)# interface port2.0.1-2.0.8 awplus(config-if)#</pre>
5	Designate the ports as the stack trunk with the STACKPORT command. <pre>awplus(config-if)# stackport % Save the config and restart the system for this change to take effect.</pre>
The remaining steps save your changes and reboot the switch.	
6	Enter the EXIT command twice to return to the Privilege Exec mode. <pre>awplus(config-if)# exit awplus(config)# exit awplus#</pre>
7	Save your changes with the WRITE command. <pre>awplus# write Building configuration ... [OK]</pre>
8	Reboot the switch. <pre>awplus# reboot reboot system? (y/n):</pre>
9	Type "Y" for yes.
10	Wait one minute for the switch to start the AlliedWare Plus software.
11	Go to "Verifying Member Switches," next.

Verifying Member Switches

Perform this procedure to verify the configuration of a member switch.

1. Start a new local management session on the switch. Refer to “Starting a Local Management Session” on page 135.
2. Move to the Privileged Exec mode with the ENABLE command.

```
awplus> enable
awplus#
```

3. Enter the SHOW STACK command. Figure 97 is an example of a member switch with the ID number 2.:

```
awplus# show stack
Virtual Chassis Stacking summary information
ID Pending ID  MAC address          Priority  Status   Role
1  -             -                -         -        Provisioned
2  -             nnnn.nnnn.nnnn  128      Ready   Active Master
Operational status      Standalone unit
Stack MAC address      nnnn.nnnn.nnnn
```

Figure 99. SHOW STACK Command for a Member Switch

4. Check the display for the following:
 - The values for the ID 1 row should be blank. This default provisioned entry will be used by the master switch when you power on the stack.
 - The member’s Switch ID should be the number you assigned it in Part I.
5. Enter the SHOW RUNNING-CONFIG INTERFACE command to display the port configuration on the member switch. Confirm that the correct Gigabit ports on the member switch have the STACKPORT command, designating them as the trunk: Refer to Figure 100 on page 210 for an example.

```

awplus# show running-config interface
interface port1.0.1-1.0.26
  switchport
  switchport mode access
!
stack enable front-panel-ports
!
interface port1.0.27-1.0.28 1
  stackport
!
interface port2.0.1-2.0.24
  switchport
  switchport mode access
!
interface port2.0.1-2.0.8 2
  stackport
!
interface port2.0.27-2.0.28
  switchport
  switchport mode access
!
awplus#

```

Figure 100. SHOW RUNNING-CONFIG INTERFACE Command for Member Switches

Note the following:

- ❑ 1 - These lines designate the stack ports for the default provisioned switch. You can ignore these lines on member switches.
- ❑ 2 - These lines designate the trunk ports for the member switch you are configuring. The switch ID number in the PORT parameter should match the ID number of the switch and the port numbers should be the Gigabit ports of the trunk. Repeat the procedure if the display does not include these lines.

6. Go to “What to Do Next for Member Switches” on page 211.

What to Do Next for Member Switches

After configuring a member switch, do the following:

1. Power off the member switch.
2. Repeat these procedures to configure all member switches, assigning each one a unique ID number and identifying the Gigabit ports of the trunk.
3. If you have not already configured the master switch, perform “Configuring the Master Switch” on page 198.
4. Power off the master and all member switches.
5. Cable the Gigabit ports of the trunk on the master and member switches. For instructions, refer to the following sections:
 - ❑ “Cabling Copper Ports” on page 142.
 - ❑ For trunks of SFP ports on AT-x930-28GSTX Switches, refer to “Installing SFP or SFP+ Transceivers” on page 144.
 - ❑ For cabling examples, refer to “Trunks of Copper 10/100/1000Mbps Ports” on page 167 or “Trunks of SFP Ports on AT-x930-28GSTX Switches” on page 169.
6. Perform “Powering On the Switches Sequentially” on page 215 or “Powering On the Switches Simultaneously” on page 217.
7. Perform “Verifying the Stack and Assigning Priority Numbers” on page 219 to confirm that the switches formed the stack.
8. Cable the networking ports, as explained in Chapter 11, “Cabling the Networking Ports” on page 141.

Chapter 16

Powering On and Verifying the Stack

This chapter explains how to power on the stack for the first time, verify the formation of the stack, and assign priority numbers. The chapter contains the following procedures:

- ❑ “Introduction” on page 214
- ❑ “Powering On the Switches Sequentially” on page 215
- ❑ “Powering On the Switches Simultaneously” on page 217
- ❑ “Verifying the Stack and Assigning Priority Numbers” on page 219

Introduction

This chapter contains the following procedures:

- ❑ “Powering On the Switches Sequentially” on page 215
- ❑ “Powering On the Switches Simultaneously” on page 217
- ❑ “Verifying the Stack and Assigning Priority Numbers” on page 219

This chapter assumes the following:

- ❑ You designated the ports of the stack trunk on the switches with the procedures in the previous chapters in the section.
- ❑ All other parameter settings are at their default settings.
- ❑ You cabled the trunk ports.

Powering On the Switches Sequentially

This procedure explains how to control the assignment of the ID numbers of the switches by powering on the units one at a time during the first power-on sequence. The first switch is assigned ID number 1, the next unit ID number 2, and so on. This procedure is useful when the switches are installed in the same equipment rack. You can number them in sequence, such as from top to bottom, to make them easier to identify.

In this procedure the first switch powered on becomes the master switch of the stack. If you do not change the priority values of the switches and later reset or power cycle the stack, the switches will select the master based on their MAC addresses. This could result in a different switch becoming the master. However, this does not change their ID numbers, the stack configuration, or the manner in which you manage the stack.

This procedure assumes the following:

- You performed “Viewing the AlliedWare Plus Version Number” on page 140 to confirm that all the switches have the same version of the AlliedWare Plus software.
- You designated the trunk ports by performing the procedure in the appropriate chapter in this section.
- This is the first power-on of the stack.
- All other parameter settings are at their default values.
- The switches are powered off.

You can monitor the power-on sequence by connecting a terminal or PC with a terminal emulator program to the Console port on the switch you power on first. Refer to “Starting a Local Management Session” on page 135 for the terminal settings.

After performing this procedure, go to “Verifying the Stack and Assigning Priority Numbers” on page 219.

Note

Refer to “Power Specifications” on page 235 for the power specifications of the switches.

For background information on switch ID numbers, refer to “Switch ID Numbers” on page 174.



Caution

Do not change switch ID numbers after configuring the parameter settings of the stack. Otherwise, the stack might assign configuration settings to the wrong switches the next time you reboot or power on the stack.

To control the assignment of the switch ID numbers, perform the following procedure:

1. Verify that all switches are powered off.
2. Cable the trunk ports of the stack. Refer to Chapter 11, “Cabling the Networking Ports” on page 141.
3. Power on the switch you want assigned ID number 1:
 - For switches with AC power supplies, connect the AC power cords to the power supplies on the back panels and to AC power sources.
 - For switches with DC AT-PWR250-80 Power Supplies, power on the DC circuits and the On/Off switches on the power supply. (For wiring instructions, refer to Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.)



Warning

Power cord is used as a disconnection device. To de-energize equipment, disconnect the power cord. ⚡ E3

4. Wait one minute for the switch to start the AlliedWare Plus software.

The switch displays the number 1 on its ID LED and is now the master switch.
5. Power on the switch to be assigned ID number 2.
6. Wait two minutes for the new switch to join the stack as a member.

The new switch automatically boots up twice before joining the stack as a new member, once with the default ID number 1 and again with the next available number, which is 2.
7. If there is a third switch, power it on and wait two minutes for it to join the stack as a member with the ID number 3.
8. Repeat step 6 until all the switches are powered on. The stack is now operational. The switches retain their ID numbers even when reset or powered off.
9. Go to “Verifying the Stack and Assigning Priority Numbers” on page 219.

Powering On the Switches Simultaneously

This procedure powers on the switches simultaneously so that they assign their ID numbers automatically by performing the following steps:

1. They start the AlliedWare Plus software.
2. They compare their switch priority numbers over the stack trunk.
3. Since they all have the same priority number, the default 128, they compare MAC addresses.
4. The switch with the lowest MAC address becomes the master switch.
5. The master switch assigns itself the ID number 1.
6. The master switch assigns ID numbers in the range of 2 to 8 to the other switches.
7. The other switches reboot the AlliedWare Plus software with their new ID numbers.

For background information on switch ID numbers, refer to “Switch ID Numbers” on page 174.



Caution

Do not change switch ID numbers after configuring the parameter settings of the stack. Otherwise, the stack might assign configuration settings to the wrong switches the next time you reboot or power on the stack.

This procedure assumes the following:

- You performed “Viewing the AlliedWare Plus Version Number” on page 140 to confirm that all the switches have the same version of the AlliedWare Plus software.
- You designated the trunk ports by performing the procedure in the appropriate chapter in this section.
- This is the first power-on of the stack.
- All other parameter settings are at their default values.
- The switches are powered off.

You can monitor the power-on sequence by connecting a terminal or PC with a terminal emulator program to the Console port on any of the switches. For the terminal settings, refer to “Starting a Local Management Session” on page 135.

Note

Refer to “Power Specifications” on page 235 for the power specifications of the switches.

After performing this procedure, go to “Verifying the Stack and Assigning Priority Numbers” on page 219.

To have the switches assign the ID numbers automatically, perform the following procedure:

1. Verify that all switches are powered off.
2. Cable the trunk ports of the stack. Refer to Chapter 11, “Cabling the Networking Ports” on page 141.
3. Power on all the switches of the stack simultaneously:
 - ❑ For switches with AC power supplies, connect the AC power cords to the power supplies on the back panels and to AC power sources.
 - ❑ For switches with DC AT-PWR250-80 Power Supplies, power on the DC circuits and the On/Off switches on the power supply. (For wiring instructions, refer to Chapter 8, “Wiring the DC Connector on the AT-PWR250-80 Power Supply” on page 117.)

**Warning**

Power cord is used as a disconnection device. To de-energize equipment, disconnect the power cord. *GE* E3

4. Wait three minutes for the switches to select the master switch and for the master switch to assign ID numbers to the member switches.

The stack is now operational. The switches retain their ID numbers even when reset or powered off.

5. Go to “Verifying the Stack and Assigning Priority Numbers” on page 219.

Verifying the Stack and Assigning Priority Numbers

To verify the stack and assign priority numbers, perform the following procedure:

1. Start a local management session on any switch in the stack. For instructions, refer to “Starting a Local Management Session” on page 135.
2. From the User Exec mode, enter the SHOW STACK command:

```
awplus> show stack
```

An example of a stack of four switches is shown in Figure 101.

```
awplus> show stack
Virtual Chassis Stacking summary information
ID      Pending ID  MAC address      Priority  Status  Role
1       -            nnnn:nnnn:nnnn  128      Ready   Active Master
2       -            nnnn:nnnn:nnnn  128      Ready   Backup Member
3       -            nnnn:nnnn:nnnn  128      Ready   Backup Member
4       -            nnnn:nnnn:nnnn  128      Ready   Backup Member
Operational Status      Normal operations
Stack MAC address       nnnn:nnnn:nnnn
awplus(config)#
```

Figure 101. SHOW STACK Command

Review the following items:

- ❑ The command should list all the switches in the stack. If the list is incomplete, refer to Chapter 17, “Troubleshooting” on page 223.
- ❑ The Operational Status field should display “Normal operations.” This indicates that the trunk ports are cabled in the loop topology and all trunk ports are operating normally.
- ❑ If the Operational Status field displays “Not all stack ports are up,” the trunk ports are in the chain topology or trunk ports are unable to establish links with their local or remote counterparts. Refer to Chapter 17, “Troubleshooting” on page 223.
- ❑ The switches will have the priority value 128, the default value, if you powered on the stack with the procedures in this chapter.
- ❑ Depending on how you power on or reboot the stack in the future, the switches might select a different master. That does not change their ID numbers, their configurations, or the manner in which you manage the stack.

3. Do one of the following:
 - ❑ To set the switch priority values, continue with the next step. Setting priority numbers is optional. Assigning switches unique priority numbers can protect the configuration of the stack when adding new switches, as well as establish the order in which member switches become the master switch, if necessary.
 - ❑ Otherwise, go to Chapter 11, “Cabling the Networking Ports” on page 141, to complete the installation.
4. Enter the `ENABLE` and `CONFIGURE TERMINAL` commands to move to the Privileged Exec mode: Refer to Figure 102.

```
awplus> enable
awplus# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
awplus(config)#
```

Figure 102. Moving to the Global Configuration Mode with the `ENABLE` and `CONFIGURE TERMINAL` Commands

5. Enter the `STACK PRIORITY` command to set the priority numbers. The command has this format:

```
stack ID_number priority priority
```

You can change the priority number of only one switch at a time. The parameters are as follows:

- ❑ The `ID_NUMBER` parameter is the ID number of the switch whose priority value you are setting. The range is 1 to 8. Switches display their ID numbers on the ID LEDs on the front panels.
- ❑ The `PRIORITY` parameter is the new priority value for the switch. The range is 0 to 255. The default is 128. The lower the number, the higher the priority.

The stack will be easier to manage if the priority number of a switch is the same as its switch ID. Here are two examples. To assign the priority value 1 to the switch with the ID number 1, you enter:

```
awplus(config)# stack 1 priority 1
```

To assign the priority value to 2 to the switch with the ID number 2, you enter:

```
awplus(config)# stack 2 priority 2
```

6. After setting the priority values, enter the `EXIT` command to return to the Privileged Exec mode. Refer to Figure 103 on page 221.

```
awplus(config)# exit
awplus#
```

Figure 103. Returning to the Privileged Exec Mode

7. Enter the WRITE command to save your changes in the configuration file of the stack. The switch displays the confirmation prompt in Figure 104.

```
awplus# write
Building configuration ...
[OK]
awplus#
```

Figure 104. Saving the Priority Values with the WRITE Command

8. Enter the SHOW STACK command to verify the new priority numbers. Figure 105 is an example of a stack of four switches:

```
awplus# show stack
Virtual Chassis Stacking summary information
ID      Pending ID      MAC address      Priority  Status  Role
1       -                 nnnn:nnnn:nnnn  1        Ready   Active Master
2       -                 nnnn:nnnn:nnnn  2        Ready   Backup Member
3       -                 nnnn:nnnn:nnnn  3        Ready   Backup Member
4       -                 nnnn:nnnn:nnnn  4        Ready   Backup Member
Operational Status          Normal operations
Stack MAC address           nnnn:nnnn:nnnn
```

Figure 105. SHOW STACK Command with New Switch Priority Numbers

9. To end the management session, enter the EXIT command.
10. Go to Chapter 11, “Cabling the Networking Ports” on page 141, to complete the installation.

Chapter 17

Troubleshooting

This chapter contains suggestions on how to troubleshoot the switch if a problem occurs.

Note

For further assistance, please contact Allied Telesis Technical Support at www.alliedtelesis.com/support.

Problem 1: All of the port LEDs and the Switch ID LED are off, and the fans are not operating.

Solutions: The unit is not receiving power. Try the following:

- Verify that the power cord is securely connected to the power source and to the AC connector on the back panel of the switch.
- Verify that the power outlet has power by connecting another device to it.
- Try connecting the unit to another power source.
- Try a different power cord.
- Verify that the voltage from the power source is within the required levels for your region.

If the switch has the DC AT-PWR250-80 Power Supply, try the following:

- Verify that the DC circuit is powered on.
- Verify that the On/Off switch on the power supply is in the On position.
- Verify that the positive, negative, and ground wires are properly connected to the AT-PWR250-80 Power Supply and DC circuit. Refer to Chapter 8, "Wiring the DC Connector on the AT-PWR250-80 Power Supply" on page 117.
- Try connecting the switch to another DC circuit.
- Try replacing the positive, negative, and ground wires.

Problem 2: All of the port LEDs are off even though the ports are connected to active network devices.

Solution: The switch may be operating in the low power mode. To toggle on the LEDs, press the eco-friendly button on the front panel of the switch. You may also toggle the LEDs off and on with the ECOFRIENDLY LED and NO ECOFRIENDLY LED commands in the command line interface.

Problem 3: A copper port on the switch is connected to a network device but the port's LINK/ACT LED is off.

Solutions: The port is unable to establish a link to a network device. Try the following:

- ❑ Verify that the port is connected to the correct copper cable. This is to eliminate the possibility that the port is connected to the wrong network device.
- ❑ Verify that the network device connected to the port is powered on and is operating properly.
- ❑ Try connecting another network device to the port with a different cable. If the port is able to establish a link, then the problem is with the cable or the other network device.
- ❑ Verify that the copper cable does not exceed 100 meters (328 feet).
- ❑ Verify that you are using the appropriate category of copper cable. The cable types are listed in "Cable Requirements" on page 37 for the 10/100/1000Base-T ports.
- ❑ Verify that the companion SFP port of the copper port is empty. This applies only to the AT-x930-28GSTX Switch. For example, if copper port 2R is connected to an active network device but cannot establish a connection to it, verify that SFP port 2 is empty. For more information, refer to "SFP Ports" on page 43.

Note

A 1000Base connection may require five to ten seconds to establish a link.

Problem 4: The LINK/ACT LED for an SFP or SFP+ transceiver is off.

Solutions: The fiber optic port on the transceiver is unable to establish a link to a network device. Try the following:

- ❑ Verify that the remote network device connected to the fiber optic port is operating properly.
- ❑ Check that the transceiver is fully inserted in the port.
- ❑ Verify that the fiber optic cable is securely connected to the port on the SFP or SFP+ module and to the port on the remote device.

- ❑ Verify that the operating specifications of the fiber optic ports on the transceiver and remote network device are compatible.
- ❑ Verify that the correct type of fiber optic cabling is being used.
- ❑ Verify that the port is connected to the correct fiber optic cable. This is to eliminate the possibility that the port is connected to the wrong remote network device.
- ❑ Try connecting another network device to the fiber optic port using a different cable. If the port is able to establish a link, then the problem is with the cable or with the other network device.
- ❑ Use the switch's management software to verify that the port is enabled.
- ❑ If the remote network device is a managed device, use its management firmware to determine whether its port is enabled.
- ❑ Test the attenuation of both directions on the fiber optic cable with a fiber optic tester to determine whether the optical signal is too weak (sensitivity) or too strong (maximum input power)

Problem 5: The SHOW STACK command is not displaying all the switches in the stack.

Solutions: One or more switches cannot join the stack. If the switches are stacked with the S1 and S2 ports, try the following:

- ❑ Verify that you are using only Allied Telesis SFP+ transceivers or AT-SPI0TW direct connect cables. The switches might not form a stack with other types of transceivers or cables.
- ❑ Verify that the SFP+ transceivers or direct connect cables are fully inserted into the S1 and S2 ports.
- ❑ Verify that the fiber optic cables are securely connected to the ports on the SFP+ transceivers.
- ❑ Verify that the transceivers or cables are properly cabled. The cables must crossover to different ports on the switches. Port S1 on one switch must crossover to port S2 on another switch.
- ❑ Verify that VCStack is activated on all the switches by examining the switch ID LEDs. VCStack is disabled on a switch if the LED is displaying the number "0". VCStack is enabled if the LED is displaying a number from 1 to 8. Refer to Figure 13 on page 55 and Figure 14 on page 55. If necessary, use the STACK ENABLE command to enable VCStack. Refer to "STACK ENABLE Command" on page 182.

If the switches are stacked with AT-StackQS Cards and AT-QSFICU Cables, try the following:

- ❑ Verify that the AT-StackQS Cards are fully seated in the slots of the back panels of the switches.

- ❑ Verify that the AT-QSFPICU Cables are fully seated in the ports in the AT-StackQS Cards.
- ❑ Verify that the AT-QSFPICU Cables are from Allied Telesis. The trunk will not work with cables from another network equipment manufacturer.
- ❑ Verify that the ports on the AT-StackQS Cards are properly cabled. The cables must crossover to different ports on the cards. Port 1 on the AT-StackQS Card in one switch must crossover to port 2 on the card in another switch.
- ❑ Verify that VCStack is activated on all the switches by examining the switch ID LEDs. VCStack is disabled on a switch if the LED is displaying the number “0”. VCStack is enabled if the LED is displaying a number from 1 to 8. Refer to Figure 13 on page 55 and Figure 14 on page 55. If necessary, use the STACK ENABLE command to enable VCStack. Refer to “STACK ENABLE Command” on page 182.

If the switches are stacked with AT-StackQS Cards and AT-QSFPSR or AT-QSFPLR4 Transceivers, try the following:

- ❑ Verify that the AT-StackQS Cards are fully seated in the slots of the back panels of the switches.
- ❑ Verify that the transceivers are fully seated in the ports in the AT-StackQS Cards.
- ❑ Verify that the transceivers are from Allied Telesis. The trunk will not work with transceivers from another network equipment manufacturer.
- ❑ For AT-QSFPSR Transceivers, verify that you are using 12-strand OM4 fiber optic cable and that the cables are not longer than 150 m (492 ft).
- ❑ For AT-QSFPLR4 Transceivers, verify that you are using SMF cables and that the cables are in range of 2 m (6.6 ft) to 10 km (6.2 mi).
- ❑ For AT-QSFPSR Transceivers, verify that the switches have version 5.4.5-1 or later of the x930 operating system. For instructions, refer to “Viewing the AlliedWare Plus Version Number” on page 140.
- ❑ For AT-QSFPLR4 Transceivers, verify that the switches have version 5.4.5-2 or later of the x930 operating system. For instructions, refer to “Viewing the AlliedWare Plus Version Number” on page 140.
- ❑ Verify that the ports on the AT-StackQS Cards are properly cabled. The cables must crossover to different ports on the cards. Port 1 on the AT-StackQS Card in one switch must crossover to port 2 on the card in another switch. For background information, refer to “Trunks of AT-StackQS Cards” on page 164.

- ❑ Verify that VCStack is activated on all the switches by examining the switch ID LEDs. VCStack is disabled on a switch if the LED is displaying the number “0”. VCStack is enabled if the LED is displaying a number from 1 to 8. Refer to Figure 13 on page 55 and Figure 14 on page 55. If necessary, use the STACK ENABLE command to enable VCStack. Refer to “STACK ENABLE Command” on page 182.

Problem 6: Network performance between a copper port on the switch and a network device is slow.

Solution: There might be a duplex mode mismatch between the port and the network device. This can occur when a copper port using Auto-Negotiation is connected to a remote device that has a fixed speed of 10 or 100 Mbps and a fixed duplex mode of full duplex. If this is the cause of the problem, adjust the duplex mode of the port on the network device or switch so that both ports are using the same duplex mode. You can use either the LEDs or management software on the switch to determine the duplex mode settings of the ports. The LEDs are described in Table 7 on page 49.

Problem 7: The switch functions intermittently.

Solutions: Check the system hardware status through the management software:

- ❑ Use the SHOW SYSTEM ENVIRONMENT command in the Privileged Exec mode to verify that the input voltage from the power source to the switch is stable and within the approved operating range. The unit will shut down if the input voltage fluctuates above or below the approved operating range.
- ❑ Use the SHOW SYSTEM ENVIRONMENT command in the Privileged Exec mode to verify that the fan is operating correctly.
- ❑ Verify that the location of the switch allows for adequate airflow. The unit will shut down if it is in danger of overheating.

Problem 8: The Switch ID LED on the front of the switch is flashing the letter “F.”

Solutions: One or more of the following problems has occurred:

- ❑ A cooling fan has failed.
- ❑ The internal temperature of the switch has exceeded the normal operating range and the switch may shut down.

Contact your Allied Telesis sales representative for assistance.

Problem 9: A port on the AT-x930-28GPX or AT-x930-52GPX Switch is not providing power to a PoE device.

Solutions: Try the following:

- ❑ Review the PD's documentation to confirm that the device supports Mode A of the IEEE 802.3at standard. Mode A is one of two modes that define the connector pins that deliver the power from the port in the switch to the powered device. In Mode A, the power is carried on pins 1, 2, 3, and 6 on the RJ-45 port, the same pins that carry the network traffic. The second mode, Mode B, defines pins 4, 5, 7, and 8 as the power carriers. The AT-x930-28GPX and AT-x930-52GPX Switches do not support Mode B. Most powered devices are designed to accept power by either mode, but some legacy devices may only support one mode. This can be verified by reviewing the device's documentation or data sheet. Legacy devices that only support Mode B will not work with the switches.
- ❑ Check that the device's power requirements do not exceed 30 W. This can be verified by reviewing the device's documentation or data sheet.
- ❑ Verify that you are using the appropriate category of copper cable by referring to "Cable Requirements" on page 37.
- ❑ Use the management software on the switch to determine whether PoE is enabled on the port. The default setting for PoE is enabled.
- ❑ Use the management software on the switch to determine whether the PoE power setting for the port has been reduced to a value below the power requirements of the device.
- ❑ Try connecting the device to a different port on the switch.

Problem 10: One or more ports on the optional AT-StackQS or AT-x9EM/XT Card cannot establish connections to network devices or do not forward traffic.

Solutions: Try the following:

- ❑ Verify that the switch has version 5.4.5-2 or later of the x930 operating system. Earlier versions of the management software do not support the card. For instructions, refer to "Viewing the AlliedWare Plus Version Number" on page 140.
- ❑ Verify that you are using UTP or STP Cat. 5e for 1Gbps links and UTP or STP Cat. 6e cable for 10Gbps links.
- ❑ Verify that the port is connected to the correct copper cable. This is to eliminate the possibility that the port is connected to the wrong network device.
- ❑ Verify that the network device connected to the port is powered on and is operating properly.

- ❑ Try connecting another network device to the port with a different cable. If the port is able to establish a link, then the problem is with the cable or the other network device.
- ❑ Verify that the copper cable does not exceed 100 meters (328 feet).

Appendix A

Technical Specifications

This appendix contains the following sections:

- "Physical Specifications" on page 232
- "Environmental Specifications" on page 234
- "Power Specifications" on page 235
- "Certifications" on page 237
- "RJ-45 Copper Port Pinouts" on page 238
- "RJ-45 Style Serial Console Port Pinouts" on page 240

Physical Specifications

Dimensions (H x W x D)

Table 27 lists the dimensions of the switches and power supplies.

Table 27. Product Dimensions

AT-x930-28GTX	4.4 cm x 44.0 cm x 42.0 cm (1.7 in. x 17.3 in. x 16.5 in.)
AT-x930-28GPX	4.4 cm x 44.0 cm x 42.0 cm (1.7 in. x 17.3 in. x 16.5 in.)
AT-x930-28GSTX	4.4 cm x 44.0 cm x 42.0 cm (1.7 in. x 17.3 in. x 16.5 in.)
AT-x930-52GTX	4.4 cm x 44.0 cm x 42.0 cm (1.7 in. x 17.3 in. x 16.5 in.)
AT-x930-52GPX	4.4 cm x 44.0 cm x 42.0 cm (1.7 in. x 17.3 in. x 16.5 in.)
AT-PWR150	4.2 cm x 14.8 cm x 25.2 cm (1.7 in. x 5.8 in. x 9.8 in.)
AT-PWR250	4.2 cm x 14.8 cm x 25.2 cm (1.7 in. x 5.8 in. x 9.8 in.)
AT-PWR250-80	4.2 cm x 14.8 cm x 25.2 cm (1.7 in. x 5.8 in. x 9.8 in.)
AT-PWR800	4.2 cm x 14.8 cm x 25.2 cm (1.7 in. x 5.8 in. x 9.8 in.)
AT-PWR800 V2	4.2 cm x 14.8 cm x 25.2 cm (1.7 in. x 5.8 in. x 9.8 in.)
AT-PWR1200	4.2 cm x 14.8 cm x 30.7 cm (1.7 in. x 5.8 in. x 12.1 in.)
AT-PWR1200 V2	4.2 cm x 14.8 cm x 30.7 cm (1.7 in. x 5.8 in. x 12.1 in.)

Weights

Table 28 lists the weights of the switches and power supplies.

Table 28. Product Weights

AT-x930-28GTX	5.1 kg (11.2 lb.)
AT-x930-28GPX	5.1 kg (11.2 lb.)
AT-x930-28GSTX	5.1 kg (11.2 lb.)
AT-x930-52GTX	5.1 kg (11.2 lb.)
AT-x930-52GPX	5.2 kg (11.5 lb.)
AT-PWR150	1.3 kg (2.8 lb)
AT-PWR250	1.5 kg (3.3 lb.)
AT-PWR250-80	1.5 kg (3.3 lb.)
AT-PWR800	1.8 kg (4.0 lb.)
AT-PWR1200	2.2 kg (4.9 lb.)

The weights of the switches do not include the power supplies.

Ventilation

Table 29 lists the ventilation requirements.

Table 29. Ventilation Requirements

Recommended Minimum Ventilation on All Sides	10 cm (4.0 in)
--	----------------

Environmental Specifications

Table 30 lists the environmental specifications of the switches.

Table 30. Environmental Specifications

Operating Temperature	0° C to 45° C (32° F to 113° F)
Storage Temperature	-25° C to 70° C (-13° F to 158° F)
Operating Humidity	5% to 90% noncondensing
Storage Humidity	5% to 95% noncondensing
Maximum Operating Altitude	3,000 m (9,842 ft)
Maximum Nonoperating Altitude	4,000 m (13,100 ft)

Power Specifications

This section contains the maximum power consumption values and input voltages.

Maximum Power Consumption

Table 31, Table 32, and Table 33 list the maximum power consumptions of the switches with the different power supplies.

Table 31. Maximum Power Consumption with the AT-PWR150, AT-PWR250 or AT-PWR250-80 Power Supply

AT-x930-28GTX	83.6 watts
AT-x930-28GPX	83.8 watts
AT-x930-28GSTX	96.5 watts
AT-x930-52GTX	94.6 watts
AT-x930-52GPX	96.8 watts

Table 32. Maximum Power Consumption with the AT-PWR800 or AT-PWR800 V2 Power Supply

AT-x930-28GTX	83.8 watts
AT-x930-28GPX	564.2 watts
AT-x930-28GSTX	96.6 watts
AT-x930-52GTX	96.6 watts
AT-x930-52GPX	577.0 watts

Table 33. Maximum Power Consumption with the AT-PWR1200 or AT-PWR1200 V2 Power Supply

AT-x930-28GTX	86.8 watts
AT-x930-28GPX	808.4 watts
AT-x930-28GSTX	97.9 watts
AT-x930-52GTX	98.5 watts
AT-x930-52GPX	880.0 watts

Input Voltages

Table 34 lists the input voltages for the seven power supplies.

Table 34. Input Voltages

AT-PWR150	100-240 VAC~, 2.0A maximum, 50/60 Hz
AT-PWR250	100-240 VAC~, 5.0A maximum, 50/60 Hz
AT-PWR250-80	40-60 VDC, 6.0A maximum
AT-PWR800	100-240 VAC~, 10.0A maximum, 50/60 Hz
AT-PWR800 V2	100-240 VAC~, 10.0-4A maximum, 50/60 Hz
AT-PWR1200	100-240 VAC~, 15.0-7A maximum, 50/60 Hz
AT-PWR1200 V2	100-240 VAC~, 15.0-7A maximum, 50/60 Hz

Certifications

Table 35 lists the product certificates.

Table 35. Product Certifications

EMI (Emissions)	FCC Class A, EN55022 Class A, EN61000-3-2, EN61000-3-3, VCCI Class A, CISPR Class A, C-TICK, CE
EMC (Immunity)	EN55024
Electrical and Laser Safety	EN60950-1 (TUV), UL 60950-1 (CULUS), EN60825
Compliance Marks	CE, CULUS, TUV, C-Tick

RJ-45 Copper Port Pinouts

Figure 106 illustrates the pin layout of the RJ-45 connectors and ports on the front panel of the switch.

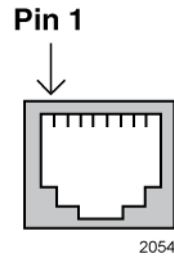


Figure 106. RJ-45 Socket Pin Layout (Front View)

Table 36 lists the pin signals for 10 and 100 Mbps.

Table 36. Pin Signals for 10 and 100 Mbps

Pin	MDI Signal	MDI-X Signal
1	TX+	RX+
2	TX-	RX-
3	RX+	TX+
4	Not used	Not used
5	Not used	Not used
6	RX-	TX-
7	Not used	Not used
8	Not used	Not used

Table 37 lists the pin signals when a port operating at 1000 Mbps.

Table 37. Pin Signals for 1000 Mbps

Pinout	Pair
1	Pair 1 +
2	Pair 1 -
3	Pair 2 +
4	Pair 3 +
5	Pair 3 -
6	Pair 2 -
7	Pair 4 +
8	Pair 4 -

RJ-45 Style Serial Console Port Pinouts

Table 38 lists the pin signals of the RJ-45 style serial Console port.

Table 38. RJ-45 Style Serial Console Port Pin Signals

Pin	Signal
1	Looped to pin 8.
2	Looped to pin 7.
3	Transmit Data
4	Ground
5	Ground
6	Receive Data
7	Looped to pin 2.
8	Looped to pin 1.